

A-185HDV, A-240FDV, A-320F, A-400F

# User Manual: Replacement Remote Control for Altius Smart LED LCD HDTV TV

Model Compatibility: A-185HDV, A-240FDV, A-320F, A-400F

## 1. INTRODUCTION

---

This document provides instructions for the replacement remote control compatible with various Altius Smart LED LCD HDTV TV models, including A-185HDV, A-240FDV, A-320F, and A-400F. This remote is designed to provide essential control functions for your television. Please note that as a dedicated replacement, some advanced or specific functions of your original remote may not be supported.

The remote control is made of durable ABS/Plastic material, designed for comfortable handling and stable performance. It operates on standard batteries and requires no complex programming or setup.

## 2. PRODUCT OVERVIEW

---



Figure 2.1: Front view of the remote control, displaying the power button, navigation keys, volume and channel controls, and numeric keypad.



Figure 2.2: Angled view of the remote control, providing a perspective on its compact size and button layout.

### 3. SETUP AND BATTERY INSTALLATION

This replacement remote control requires no programming or complex setup. Simply install the batteries, and it will be ready for use with your compatible Altius TV.

1. **Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards or press the latch to open it.
2. **Insert Batteries:** Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close the Compartment:** Slide the battery cover back into place until it clicks securely.

Your remote control is now ready to operate your Altius TV.

### 4. OPERATING INSTRUCTIONS

The remote control provides standard functions for navigating your television. Refer to the button layout in Figure 2.1 for visual reference.

- **POWER:** Turns the TV on or off.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **MENU:** Accesses the TV's main menu.
- **OK:** Confirms selections within menus.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menu options.
- **EXIT:** Exits the current menu or screen.
- **Numeric Keypad (0-9):** Directly enters channel numbers.
- **SOURCE:** Changes the input source (e.g., HDMI 1, AV).
- **SLEEP:** Activates the sleep timer function.
- **DISPLAY:** Shows on-screen information.

For specific functions not listed, please refer to your television's original user manual, as this remote is a replacement and may not replicate all original remote functionalities.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts:** Protect the remote from physical shocks, as internal components can be damaged.

## 6. TROUBLESHOOTING

---

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV.	Check battery polarity and replace with fresh batteries. Ensure a clear line of sight to the TV's IR receiver.
Some functions do not work.	This is a replacement remote; not all original functions are supported.	This is expected behavior for a replacement remote. Verify if the function is critical for basic operation.

Problem	Possible Cause	Solution
Remote works intermittently.	Low batteries. Interference.	Replace batteries. Remove any potential sources of interference (e.g., strong lights, other electronic devices).

If the problem persists after trying these solutions, please contact the seller for further assistance.

## 7. SPECIFICATIONS

<b>Brand</b>	Generic
<b>Compatible Devices</b>	Altius A-185HDV, A-240FDV, A-320F, A-400F Smart LED LCD HDTV TV
<b>Material</b>	ABS/Plastic
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Color</b>	Black or White (color may vary)
<b>Special Feature</b>	Digital Display (referring to the TV's display, not the remote itself)
<b>Max Number of Supported Devices</b>	1 (Television)

## 8. WARRANTY AND SUPPORT

This product is a replacement remote control. For any issues or inquiries regarding its functionality or compatibility, please contact the seller directly through the platform where the purchase was made. Please provide your order number and a detailed description of the issue for prompt assistance.

As a replacement item, specific warranty terms may vary. It is recommended to retain your purchase receipt for any potential support claims.