

SakerPlus BF2642

SakerPlus Cordless Leaf Blower BF2642 User Manual

Model: BF2642

1. INTRODUCTION

Thank you for choosing the SakerPlus Cordless Leaf Blower BF2642. This portable dust cleaner is designed for efficient and convenient clearing of leaves, dust, and debris from various surfaces. Featuring a high-speed brushless motor and a 4-speed control system, it offers powerful airflow for both light and heavy-duty tasks. This manual provides essential information for safe operation, proper maintenance, and optimal performance of your device.

2. SAFETY INFORMATION

IMPORTANT NOTICE:

- Although compact in size, the SakerPlus electric leaf blower delivers powerful airflow, which causes noticeable noise at maximum speed.
- Please use appropriate ear protection during operation to ensure comfort and safety.
- Keep hair, loose clothing, and jewelry away from the air intake and outlet during operation.
- Do not operate in wet conditions or near flammable liquids/gases.

3. WHAT'S IN THE BOX

Your SakerPlus Cordless Leaf Blower package includes the following items:

- 1 x SakerPlus Hand Blower
- 2 x Extended Nozzles (one long round, one short flat)
- 2 x 21V 3000mAh Rechargeable Batteries
- 1 x Charger
- 1 x Instruction Manual



Image: All components included in the SakerPlus Cordless Leaf Blower package, including the blower unit, two nozzles, two batteries, and the charger.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your SakerPlus Cordless Leaf Blower:



Image: A detailed diagram highlighting the key parts of the SakerPlus Cordless Leaf Blower, including the air outlet, extension tube, power switch button, gear adjustment button, battery, and controller cooling hole.

- **Air Outlet:** Where the concentrated airflow exits.
- **Extension Tube:** Attachable tube for extended reach and focused airflow.
- **Power Switch Button:** Activates and deactivates the blower.
- **Gear Adjustment Button:** Controls the wind speed settings.
- **Battery:** Provides power to the unit.
- **Controller Cooling Hole:** Ensures optimal operating temperature for internal components.

5. SETUP

5.1. Battery Charging

The SakerPlus leaf blower comes with two 4.0Ah lithium batteries and a dedicated dock-style charger. Ensure batteries are fully charged before first use.

1. Insert the battery into the charging dock.
2. Plug the charger into a standard power outlet.
3. The charging indicator on the battery or charger will show charging status. A full charge typically takes approximately 4 hours.
4. The system includes built-in temperature control protection to prevent overheating during charging.



Image: Close-up of the SakerPlus 4.0Ah 21V MAX Lithium-Ion battery, highlighting its capacity and voltage, along with icons for charging time, rated power, and long-lasting performance.

5.2. Attaching Nozzles

The blower includes two types of nozzles for different applications:

- **Long Round Nozzle:** Ideal for narrow spaces and concentrated airflow.
- **Short Flat Nozzle:** Provides wider airflow for broader areas.

To attach a nozzle, align it with the air outlet and twist until it locks securely into place. To remove, twist in the opposite direction and pull.

6. OPERATION

6.1. Powering On and Speed Control

The SakerPlus blower features an upgraded 4-speed adjustment system:

1. **To Turn On:** Press the power switch button once. The blower will start at the lowest speed (1st gear).
2. **To Adjust Speed:** Press the gear adjustment button repeatedly to cycle through speeds: 1st gear → 2nd gear → 3rd gear → 1st gear.
3. **To Enter 4th Gear (Storm Mode):** Quickly press the power button twice and hold the button on the second press. The motor will run at its maximum speed.
4. **To Turn Off:** Release the power switch button.



Image: Illustration demonstrating the 4-speed wind adjustment feature of the SakerPlus blower, showing how a short press cycles through gears and a double press and hold activates the powerful 4th gear (Storm Mode).

6.2. Usage Scenarios

The SakerPlus blower is versatile for various cleaning tasks:

- **Patio and Garden:** Clear leaves, grass clippings, and light debris.
- **Driveways and Walkways:** Efficiently remove dirt and small stones.
- **Workshop:** Blow away sawdust and other workshop debris.
- **Car Cleaning:** Remove dust from car interiors and dry surfaces after washing.
- **Narrow Spaces:** Use the long round nozzle for hard-to-reach areas.
- **Wider Areas:** Use the short flat nozzle for broader coverage.

MULTI-SCENARIO APPLICATION: EFFORTLESSLY CLEAR VARIOUS CLUTTER

EXTENSION WIND TUBE LONGER REACH, LESS WASTE

Clean dust from elevated/hard-to-reach areas, disperse fallen leaves in courtyards, and clears water puddles



FLAT AIR TUBE FOCUSED FLOW + WIDE COVERAGE

Clean workbenches, dry car gaps, remove snow/debris, and clear grill ashes



LEAF



SNOW



ROAD

- BLOWING OPERATION -

- DUST BLOWING TASK -

- CLEANING WORK -



FIRE



- CAR CLEANING -



- BLOWING KEYBOARD -

- IGNITING JOB -

Image: A collage showing the SakerPlus blower being used in multiple scenarios, including blowing leaves, clearing snow, cleaning driveways, igniting fires, cleaning car interiors, and blowing dust from keyboards, demonstrating its versatility.

6.3. Product Video: SakerPlus Portable Dust Cleaner in Action

Video: An official SakerPlus video demonstrating the portable dust cleaner's capabilities in various cleaning tasks, showcasing its power and ease of use.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your SakerPlus Cordless Leaf Blower:

- **Cleaning:** After each use, wipe down the exterior of the blower with a soft, damp cloth. Ensure the air intake and outlet are free from debris.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight. Do not expose batteries to extreme temperatures.
- **Storage:** When not in use, store the blower in a dry, well-ventilated area, out of reach of children.
- **Inspection:** Periodically check the nozzles and main unit for any signs of damage or wear. Replace damaged parts immediately.

8. TROUBLESHOOTING

If you encounter issues with your SakerPlus Cordless Leaf Blower, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blower does not turn on.	Battery not charged or improperly inserted.	Ensure battery is fully charged and securely inserted.
Reduced airflow.	Air intake/outlet blocked by debris.	Clear any obstructions from the air intake and outlet.
Blower stops unexpectedly.	Battery overheating or low charge.	Allow battery to cool down or recharge.
Excessive noise during operation.	Operating at maximum speed (Storm Mode).	This is normal for high-speed operation. Use ear protection.

If the problem persists after attempting these solutions, please contact SakerPlus customer support for further assistance.

9. SPECIFICATIONS

Feature	Specification
Brand	SakerPlus
Model Name	BF2642
Power Source	Battery Powered
Voltage	21 Volts (DC)
Battery Capacity	4.0Ah (3000mAh) Lithium-Ion
Motor Speed	Up to 300,000 RPM
Wind Speed	Up to 52 m/s (116 MPH)
Air Volume	590 m³/h (360 CFM)
Item Weight	2.3 lbs (1000g)
Product Dimensions	10.5"L x 4.5"W x 3.25"H (without nozzle)
Special Features	Adjustable Speed (4-speed), Compact Design, Portable, Turbo Mode

10. WARRANTY AND SUPPORT

SakerPlus is committed to providing high-quality products. For warranty information, technical support, or any questions regarding your Cordless Leaf Blower BF2642, please refer to the warranty card included in your package or visit the official SakerPlus website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question