

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Lexon](#) /

> [Lexon Flip Classic x Pantone Digital ON/OFF Alarm Clock User Manual](#)

Lexon LR157PT-R

Lexon Flip Classic x Pantone Digital ON/OFF Alarm Clock User Manual

Model: LR157PT-R

INTRODUCTION

The Lexon Flip Classic x Pantone is a digital alarm clock designed for ease of use and portability. Its unique ON/OFF function, vibrant Pantone colors, and clear LED display make it a functional and stylish accessory for any room or travel. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your device.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the alarm clock and all accessories from the packaging. Verify that all components are present and undamaged.

2. Charging the Device

The Lexon Flip Classic is equipped with an integrated rechargeable battery via USB-C. For optimal performance, fully charge the device before first use.

- Connect the provided USB-C cable to the charging port on the back of the clock.
- Connect the other end of the USB-C cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).
- The charging indicator on the display will show the charging status. A full charge provides up to 6 months of battery life.

AN INTUITIVE INTERFACE

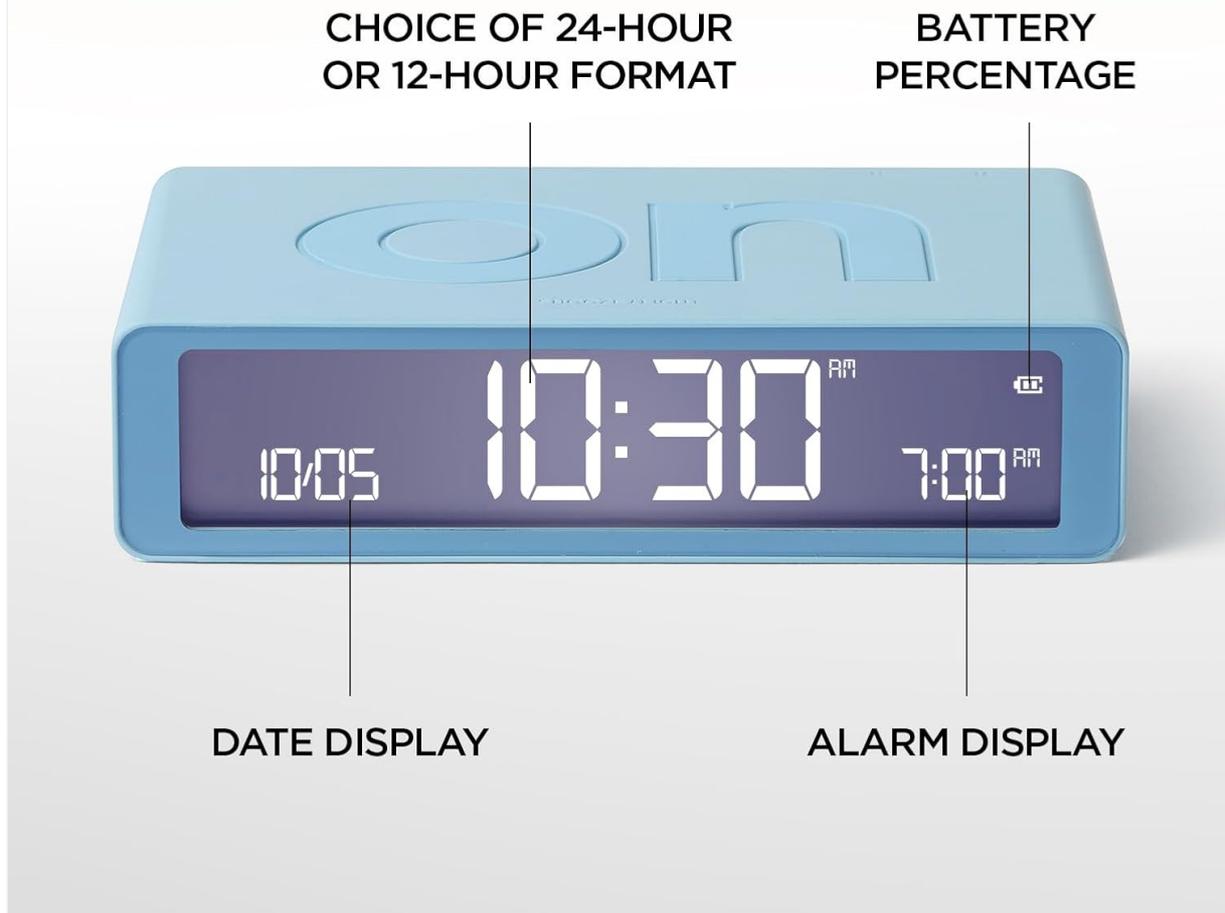


Image: The back of the Lexon Flip Classic alarm clock, highlighting the USB-C charging port and control buttons.

3. Initial Power On

Press and hold the power button (usually marked with a circle and a vertical line) located on the back of the device to turn it on.

OPERATING INSTRUCTIONS

1. ON/OFF Alarm Function

The Lexon Flip Classic features an intuitive ON/OFF alarm function. Simply flip the clock to activate or deactivate the alarm.

- To **activate** the alarm: Place the clock with the side marked 'ON' facing upwards. The alarm icon will appear on the display.
- To **deactivate** the alarm: Flip the clock so the side marked 'OFF' is facing upwards. The alarm icon will disappear from the display.

EASY TO SWITCH OFF



Image: The Lexon Flip Classic alarm clock demonstrating its 'ON' and 'OFF' sides for alarm activation and deactivation.

2. Setting Time and Alarm

Use the control buttons located on the back of the clock to adjust time and alarm settings.

- Press the 'SET' button to enter time setting mode. The hour digits will flash. Use the up/down arrow buttons to adjust the hour.
- Press 'SET' again to move to minute adjustment, then use arrow buttons.
- Continue pressing 'SET' to cycle through setting the 12/24-hour format, date, and alarm time.
- Once the alarm time is flashing, use the up/down arrow buttons to set your desired alarm time.
- Press 'SET' one last time to exit the setting mode.

DISCREET CONTROL BUTTONS AT THE BACK



**POWER
ON/OFF**

**RECHARGEABLE
VIA USB-C**

**TIME, ALARM &
SCREEN SETTINGS**

Image: The back panel of the Lexon Flip Classic, detailing the power button, USB-C port, 'SET' button, and up/down arrow buttons for configuration.

3. Snooze and Display Light

When the alarm sounds, gently tap the top surface of the clock to activate the snooze function. The alarm will pause and sound again after a short interval (typically 5 minutes).

To temporarily illuminate the display at night without activating the alarm, simply tap the top surface of the clock.

A TIMELESS RETRO DESIGN



Image: The Lexon Flip Classic alarm clock with its display showing time and alarm, indicating the touch-sensitive area for snooze and backlight activation.

4. Adjustable Brightness

The LED display offers adjustable brightness levels to suit your preference and environment.

- While in normal time display mode, press the 'SET' button briefly to cycle through the available brightness levels (e.g., Low, Medium, High).

5. Travel Lock Mode

To prevent accidental alarm activation or battery drain during travel, engage the travel lock mode.

- To activate: Press and hold the power button for a few seconds until a lock icon appears on the display, or the display indicates 'LOCK'.
- To deactivate: Press and hold the power button again until the lock icon disappears.

Video: Official Lexon video demonstrating the features of the Flip Classic alarm clock, including ON/OFF function, interface, charging, brightness adjustment, and travel lock mode.

MAINTENANCE

1. Cleaning

To maintain the appearance and functionality of your alarm clock:

- Wipe the exterior with a soft, dry, lint-free cloth.
- Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

2. Battery Care

To prolong the life of the internal rechargeable battery:

- Avoid exposing the device to extreme temperatures (hot or cold).
- If storing the device for an extended period, ensure it has a partial charge (around 50%) rather than being fully charged or completely depleted.

TROUBLESHOOTING

If you encounter issues with your Lexon Flip Classic, refer to the following common problems and solutions:

Problem	Solution
Alarm not sounding	Ensure the 'ON' side of the clock is facing upwards. Verify that the alarm time is correctly set. Check if the travel lock mode is active.
Display not lighting up	Check the battery level and recharge if necessary. Tap the top surface of the clock to activate the backlight. If the issue persists, try resetting the device by holding the power button for 10 seconds.
Clock not charging	Ensure the USB-C cable is securely connected to both the clock and the power source. Try using a different USB-C cable or power adapter.
Incorrect time/date	Enter time setting mode by pressing the 'SET' button and adjust the time and date as described in the 'Setting Time and Alarm' section.

SPECIFICATIONS

Feature	Detail
Brand	Lexon
Model	LR157PT-R
Color	Red
Product Dimensions	10.4 x 3.81 x 2.6 cm
Item Weight	125 grams
Display Type	Digital LED
Power Source	Battery powered (Rechargeable via USB-C)

Feature	Detail
Special Features	Pantone Exclusive Colors, Compact & Rechargeable, Clear LED Display, Intuitive ON/OFF System

LIGHT AND COMPACT

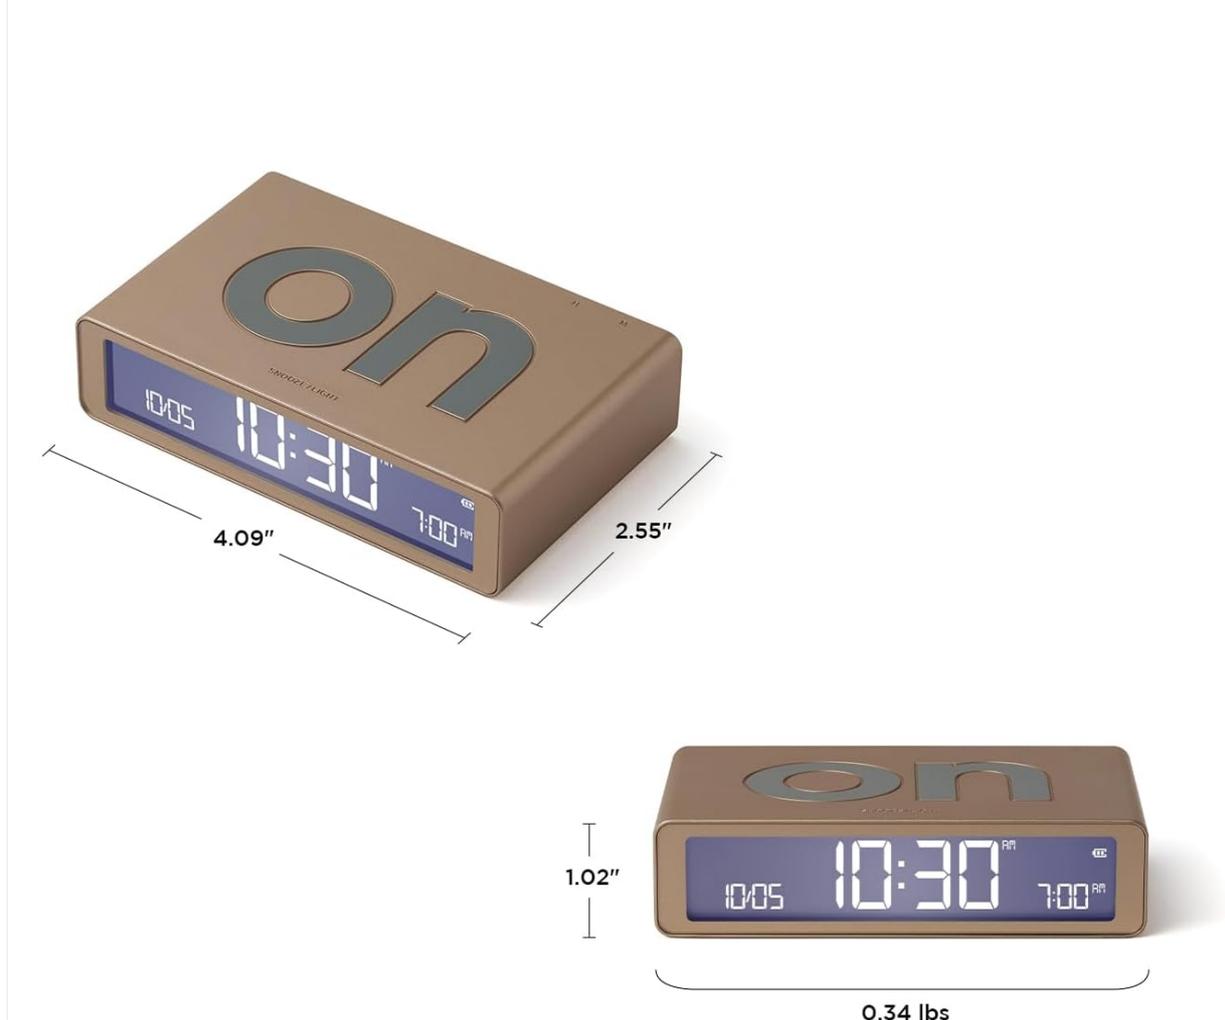


Image: The Lexon Flip Classic alarm clock shown with its key dimensions (length, width, height) indicated.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Lexon website or contact your authorized retailer. Please retain your proof of purchase for any warranty claims.