



Manuals.plus /

- › Lexon /
- › Lexon Flip Classic Luminous Alarm Clock (Model LR157PT-S) User Manual

Lexon LR157PT-S

Lexon Flip Classic Luminous Alarm Clock User Manual

Model: LR157PT-S

INTRODUCTION

The Lexon Flip Classic Luminous Alarm Clock is an iconic, reversible alarm clock designed for intuitive use. This updated version features a rechargeable battery and a redesigned user interface, making it a practical addition to your bedside table. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your device.

DISCOVER THE LEXON® × PANTONE™ EDITION



Image: Lexon Flip Classic Luminous Alarm Clock, showcasing its design and display.

SETUP

- 1. Initial Charging:** Before first use, fully charge the alarm clock using the included USB-C cable. Connect the USB-C cable to the charging port on the back of the device and plug the other end into a compatible USB power adapter (not included). The battery indicator on the display will show charging status. A full charge provides up to 6 months of battery life.
- 2. Power On/Off:** Locate the power button on the back of the device. Press and hold to turn the alarm clock on or off.
- 3. Setting Time and Alarm:** Use the 'SET' button and the arrow buttons (up/down) on the back of the device to adjust the time, date, and alarm settings. Follow the on-screen prompts to cycle through hours, minutes, 12/24-hour format, date, and alarm time.
- 4. Screen Settings:** The arrow buttons can also be used to adjust the screen's light intensity. There are three light intensity settings available.

AN INTUITIVE INTERFACE

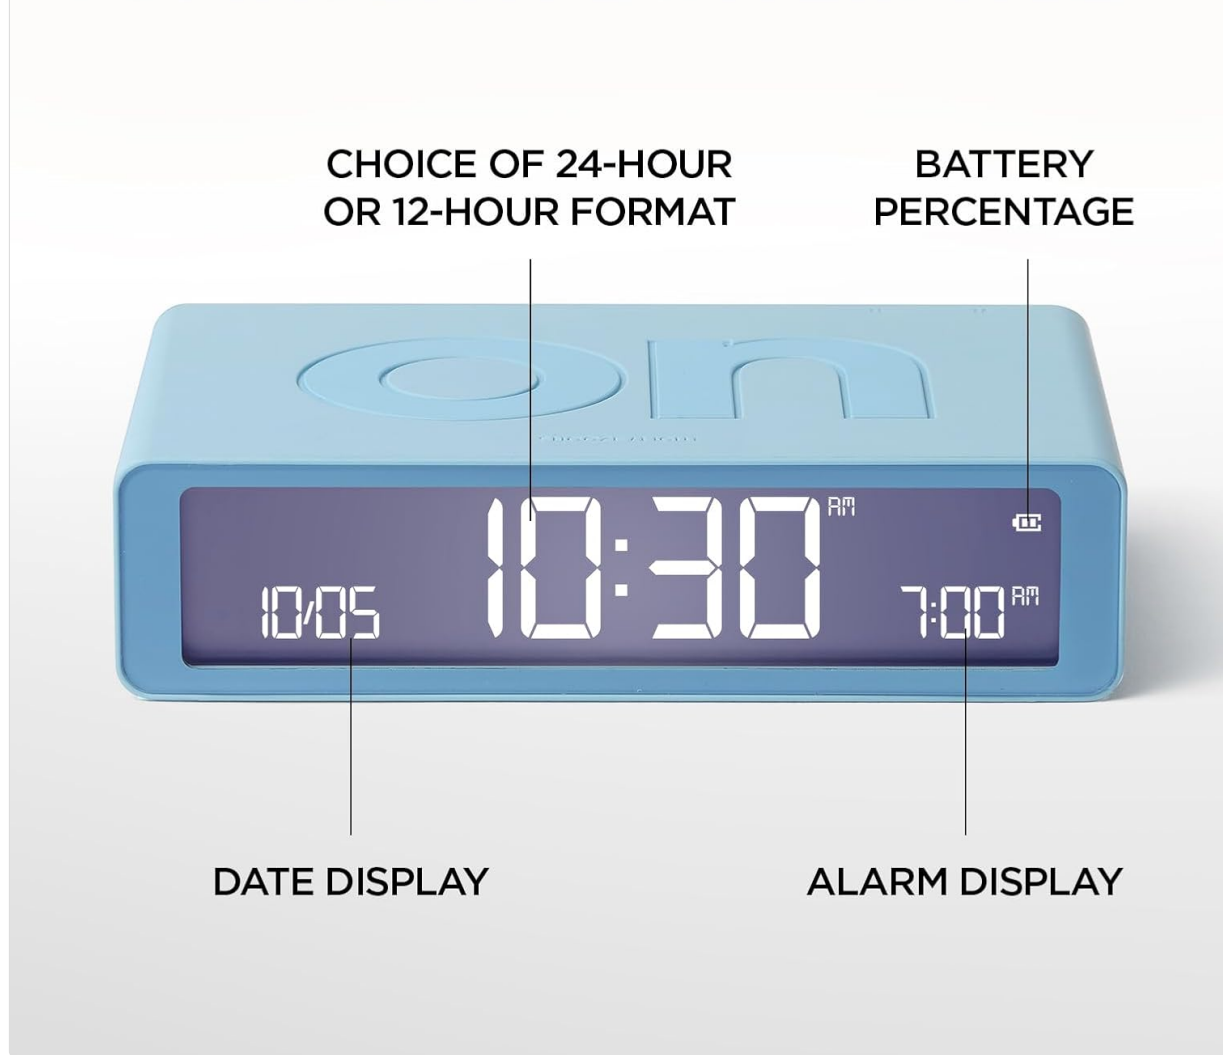


Image: Discreet control buttons located on the back of the alarm clock for power, charging, and settings.

OPERATING INSTRUCTIONS

Alarm Activation and Deactivation

- To activate the alarm, simply flip the clock so the side marked 'ON' is facing upwards. The alarm icon will appear on the display.
- To deactivate the alarm, flip the clock so the side marked 'OFF' is facing upwards. The alarm icon will disappear from the display.

EASY TO SWITCH OFF



Image: Visual guide demonstrating the simple flip mechanism to switch the alarm on or off.

Snooze Function and Display Light

- When the alarm sounds, gently touch the top surface of the clock to activate the snooze function. The alarm will pause and sound again after a short interval.
- To illuminate the LCD display in the dark, touch the top surface of the clock. The display will light up at the set intensity.

A TIMELESS RETRO DESIGN



Image: The alarm clock's display and features, including the touch sensor for snooze and light.

Understanding the Display

The LCD display provides clear information at a glance:

- **Current Time:** Shown prominently in the center.
- **Date Display:** Month and day are displayed.
- **Alarm Display:** The set alarm time is visible.
- **Battery Percentage:** An icon indicates the remaining battery life.
- **12/24-Hour Format:** You can select your preferred time format during setup.

DISCREET CONTROL BUTTONS AT THE BACK



**POWER
ON/OFF**

**RECHARGEABLE
VIA USB-C**

**TIME, ALARM &
SCREEN SETTINGS**

Image: An intuitive interface showing the date, current time, alarm time, and battery percentage.

MAINTENANCE

- **Cleaning:** Wipe the surface of the alarm clock with a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish and electronic components.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Recharge the clock when the battery indicator shows low power.
- **Storage:** If storing the alarm clock for an extended period, ensure it is fully charged and then turn it off. Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Clock not turning on:** Ensure the device is charged. Connect it to a USB-C power source and allow it to charge for at least 30 minutes before attempting to power it on again.
- **Alarm not sounding:** Verify that the clock is flipped to the 'ON' side. Check that the alarm time is correctly set.
- **Display not visible/dim:** Touch the top surface to activate the backlight. If still dim, adjust the light intensity settings using the buttons on the back. Ensure the battery is sufficiently charged.
- **Buttons unresponsive:** Try restarting the device by holding the power button until it turns off, then turn it back on. If the issue persists, ensure the device is charged.

SPECIFICATIONS

Brand	Lexon
Model Number	LR157PT-S
Product Dimensions	4.09"W x 1.02"H
Item Weight	125 Grams
Special Features	Digital, Indoor, Multifaced, Luminous, Reversible, Touch Sensor
Power Source	Rechargeable via USB-C
Battery Type	1 Lithium Polymer battery (included)
Included Components	USB-C cable, user manual

LIGHT AND COMPACT

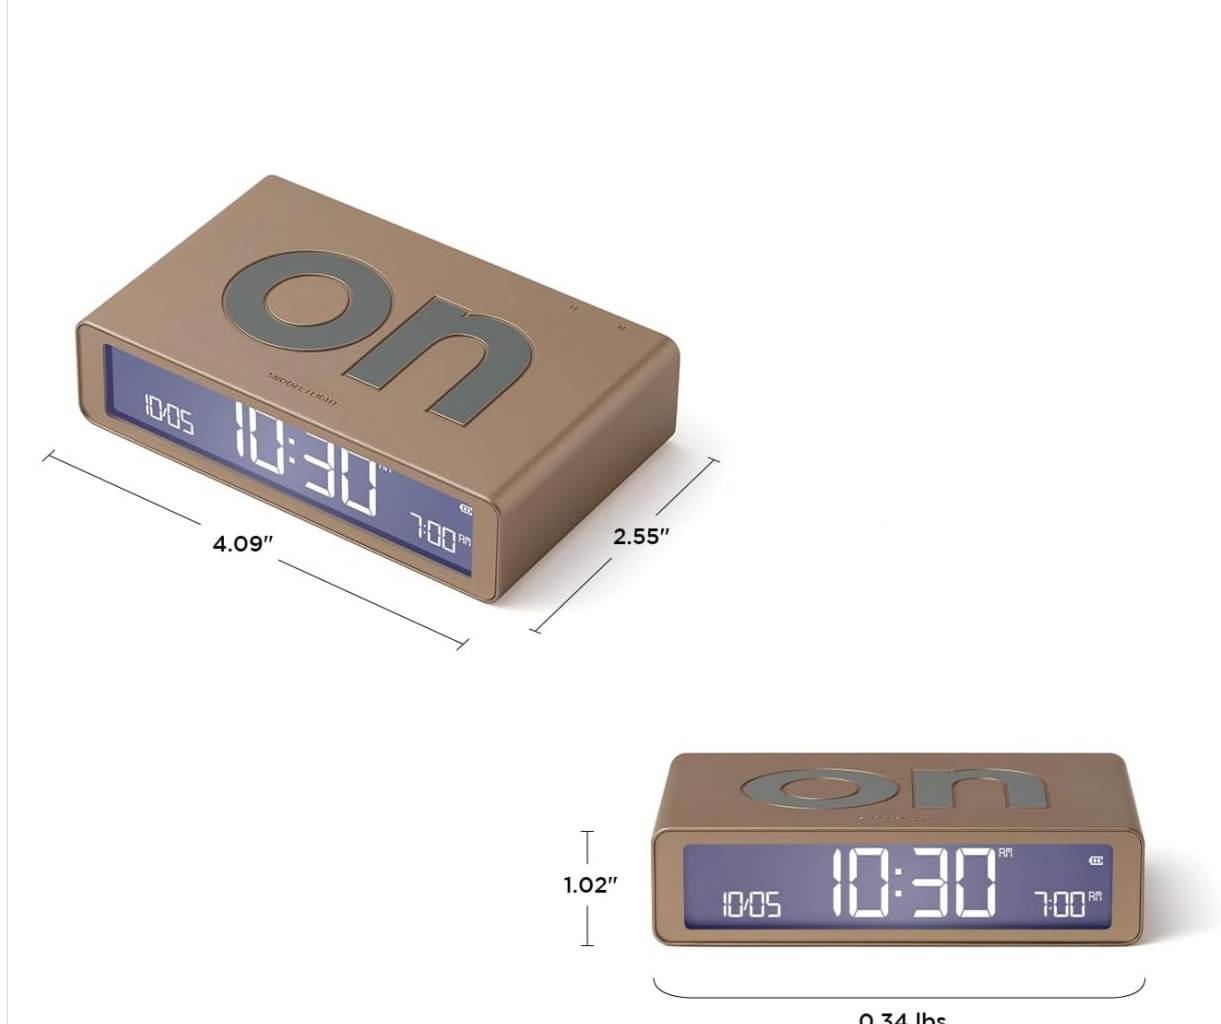


Image: The compact dimensions and light weight of the Lexon Flip Classic alarm clock.

WARRANTY AND SUPPORT

This Lexon product is covered by a manufacturer's warranty. For detailed warranty information, please refer to the documentation included with your purchase or visit the official Lexon website.

For further assistance, support, or to explore other Lexon products, please visit the Lexon Store on Amazon.

