

- › [ECHTPower](#) /
- › [ECHTPower Wireless Controller User Manual for PS4, PS4 Slim, PS4 Pro, and PC](#)

ECHTPower Wireless Controller

ECHTPower Wireless Controller User Manual

For PS4, PS4 Slim, PS4 Pro, and PC

1. INTRODUCTION

Thank you for choosing the ECHTPower Wireless Controller. This manual provides detailed instructions on how to set up, operate, and maintain your controller, ensuring optimal performance and longevity. This controller is compatible with PS4, PS4 Slim, PS4 Pro consoles, and PC.



Image: The ECHTPower Wireless Controller featuring a unique lightning design and illuminated buttons.

2. PRODUCT FEATURES

- **Dual Vibration Feedback:** Enhances immersion with responsive haptic feedback.
- **RGB Lighting:** Customizable lighting with 9 colors and 7 LED modes.
- **Long-lasting Battery:** Built-in 1000 mAh rechargeable battery for extended playtime.
- **6-Axis Sensor:** Integrated gyroscope and accelerometer for precise motion control.
- **Multi-touch Touchpad:** Provides additional input options for compatible games.
- **3.5mm Headphone Jack:** Allows connection of a headset for audio and communication.
- **Share Button:** Dedicated button for capturing screenshots and sharing content.

3. SETUP AND CONNECTION

3.1 Charging the Controller

Before first use, fully charge the controller. Connect the controller to a PS4 console or a USB power adapter (not included) using the provided USB cable. The indicator light will show charging status.

- **Battery Capacity:** 1000 mAh Lithium Battery
- **Charging Time:** Approximately 2-4 hours
- **Playing Time:** Up to 10 hours on a full charge



Image: Visual representation of the controller's 1000mAh battery, charging duration, and operational playtime.

3.2 Connecting to PS4/PS4 Slim/PS4 Pro

1. **Initial Pairing (Wired):** Connect the controller to your PS4 console using the included USB cable. Press the PS button on the controller. The controller will pair with the console and the light bar will glow.
2. **Wireless Connection:** Once paired, you can disconnect the USB cable. The controller will remain connected wirelessly. To reconnect wirelessly in the future, simply press the PS button.

3.3 Connecting to PC

1. **Wired Connection:** Connect the controller to your PC using the USB cable. The PC should automatically detect and install the necessary drivers.
2. **Bluetooth Connection:**
 - Ensure your PC has Bluetooth enabled.
 - On the controller, press and hold the **Share** button and the **PS** button simultaneously until the light

bar begins to flash rapidly.

- On your PC, go to Bluetooth settings and search for new devices. Select the controller (often appears as "Wireless Controller" or similar) to pair.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The controller features standard buttons including D-pad, action buttons (Triangle, Circle, Cross, Square), L1/R1/L2/R2 triggers, two analog sticks, PS button, Share button, and Options button. Refer to your game's instructions for specific button assignments.

4.2 Touchpad Functionality

The multi-touch touchpad can be used for navigation, gestures, and additional input in compatible games. Its functionality varies depending on the game.

4.3 Headphone Jack

Plug any standard 3.5mm headset into the headphone jack located at the bottom of the controller for in-game audio and voice chat. Adjust audio settings via your console or PC system menu.



Image: A user immersed in gaming, demonstrating the use of the 3.5mm headphone jack on the controller.

4.4 Screenshot and Sharing

Press the **Share** button to access sharing options, including taking screenshots or recording gameplay clips.

4.5 RGB Lighting Modes

The controller features customizable RGB lighting with 9 colors and 7 LED modes. Specific instructions for changing these modes are typically found in the quick start guide or by pressing a combination of buttons (e.g., PS button + R3 or L3, or a dedicated button if present). Experiment to find your preferred setting.

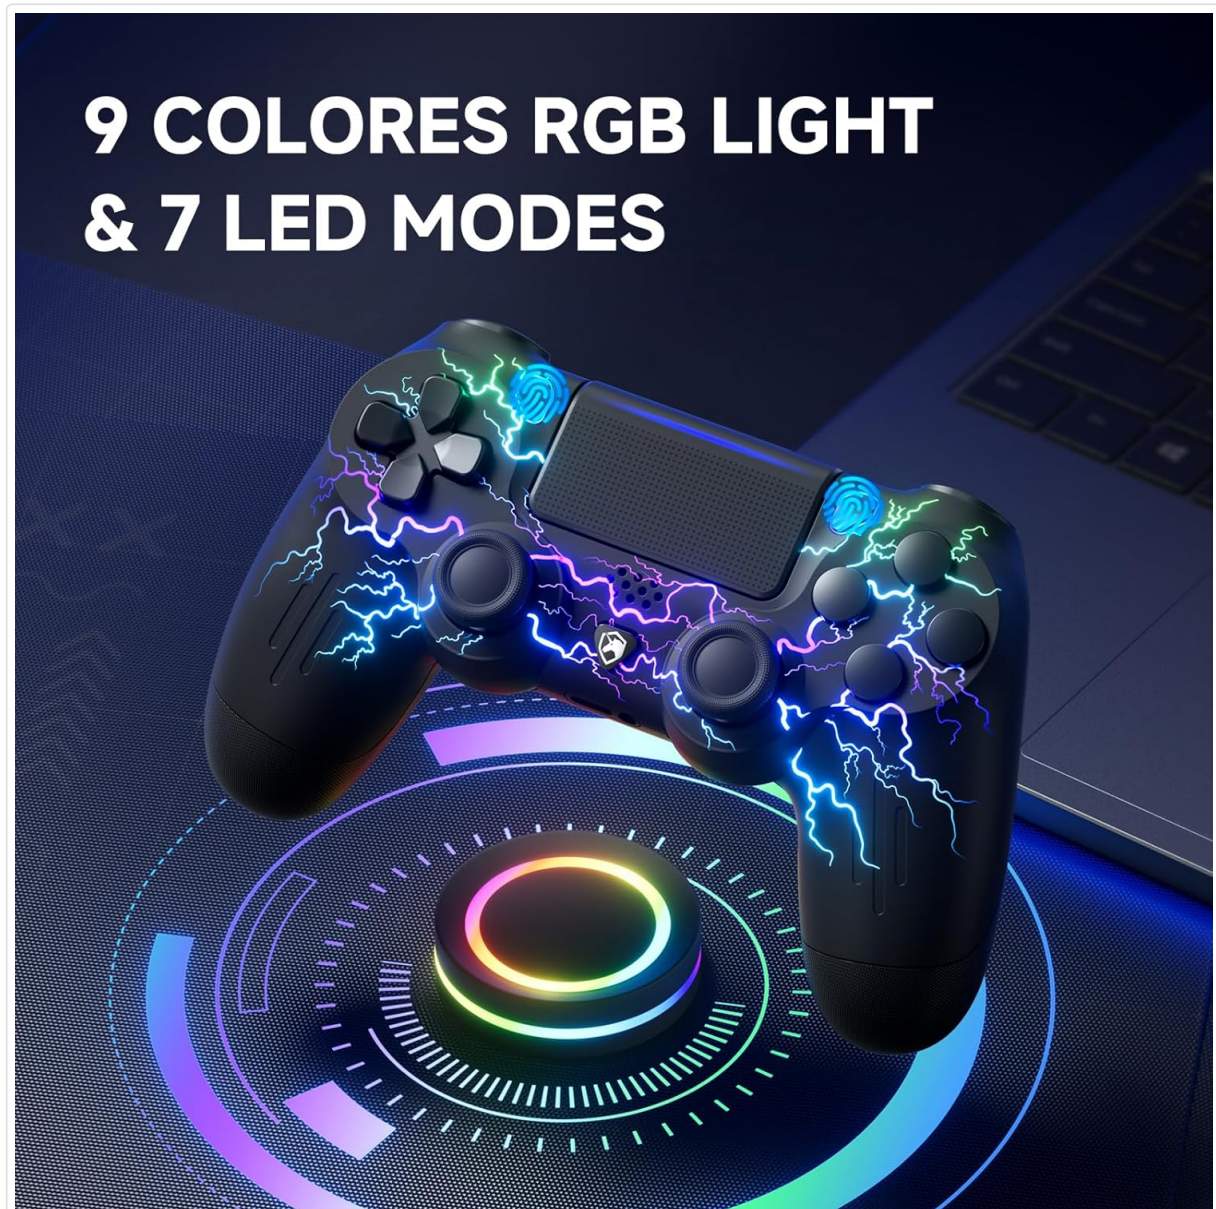 


Image: The controller showcasing its vibrant RGB lighting capabilities with multiple color and mode options.

4.6 Dual Vibration Feedback

The controller's dual vibration motors provide tactile feedback during gameplay, enhancing realism for impacts, explosions, and other in-game events.

VIBRATION FEEDBACK

Provides you with a more realistic gaming experience



Image: The controller illustrating its dual vibration feedback feature, designed for a more realistic gaming experience.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the controller regularly, even if not in use for extended periods.

6. TROUBLESHOOTING

- **Controller not connecting:** Ensure the controller is charged. For initial pairing, use the USB cable. For wireless connection, ensure Bluetooth is enabled on your device and the controller is in pairing mode.
- **Buttons unresponsive:** Check for physical obstructions. If the device has not been used for a long time or if abnormal operation occurs, you can reset the controller settings. A small reset button is usually located on the back of the controller (often a pinhole). Use a thin object (like a paperclip) to press it.
- **Battery not charging:** Try a different USB cable or charging port. Ensure the connection is secure.

- **Input delay:** Ensure the controller is within range of the console/PC. Reduce interference from other wireless devices.

7. SPECIFICATIONS

- **Model:** Wireless Controller
- **Compatibility:** PS4, PS4 Slim, PS4 Pro, PC
- **Connectivity:** Wireless (Bluetooth), Wired (USB)
- **Battery:** 1000 mAh Lithium-ion
- **Charging Time:** 2-4 hours
- **Playing Time:** Up to 10 hours
- **Features:** Dual Vibration, RGB Lighting (9 colors, 7 modes), 6-Axis Gyro, Multi-touch Touchpad, 3.5mm Headphone Jack, Share Button

8. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent damage to the product or injury to yourself.

- Contains small parts. Keep out of reach of children under 3 years.
- Do not use the product near ignition sources.
- Do not disassemble or modify the product yourself.
- Do not place the product in a humid or dusty environment.
- Do not use the product for purposes other than those for which it was originally designed.
- Dispose of the product and its parts according to local regulations and not with household waste.




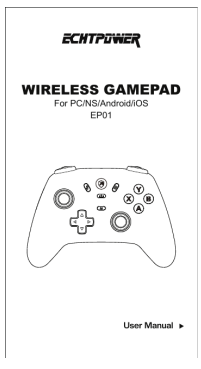 
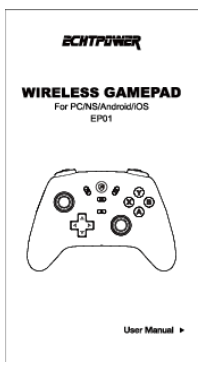 

Image: Original safety instructions provided with the product.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your ECHTPower Wireless Controller, please contact our customer service team.

Customer Support Email: service@echtpower.com

Please provide your product model and purchase details when contacting support for faster assistance.

 The image shows the cover of the Echtpower NS Gamepad ES01 User Manual. At the top, the 'ECHTPOWER' logo is displayed. Below it, the text 'NS GAMEPAD' is prominently featured, followed by 'FOR NS/LITE/OLED' and 'ES01'. A line drawing of the gamepad is centered on the page. At the bottom, the text 'User Manual' is followed by a right-pointing arrow.	<p>Echtpower NS Gamepad ES01 User Manual</p> <p>User manual for the Echtpower NS Gamepad ES01, detailing its features, specifications, connection methods, and operation for Nintendo Switch, PC, Android, and iOS devices.</p>
 The image shows the cover of the ECHTPOWER EP01 Wireless Gamepad User Manual. At the top, the 'ECHTPOWER' logo is displayed. Below it, the text 'WIRELESS GAMEPAD' is prominently featured, followed by 'For PC/NS/Android/iOS' and 'EP01'. A line drawing of the gamepad is centered on the page. At the bottom, the text 'User Manual' is followed by a right-pointing arrow.	<p>ECHTPOWER EP01 Wireless Gamepad User Manual</p> <p>Comprehensive user manual for the ECHTPOWER EP01 Wireless Gamepad, covering setup, connection (PC, Switch, Android, iOS), and advanced features. Get the most out of your gaming experience.</p>
	<p>ECHTPower EG12H P-5 Controller Charging Station User Manual</p> <p>Comprehensive user manual for the ECHTPower EG12H dual P-5 controller charging station. Learn about its features, specifications, operating instructions, and important safety precautions for optimal gaming accessory use.</p>
 The image shows the cover of the Echtpower EP01 Wireless Gamepad User Manual. At the top, the 'ECHTPOWER' logo is displayed. Below it, the text 'WIRELESS GAMEPAD' is prominently featured, followed by 'For PC/NS/Android/iOS' and 'EP01'. A line drawing of the gamepad is centered on the page. At the bottom, the text 'User Manual' is followed by a right-pointing arrow.	<p>Echtpower EP01 Wireless Gamepad User Manual</p> <p>Comprehensive user manual for the Echtpower EP01 Wireless Gamepad, detailing setup, compatibility, features, and warnings for PC, Nintendo Switch, Android, and iOS devices.</p>
 The image shows the cover of the ECHTPOWER EP01 Wireless Gamepad User Manual - PC, Switch, Android, iOS. At the top, the 'ECHTPOWER' logo is displayed. Below it, the text 'WIRELESS GAMEPAD' is prominently featured, followed by 'For PC/NS/Android/iOS' and 'EP01'. A line drawing of the gamepad is centered on the page. At the bottom, the text 'User Manual' is followed by a right-pointing arrow.	<p>ECHTPOWER EP01 Wireless Gamepad User Manual - PC, Switch, Android, iOS</p> <p>Comprehensive user manual for the ECHTPOWER EP01 Wireless Gamepad. Learn how to connect and use your gamepad with PC, Nintendo Switch, Android, and iOS devices, including features like Turbo and custom lighting.</p>

ECHTPOWER

WIRELESS GAMEPAD
For PC/NS/Android/iOS
EP05



User Manual »

[Echtpower EP05 Wireless Gamepad User Manual](#)

User manual for the Echtpower EP05 Wireless Gamepad, detailing setup, connection, and features for PC, Nintendo Switch, Android, and iOS devices.