

[Manuals.plus](#) /

› [VOOM](#) /

› VOOM VMSWP-MC4 Rechargeable Cordless Sweeper User Manual

VOOM VMSWP-MC4

VOOM VMSWP-MC4 Rechargeable Cordless Sweeper User Manual

1. INTRODUCTION

Welcome to your new VOOM VMSWP-MC4 Rechargeable Cordless Sweeper. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and retain it for future reference.



Image: The VOOM VMSWP-MC4 Rechargeable Cordless Sweeper retail box, highlighting its key features like 1200 RPM power, 60-minute runtime, and self-cleaning brushroll.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces. This appliance is for indoor use only.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use only the charger supplied by the manufacturer to recharge.
- Store the appliance indoors in a cool, dry area.

3. PACKAGE CONTENTS

Carefully unpack your VOOM VMSWP-MC4 Sweeper and ensure all items are present and in good condition.



Image: A full view of the assembled VOOM VMSWP-MC4 Rechargeable Cordless Sweeper, showing its sleek red and gray design with a long handle and base unit.

- VOOM VMSWP-MC4 Sweeper Unit (Base)
- Handle Assembly
- Charging Adapter
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your VOOM VMSWP-MC4 sweeper for optimal use.



Image: Diagram of the VOOM VMSWP-MC4 Sweeper pointing out its main parts: Comfortable Ergonomic Handle, Power Button, 360° Swivel Tech Base, Easy Empty Button, Multi-Surface Sliders, and the Thousands of Micro Bristles for grabbing dirt and hair.

- **Comfortable Ergonomic Handle:** Designed for ease of grip and maneuverability.
- **Power Button:** Activates and deactivates the sweeper.
- **360° Swivel Tech Base:** Allows for flexible movement around obstacles and into tight spaces.
- **Easy Empty Button:** Releases the catch tray for quick and hygienic disposal of collected debris.
- **Multi-Surface Sliders:** Facilitate smooth transitions between different floor types.
- **Self-Cleaning Brushroll with Micro Bristles:** Thousands of micro-bristles rotate at 1200 RPMs to effectively grab, lift, and pick up dirt and hair.

5. SETUP

5.1. Assembly

The VOOM VMSWP-MC4 sweeper requires minimal assembly.

1. Carefully connect the handle assembly to the main sweeper unit until it clicks securely into place.
2. Ensure all connections are firm before use.

5.2. Charging the Battery

The VOOM VMSWP-MC4 sweeper is powered by a rechargeable battery. Fully charge the battery before its first use to ensure optimal performance and battery longevity.

1. Locate the charging port on the sweeper unit.
2. Plug the charging adapter into the charging port.
3. Plug the adapter into a standard wall outlet.
4. Allow the sweeper to charge until the charging indicator light (if present) signals a full charge.
5. Unplug the adapter once charging is complete.

6. OPERATING INSTRUCTIONS

6.1. Powering On/Off

To turn the sweeper on, press the power button located on the handle. Press the power button again to turn the sweeper off.

6.2. Sweeping Surfaces

The VOOM VMSWP-MC4 is designed for effective cleaning across various floor types, including carpet, tile, and hardwood. Its multi-surface sliders allow for smooth transitions between these surfaces.



Image: A detailed view of the VOOM VMSWP-MC4's self-cleaning brushroll, showing the red bristles and arrows indicating the direction of rotation for effective dirt collection.

- Gently guide the sweeper over the desired cleaning area. The 360° swivel base provides excellent maneuverability, allowing you to easily navigate around furniture and into tight spaces.
- The self-cleaning brushroll system, with its thousands of micro-bristles, efficiently grabs and lifts dirt, dust, and hair from your floors.

- The sweeper is designed to pick up debris effectively, even against baseboards.

7. MAINTENANCE

7.1. Emptying the Catch Tray

Regularly emptying the catch tray is crucial for maintaining the sweeper's optimal cleaning performance.

1. Ensure the sweeper is turned off.
2. Locate the easy empty button on the sweeper unit.
3. Press the button to release the catch tray.
4. Carefully remove the tray and dispose of the collected debris into a waste bin.
5. Reattach the catch tray firmly until it clicks back into place.

7.2. Cleaning the Brushroll

While the brushroll features a self-cleaning mechanism, occasional manual inspection and cleaning may be necessary, especially if long hair or fibers become tangled.

1. Turn off the sweeper and disconnect it from any power source.
2. Inspect the brushroll for any tangled hair, string, or debris.
3. Carefully cut and remove any tangled material using scissors or a brushroll cleaning tool (not included).
4. Ensure the brushroll spins freely after cleaning.

7.3. Battery Care

To prolong the life of your sweeper's rechargeable battery:

- Avoid fully discharging the battery frequently.
- Store the sweeper in a cool, dry place when not in use.
- If storing for an extended period, charge the battery periodically (e.g., every 3-6 months) to maintain its capacity.

8. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Issue	Possible Cause	Solution
Sweeper does not turn on.	Battery is not charged. Power button not pressed.	Ensure the battery is fully charged. Press the power button firmly.
Reduced cleaning performance.	Catch tray is full. Brushroll is obstructed or tangled.	Empty the catch tray. Clean the brushroll of any debris or tangles.
Sweeper stops unexpectedly during use.	Battery is low. Overload protection activated.	Recharge the battery. Check for any large obstructions that might be causing an overload.

Issue	Possible Cause	Solution
Sweeper is not picking up debris effectively.	Brushroll is worn or damaged.	Inspect the brushroll for wear. Contact customer support for replacement parts if necessary.

9. SPECIFICATIONS

Technical specifications for the VOOM VMSWP-MC4 Rechargeable Cordless Sweeper.

Feature	Detail
Brand	VOOM
Model Name	VMSWP-MC4
Color	Red/Gray
Cordless	Yes
Item Weight	3.14 pounds
Package Dimensions	48 x 10 x 5 inches
Indoor/Outdoor Usage	Indoor
Number of Power Levels	1
Manufacturer	ONTEL PRODUCTS CORP
UPC	735541097249

10. WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please refer to the documentation included with your original purchase or visit the official VOOM website. Keep your proof of purchase for warranty claims.