

Hobby Lobby 1854405-01

Hobby Lobby Train Set Play Table with Storage Drawer Instruction Manual

Model: 1854405-01

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Hobby Lobby Train Set Play Table with Storage Drawer. This expansive wooden train set and play table offers a comprehensive play experience with 80 detailed pieces, including tracks, trains, and various accessories. The built-in storage drawer helps keep pieces organized and easily accessible. The table's sturdy wood construction and colorful play elements are designed to foster imagination and develop fine motor skills, spatial awareness, and creative storytelling.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

Adult assembly is required. Please ensure all small parts are kept away from young children during assembly and play to prevent choking hazards. Regularly inspect the product for any loose or damaged parts. Discontinue use if any damage is found. Always supervise children during play.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present:

- Wooden Play Table
- Storage Drawer
- Wooden Train Tracks
- Train Cars
- Various Accessories (buildings, trees, figures, etc.)

Refer to the packaging for a complete list of 80 detailed pieces.

ASSEMBLY INSTRUCTIONS

Estimated Assembly Time: Approximately 30-60 minutes.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble the Table Frame:** Follow the included diagram (if provided with your product) to connect the table legs and support beams. Ensure all connections are secure.
3. **Attach Play Surface:** Place the illustrated play surface onto the assembled table frame. Secure it according to the instructions.
4. **Install Storage Drawer:** Slide the storage drawer into its designated slot beneath the play surface.
5. **Arrange Tracks and Accessories:** Begin by laying out the wooden train tracks on the play surface. The tracks can be arranged in various configurations. Place the train cars, buildings, and other accessories to create your desired landscape, such as a sandy beach, lush forest, or pleasant farm.
6. **Final Check:** Ensure all parts are securely assembled and there are no loose components.



Image 1: The Hobby Lobby Train Set Play Table fully assembled, showcasing the track layout, various accessories, and the integrated storage drawer. The play surface features a scenic background with forest, farm, and bridge elements.

OPERATING INSTRUCTIONS

The Hobby Lobby Train Set Play Table is designed for imaginative and interactive play. There are no electronic components or complex operations.

- **Track Configuration:** Experiment with different track layouts to create new and exciting routes for the train.
- **Train Movement:** Manually move the train cars along the tracks, encouraging fine motor skill development.
- **Accessory Placement:** Arrange the buildings, trees, and figures to create diverse play scenarios and enhance storytelling.
- **Storage:** Utilize the built-in storage drawer to neatly store all 80 pieces when playtime is over, facilitating quick cleanup.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the wooden table and plastic accessories with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish or materials.
- **Storage:** Store the play table in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or damage to the wood and colors.
- **Inspection:** Periodically check all connections and parts for tightness and wear. Replace any damaged components immediately to ensure continued safe play.

TROUBLESHOOTING

- **Problem:** Tracks do not connect smoothly.
Solution: Ensure all track pieces are correctly oriented and aligned. Some gentle force may be needed for a snug fit. Check for any debris obstructing the connections.
- **Problem:** Table feels wobbly.
Solution: Re-check all assembly screws and connections to ensure they are tightened securely. Ensure the table is placed on a flat, even surface.
- **Problem:** Missing pieces.
Solution: Refer to the package contents list. If pieces are genuinely missing upon initial inspection, contact Hobby Lobby customer support.

SPECIFICATIONS

Feature	Detail
Model Number	1854405-01
Product Dimensions (W x D x H)	42 x 24.69 x 15.63 inches (106.68 x 62.71 x 39.70 cm)
Item Weight	15 pounds (6.8 kg)
Material	Wood, Plastic
Recommended Age	36 months - 3 years (3+)
Number of Pieces	80

WARRANTY AND SUPPORT

For warranty information or customer support regarding your Hobby Lobby Train Set Play Table, please contact Hobby Lobby directly or visit their official website. Keep your purchase receipt as proof of purchase.

You can also visit the [Hobby Lobby Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question