### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- HORLAT /
- > HORLAT Portable Projector Bag Instruction Manual

# **HORLAT Portable Projector Bag**

# **HORLAT Portable Projector Bag Instruction Manual**

Model: Portable Projector Bag

### INTRODUCTION

Thank you for choosing the HORLAT Portable Projector Bag. This manual provides essential information for the proper setup, use, and maintenance of your new projector carrying case. Designed for durability and convenience, this bag ensures your projector and accessories are protected during transport and storage.

# **PRODUCT OVERVIEW**

The HORLAT Portable Projector Bag features a versatile design with a durable grey fabric exterior and black finishes. It is ideal for daily use and travel, offering secure storage for your projector and related items.



Image 1: The HORLAT Portable Projector Bag. This image displays the grey fabric exterior of the bag with black zippers and a top handle, showcasing its compact and functional design.

# SETUP

- 1. **Unpacking:** Carefully remove the projector bag from its packaging. Inspect for any signs of damage.
- 2. Initial Inspection: Ensure all zippers and straps are in good working condition.
- 3. **Adjusting Straps:** If using the shoulder strap, adjust its length to a comfortable carrying position. The top handle provides an alternative carrying option.
- 4. **Internal Organization:** Familiarize yourself with the internal compartments and dividers (if any) to plan the optimal arrangement for your projector and accessories.

#### **OPERATING INSTRUCTIONS**

- 1. **Placing the Projector:** Open the main compartment using the zipper. Gently place your projector inside, ensuring it fits snugly and is centered to distribute weight evenly.
- Storing Accessories: Utilize the additional pockets and compartments for cables, remote controls, power adapters, and other small accessories. This helps prevent items from shifting and potentially damaging the projector.
- 3. Securing the Contents: Close all zippers completely to secure the contents of the bag.
- 4. **Carrying the Bag:** Use the top handle for short distances or the adjustable shoulder strap for longer commutes. Ensure the bag is balanced to minimize strain.

## MAINTENANCE

- Cleaning: For minor spills or dirt, wipe the exterior with a damp cloth and mild soap. Allow it to air dry completely. Do not machine wash or tumble dry.
- **Deep Cleaning:** For more stubborn stains, a soft brush can be used with a gentle fabric cleaner. Test the cleaner on an inconspicuous area first.
- **Storage:** When not in use, store the bag in a cool, dry place away from direct sunlight to prevent material degradation.
- **Zipper Care:** Periodically check zippers for smooth operation. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax.

### **T**ROUBLESHOOTING

- **Zipper Stuck:** Do not force a stuck zipper. Gently pull the fabric away from the zipper teeth and try to move the slider. If necessary, apply a lubricant.
- **Minor Tears/Fraying:** Small tears or fraying can often be repaired with a fabric repair kit or by a professional tailor to prevent further damage.
- **Unpleasant Odor:** Air out the bag in a well-ventilated area. For persistent odors, sprinkle baking soda inside, let it sit for a few hours, then vacuum it out.

#### **SPECIFICATIONS**

Feature	Detail
Brand	HORLAT
Product Dimensions	34 x 18 x 24 cm (13.4 x 7.1 x 9.4 inches)
Weight	386 g (0.85 lbs)
Color	Gray
Material	Fabric
Style	Luggage Case
Closure Type	Zipper
Strap Type	Shoulder Strap
Handle Type	Shoulder Strap, Top Handle

### WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation included with your purchase or visit the official HORLAT website. Keep your proof of purchase for warranty claims.

© 2025 HORLAT. All rights reserved.





# Home Theater Projector User Manual

User manual for the Home Theater Projector, covering setup, operation, connectivity, and troubleshooting.

USER MANUA



#### HORLAT Projector: User Guide for iOS, Android, and Bluetooth Connections

Comprehensive guide for HORLAT projectors, covering warm tips, troubleshooting blurry images, HDMI connection issues, and detailed instructions for connecting iOS and Android devices via screen mirroring and Bluetooth.



## HORLAT WiFi6 Bluetooth Beamer: Portable 1080p LED Projector with Smart Connectivity

Explore the HORLAT WiFi6 Bluetooth Beamer, a portable LED LCD projector delivering 1080 Ansi-Lumens, 20000:1 contrast, and sharp 1920x1080 resolution. Enjoy up to 70,000 hours of LED life, integrated media playback, Bluetooth 5.2, WiFi6 screen mirroring (Airplay, Miracast), and automatic keystone correction for versatile entertainment and presentations.



#### HORLAT Full HD Projektor - Portable LCD LED Projector with 550 Ansi Lumens

Explore the HORLAT Full HD Projektor, a portable LCD LED projector featuring 1920x1080 resolution, 550 Ansi Lumens, 15000:1 contrast, and a 70,000-hour LED lifespan. Includes integrated media player, Wi-Fi, Bluetooth, and keystone correction for presentations and home entertainment.



#### HORLAT Beamer 25000 Lumen: 600 Ansi-Lumen Full HD LED Projektor mit 4K Unterstützung

Entdecken Sie den HORLAT Beamer 25000 Lumen, einen portablen LED LCD Projektor mit 600 Ansi-Lumen, 10000:1 Kontrast und HDTV 1920x1080 Auflösung. Mit 30.000 Stunden Lebensdauer, 360° Projektion, WiFi, Bluetooth und Android TV.



### GO EASY SH-533 Bike Carrying Bag: Instruction Manual and Guide

Comprehensive instruction manual for the GO EASY SH-533 bike carrying bag. Learn how to assemble, use, and store your bicycle safely with detailed diagrams and step-by-step guidance.