

YESHOMY YH-TS23-215-WAA

YESHOMY Fireplace TV Stand (Model YH-TS23-215-WAA)
Instruction Manual

For Televisions up to 65+ Inch

1. INTRODUCTION

Thank you for choosing the YESHOMY Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. SAFETY INFORMATION

Your safety and the safety of others are very important. Please observe all safety warnings and instructions to reduce the risk of fire, electric shock, or injury.

- Always follow the assembly instructions carefully.
- Keep flammable materials away from the fireplace.
- Do not leave the fireplace unattended while in use.
- Always turn off the fireplace before leaving the room or going to sleep.
- Ensure the TV stand is placed on a stable, level surface.
- Do not overload the shelves or the top surface of the TV stand.
- Keep children and pets away from the fireplace unit during operation.

3. PRODUCT OVERVIEW

The YESHOMY Fireplace TV Stand is designed to accommodate televisions up to 65+ inches, offering both functional storage and an integrated electric fireplace for added ambiance and warmth. It features a farmhouse-style design with barn doors and adjustable shelving.



Image 3.1: The YESHOMY Fireplace TV Stand in a living room setting, showcasing its design with a television placed on top, barn doors, and a glowing electric fireplace.

Key Features:

- Accommodates TVs up to 65+ inches.
- Integrated electric fireplace with heating function and realistic flame effects.
- Two barn-style sliding doors for concealed storage.
- Adjustable shelves within storage cabinets.
- Cable management hole for organized wiring.
- Sturdy wood construction with a maximum load capacity of 300 lbs.

Dimensions:

Product size



Table material



Table load
300lbs

Image 3.2: A diagram illustrating the overall dimensions of the TV stand: 58 inches in width, 23.8 inches in height, and 15 inches in depth. It also highlights a maximum load capacity of 300 lbs for the top surface.

- **Overall Dimensions (L x W x H):** 58 x 15 x 23.8 inches
- **Item Weight:** 72.5 pounds
- **Maximum Load Capacity:** 300 lbs

4. PACKAGE CONTENTS

Your YESHOMY Fireplace TV Stand will be delivered in two separate packages. Please ensure you have received both packages and all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image 4.1: An illustration showing the TV stand being delivered in two separate boxes, indicating that components may arrive on different days.

Typical Components Include:

- Main wood panels (top, bottom, side panels, shelves)
- Barn doors and associated hardware (hinges, handles, sliding mechanism)
- Electric fireplace insert
- Assembly hardware (screws, dowels, cam locks, brackets)
- Anti-tip kit
- Instruction manual

5. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people and approximately 120 minutes. Ensure you have a clear, spacious area for assembly. Do not use power tools unless specifically instructed, as overtightening can damage the wood.

Before You Begin:

1. Unpack all components and lay them out on a soft, clean surface to prevent scratches.
2. Verify all parts are present against the parts list (refer to your specific parts list included in the package).
3. Identify all hardware.

Assembly Steps (General Guidance):


1. **Assemble the Base Frame:** Attach the bottom panel to the side panels using the provided hardware.
2. **Install Shelves:** Insert the adjustable shelves into the pre-drilled holes in the side panels. Ensure they are level and secure.
3. **Attach Top Panel:** Secure the top panel to the assembled frame.
4. **Install Barn Doors:** Assemble the barn doors and attach the sliding mechanism according to the instructions. Ensure doors slide smoothly.
5. **Insert Fireplace:** Carefully slide the electric fireplace insert into the central opening. Connect the power cord as directed.
6. **Cable Management:** Utilize the round cable hole at the back to organize power cords for your TV and other electronic devices.
7. **Secure with Anti-Tip Kit:** For safety, attach the anti-tip kit to the TV stand and the wall as per the instructions.



Image 5.1: A close-up of the barn door design, highlighting the X-shaped wooden accents and the metal hinges, which are part of the assembly.




Image 5.2: The TV stand with its barn doors open, displaying the interior storage space with adjustable shelves on both sides of the central fireplace compartment.

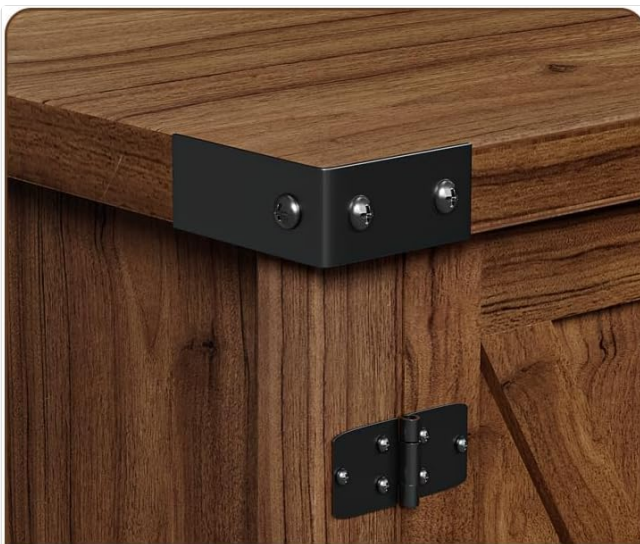

Proection Edge



Fireplace Button

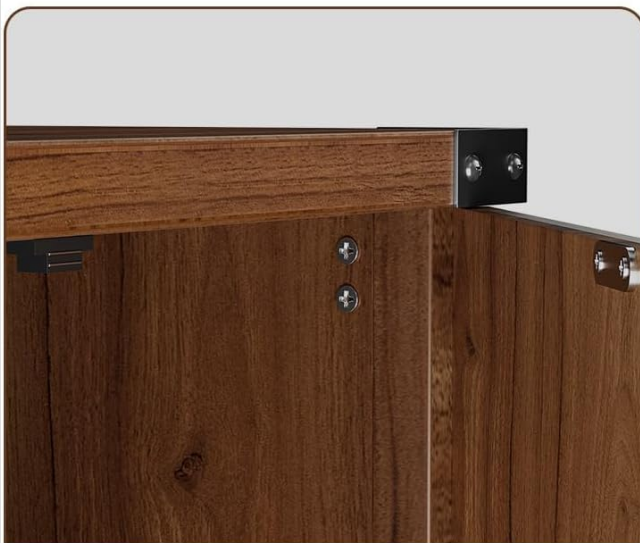

Magnet Design



Adjustable Shelf

Image 5.3: A collage showing detailed features: a protective metal edge on the corner, the control buttons for the fireplace, a magnetic catch for the doors, and the mechanism for adjusting shelf height.

6. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The electric fireplace provides both heat and visual flame effects. It can be operated using the control panel on the unit or the included remote control.

Control Panel and Remote Functions:



Image 6.1: A close-up of the fireplace's convenient control panel and its full-function remote, illustrating buttons for power, heat, flame, and timer settings.



Image 6.2: The 18-inch electric fireplace insert shown with its remote control, detailing the functions for standby, heater, flame, temperature, timer, and time settings.

- **Power Button:** Turns the fireplace unit on or off.
- **Heater Button:** Activates or deactivates the heating function. Adjust temperature settings as desired.
- **Flame Button:** Cycles through different flame brightness settings (e.g., 3 faux flame brightness settings).
- **Timer Button:** Sets an automatic shut-off timer for the fireplace (e.g., built-in timer, 7-day timer).
- **Temperature Control:** Adjusts the desired room temperature.

Refer to the specific fireplace insert manual included in your package for detailed instructions on all functions and remote control pairing.

7. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand and fireplace.

Cleaning the TV Stand:

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Promptly clean up any spills to prevent staining.

Fireplace Maintenance:

- Ensure the fireplace is unplugged and cool before cleaning.
- Wipe the exterior with a soft, damp cloth.
- Keep the air intake and exhaust vents clear of dust and debris to ensure proper operation and prevent overheating.
- Do not attempt to open or service the internal components of the fireplace. Refer to qualified service personnel if issues arise.

8. TROUBLESHOOTING

If you encounter issues with your YESHOMY Fireplace TV Stand or electric fireplace, refer to the following common solutions:

- **Fireplace not turning on:** Ensure the unit is properly plugged into a working electrical outlet. Check the circuit breaker. Verify the power button on the unit or remote is pressed.
- **No heat output:** Confirm the heater function is activated. Check temperature settings. Ensure vents are not blocked.
- **Remote control not working:** Replace batteries in the remote. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Doors not sliding smoothly:** Check the sliding track for any debris. Ensure all hardware for the barn doors is securely fastened and aligned.
- **Stand feels unstable:** Verify all assembly hardware is tightened. Ensure the stand is on a level surface. Re-check anti-tip kit installation.

For persistent issues or concerns not addressed here, please contact YESHOMY customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Number	YH-TS23-215-WAA
Material	Wood

Feature	Detail
Color	Brown
Product Dimensions (L x W x H)	58 x 15 x 23.8 inches
Item Weight	72.5 pounds
Number of Drawers	2 (implied by barn doors, though listed as drawers in spec)
Number of Shelves	1 (adjustable)
Special Feature	Adjustable Shelf, Electric Fireplace
TV Size Compatibility	Up to 65+ inches
Maximum Load Capacity	300 lbs

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact YESHOMY customer support directly. If you require assistance with assembly, parts replacement, or troubleshooting, please reach out to the manufacturer’s customer service team.

Contact Information: Please refer to your purchase receipt or the YESHOMY official website for the most current customer support contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FFGJ2T4K>

More documents and user manuals: <https://manuals.plus/>