

[manuals.plus](#) /

› [YESHOMY](#) /

› [YESHOMY Fireplace TV Stand YH-0284-GY2N Instruction Manual](#)

YESHOMY YH-0284-GY2N

YESHOMY Fireplace TV Stand Instruction Manual

MODEL: YH-0284-GY2N

1. INTRODUCTION

Thank you for purchasing the YESHOMY Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read these instructions thoroughly before assembly and retain them for future reference.



Figure 1: Assembled Fireplace TV Stand

2. SAFETY INFORMATION

To ensure safe use of this product, please adhere to the following guidelines:

- **Weight Limit:** Do not exceed the maximum weight limit of 220 lbs (100 kg) on the top surface of the TV stand. Overloading can cause structural failure and injury.
- **Fireplace Safety:** Exercise caution around the electric fireplace feature. Do not block the air vents. Keep flammable materials away from the heater.
- **Electrical Safety:** Ensure the fireplace is connected to a properly grounded outlet. Do not use extension cords or power strips with the fireplace. Disconnect power before cleaning or maintenance.
- **Assembly:** Follow all assembly instructions carefully. Ensure all fasteners are securely tightened. Do not use power tools for assembly unless specifically instructed, as this may damage components.
- **Stability:** Place the TV stand on a flat, level surface to prevent tipping. Consider anchoring the unit to a wall for added stability, especially in homes with children or pets.
- **Overheat Protection:** The electric fireplace is equipped with an overheat protection system that will automatically shut off the unit if it becomes too hot. If this occurs, unplug the unit, allow it to cool, and

check for any obstructions before restarting.

3. PACKAGE CONTENTS

Your YESHOMY Fireplace TV Stand is shipped in two separate packages. Please ensure you have received both packages and all components are present before beginning assembly.

Included Components:

- TV Stand components (wood panels, hardware)
- Electric Fireplace insert
- Assembly instructions manual

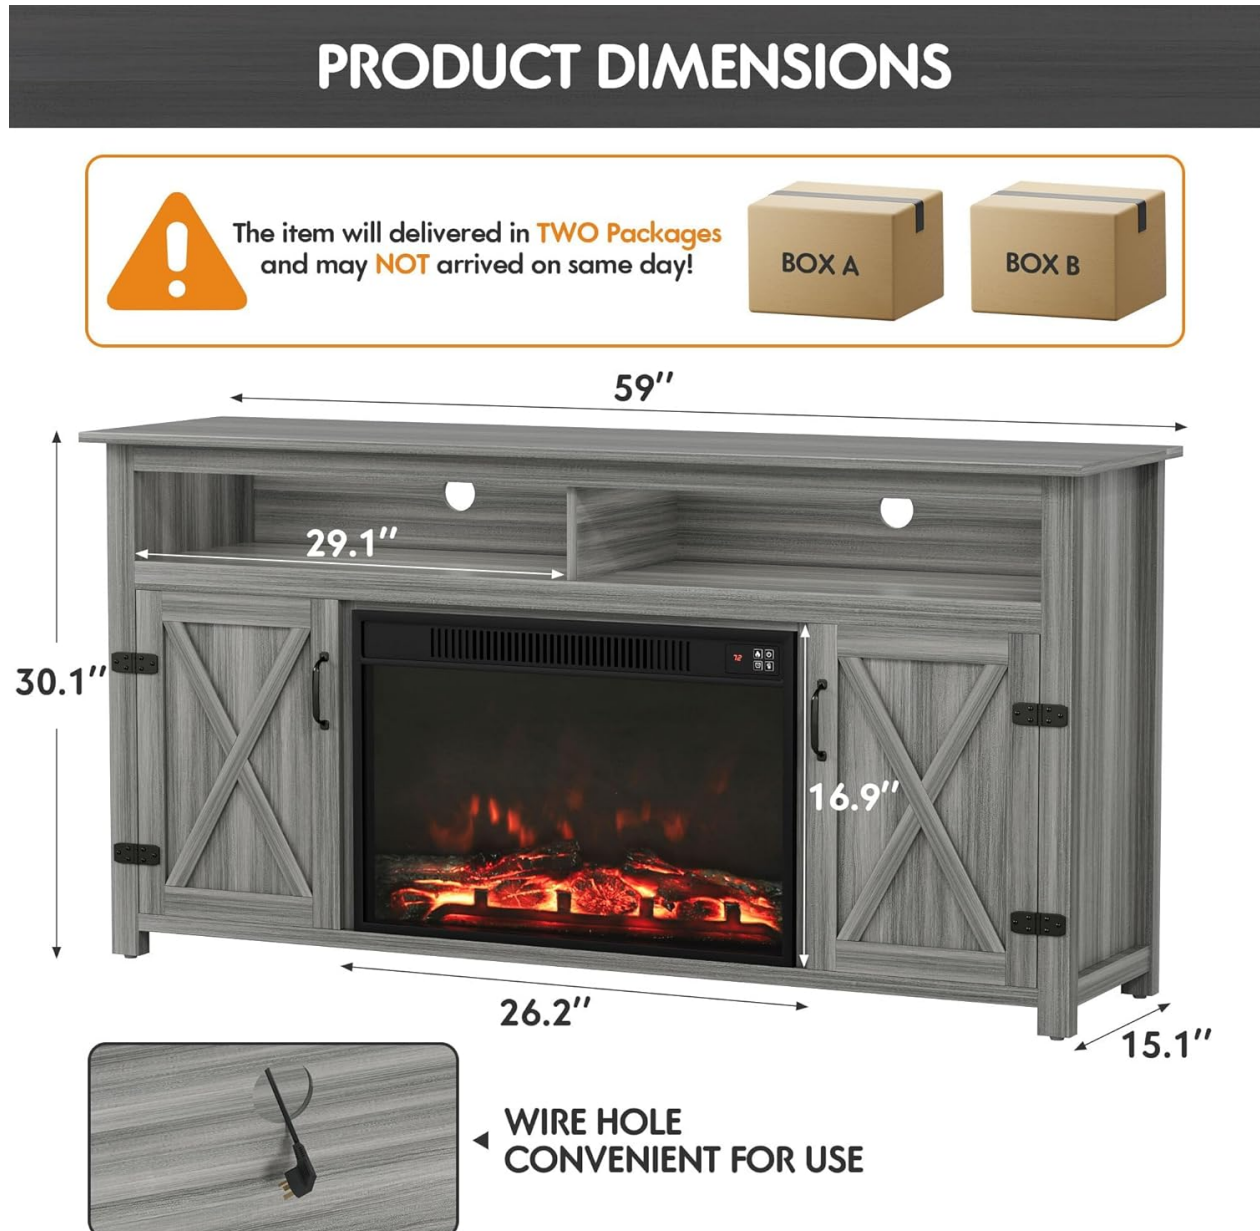


Figure 2: Product Dimensions and Packaging Information

4. ASSEMBLY INSTRUCTIONS

The YESHOMY Fireplace TV Stand is designed for straightforward assembly. All parts are labeled, and step-by-step instructions are provided in the included assembly guide. It is recommended to have two people for assembly.

Before You Begin:

1. **Unpack:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface (like a blanket or carpet) to prevent scratches.
2. **Identify Parts:** Match all labeled parts with the parts list in your separate assembly manual.
3. **Tools:** Gather any necessary tools as specified in the assembly manual (typically a screwdriver and hammer).

Assembly Steps:

Refer to the detailed, step-by-step assembly instructions provided in the separate manual included with your product. Pay close attention to illustrations and ensure all connections are secure.

- Begin by assembling the main frame of the TV stand.
- Install the internal shelves and dividers as indicated. The side cabinets feature 2-tier shelving, which can be adjusted or removed to accommodate different-sized items.
- Integrate the electric fireplace insert into the central opening.
- Attach the farmhouse barn doors and their hardware.
- Utilize the wire management holes for organizing cables from your media devices.

65-In Fireplace TV Stand with LOTS of Storage keep your space neat & tidy

• 2-TIER SIDE CABINETS

You can keep or remove the shelves to storage different-sized items freely

• SEMI-OPEN HIGHBOY CUBBY

For media equipment storage & arts display



Figure 3: Internal Storage and Structure

RUSTIC FARMHOUSE DESIGN EFFORTLESSLY ELEVATES YOUR HOME STYLE



✓ Unique black metal horseshoe and hex nails hardware

✓ thickened dark-tone tabletop



Metal handles provide a comfortable grip



Widen the bottom for firmness and reliability

Figure 4: Design Details and Stability Features

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The integrated electric fireplace offers both warmth and ambiance. It can heat an area of approximately 400 sq. ft.


Controls:

The fireplace can be controlled using either the mechanical buttons on the unit or the included remote control.

- **Power On/Off:** Use the power button to turn the fireplace on or off.
- **Heat Settings:** Adjust the temperature between 65°F and 95°F (18°C and 35°C). The unit provides 5000 BTUs of heat.
- **Flame Effects:** Select from 3-stage flame effects. The flame effect can be used independently without heat for ambiance.
- **Flame Brightness:** Adjust the flame brightness with 4 available levels (L1-L4).
- **Timer:** Set an operating timer for 1 to 8 hours.

30" Large Electric Fireplace with Remote

5000 BTU warmth providing areas heating for up to 500 sq.ft. & showcasing stunning 3D flame effects

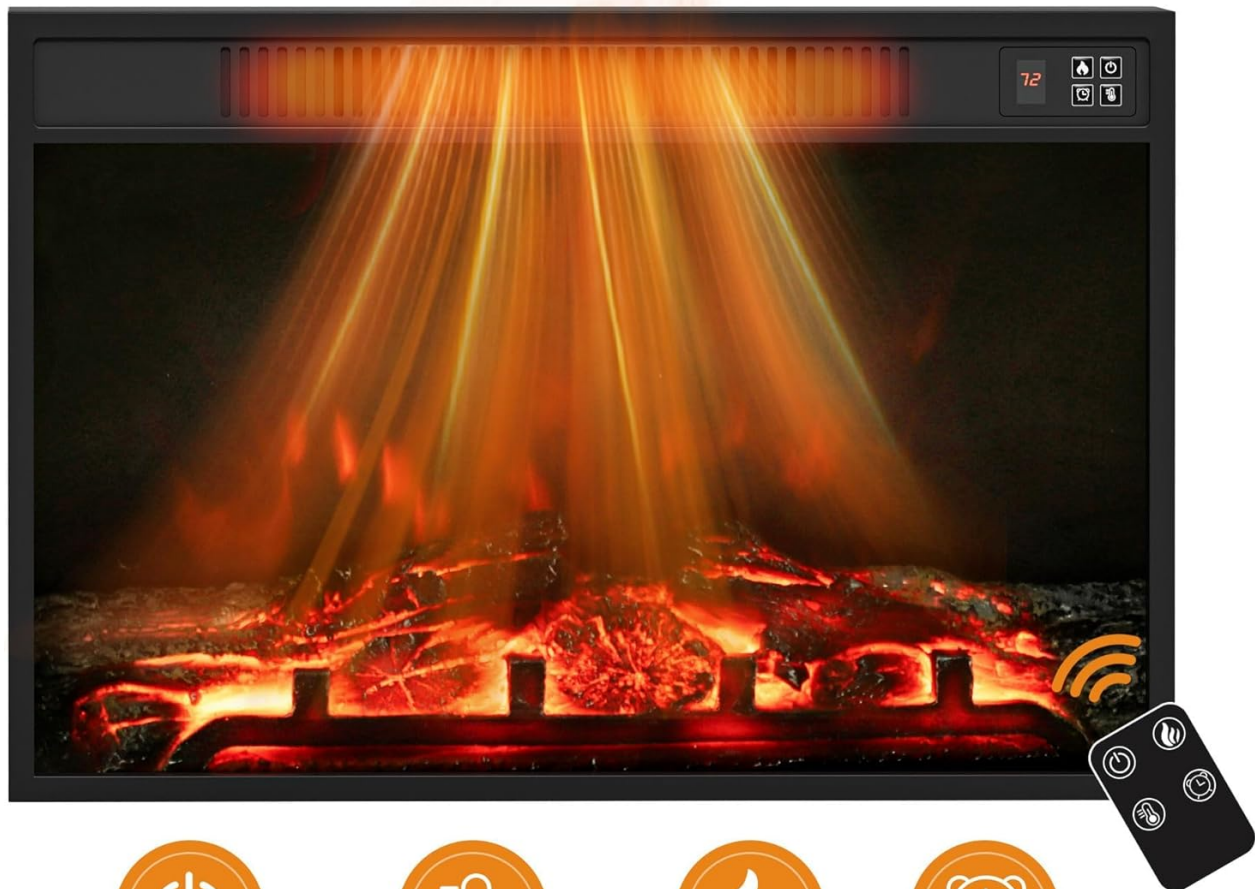

Remote
Control Switch



Controllable
Temperature: 65F-100F



3D Flame Effect



1-8 Hours Timer

Figure 5: Fireplace Controls and Remote

3 COLORS AVAILABLE



Figure 6: 3D Fireplace Insert Features and Flame Brightness Options

6. MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the unit to prevent buildup, especially around the fireplace vents.
- **Inspections:** Periodically check all fasteners to ensure they remain tight. Re-tighten if necessary.
- **Fireplace Care:** Ensure the fireplace vents are clear of dust and debris. Do not attempt to service the internal components of the fireplace; contact qualified personnel if issues arise.

7. TROUBLESHOOTING

If you encounter issues with your Fireplace TV Stand, refer to the following common problems and solutions:

- **Fireplace Not Turning On:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check the circuit breaker or fuse for the outlet.
 - Verify the main power switch on the fireplace unit is in the 'ON' position.
 - If the unit overheated, unplug it, wait 10-15 minutes for it to cool down, and then plug it back in.
- **No Heat Output:**
 - Ensure the heat function is activated via the control panel or remote.
 - Check if the desired temperature setting is higher than the current room temperature.
 - Confirm that the air intake/output vents are not obstructed.
- **Remote Control Not Working:**
 - Replace the batteries in the remote control.

- Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unstable Stand:**
 - Verify that all assembly screws and fasteners are tightened.
 - Ensure the stand is placed on a completely level surface.
 - Consider using wall anchors for additional stability.

8. SPECIFICATIONS

Feature	Specification
Model Number	YH-0284-GY2N
Brand	YESHOMY
Color	Gray Wash
Style	Fireplace TV Stand (30.1" Height)
Material	Wood (Engineered Wood)
Product Dimensions (L x W x H)	59 x 15.1 x 30.1 inches (149.86 x 38.35 x 76.45 cm)
Item Weight	94 pounds (42.64 kg)
Weight Capacity (Top Surface)	220 lbs (100 kg)
Included Components	TV Stand, Electric Fireplace
Fireplace Heat Output	5000 BTUs
Heating Area	Up to 400 sq. ft.
Temperature Control Range	65-95°F (18-35°C)
Timer Settings	1-8 hours
Certifications	ETL/FCC Certified



Figure 7: TV Size Compatibility

9. WARRANTY AND SUPPORT

Warranty Information:

Specific warranty details for the YESHOMY Fireplace TV Stand are typically provided with your purchase documentation or can be obtained directly from the manufacturer or retailer. Please refer to these sources for information regarding warranty coverage, terms, and conditions.

Customer Support:

For any questions, missing parts, or assistance with assembly or operation, please contact YESHOMY customer support. Contact information can usually be found on the product packaging, the manufacturer's website, or through your retailer.