

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bellemave](#) /

› [Bellemave Twin XL Over Queen Bunk Bed with Trundle Instruction Manual](#)

Bellemave WL000053TXLQB-T

Bellemave Twin XL Over Queen Bunk Bed with Trundle Instruction Manual

Model: WL000053TXLQB-T

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Bellemave Twin XL Over Queen Bunk Bed with Trundle. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. Keep this manual for future reference.

SAFETY INFORMATION

Your safety is paramount. Please adhere to the following guidelines:

- **Trundle Safety:** Keep fingers and other body parts away from the trundle when sliding it in or out to prevent injury.
- **Top Bunk Age Limit:** The top bunk is not suitable for children under 6 years of age.
- **Weight Capacity:** Do not exceed the recommended weight limits for each bunk. (Specific weight limits are not provided, exercise caution).
- **Guardrails:** Ensure all guardrails are securely installed and maintained. The top bunk must always have guardrails on all four sides.
- **Mattress Thickness:** The mattress on the top bunk should not exceed 6 inches in thickness to ensure adequate guardrail height.
- **No Jumping:** Do not allow jumping or rough play on the bunk bed.
- **Ladder Use:** Always use the ladder for access to the top bunk. Do not use chairs or other items.
- **Regular Checks:** Periodically check all bolts and fasteners to ensure they are tight. Retighten as necessary.

PRODUCT COMPONENTS

The Bellemave Twin XL Over Queen Bunk Bed with Trundle includes the following main components:

- Heavy-duty metal frame for both upper (Twin XL) and lower (Queen) bunks.
- Integrated ladder for safe access to the top bunk.
- Full-length guardrails for the top bunk.
- Pull-out trundle bed (Twin XL size) with wheels for additional sleeping space.

- Metal slats for mattress support on all three beds.



Image: Fully assembled Bellemave Twin XL Over Queen Bunk Bed with Trundle.

SETUP AND ASSEMBLY

Assembly of your Bellemave bunk bed is designed to be straightforward. The bed ships in two boxes, and all parts are labeled for easy identification. Clear instructions are included to guide you through the process.

1. **Unpack Components:** Carefully unpack all parts from both boxes. Verify that all components listed in the parts list are present and undamaged.
2. **Prepare Workspace:** Choose a clear, spacious area for assembly. It is recommended to have two adults for assembly.
3. **Follow Instructions:** Refer to the detailed assembly instructions provided in the packaging. Assemble the frame sections according to the numbered steps.
4. **Secure Connections:** Ensure all bolts, screws, and fasteners are tightened securely. Do not overtighten, but ensure a firm connection.

5. **Install Slats:** Place the metal slats onto the designated support rails. The plastic stopper design helps fix the slats in place, reducing noise.
6. **Attach Guardrails and Ladder:** Securely attach the full-length guardrails to the top bunk and install the ladder.
7. **Assemble Trundle:** Assemble the trundle frame and install its slats and wheels.
8. **Final Check:** Before use, double-check all connections for tightness and stability.

UNIT:INCH

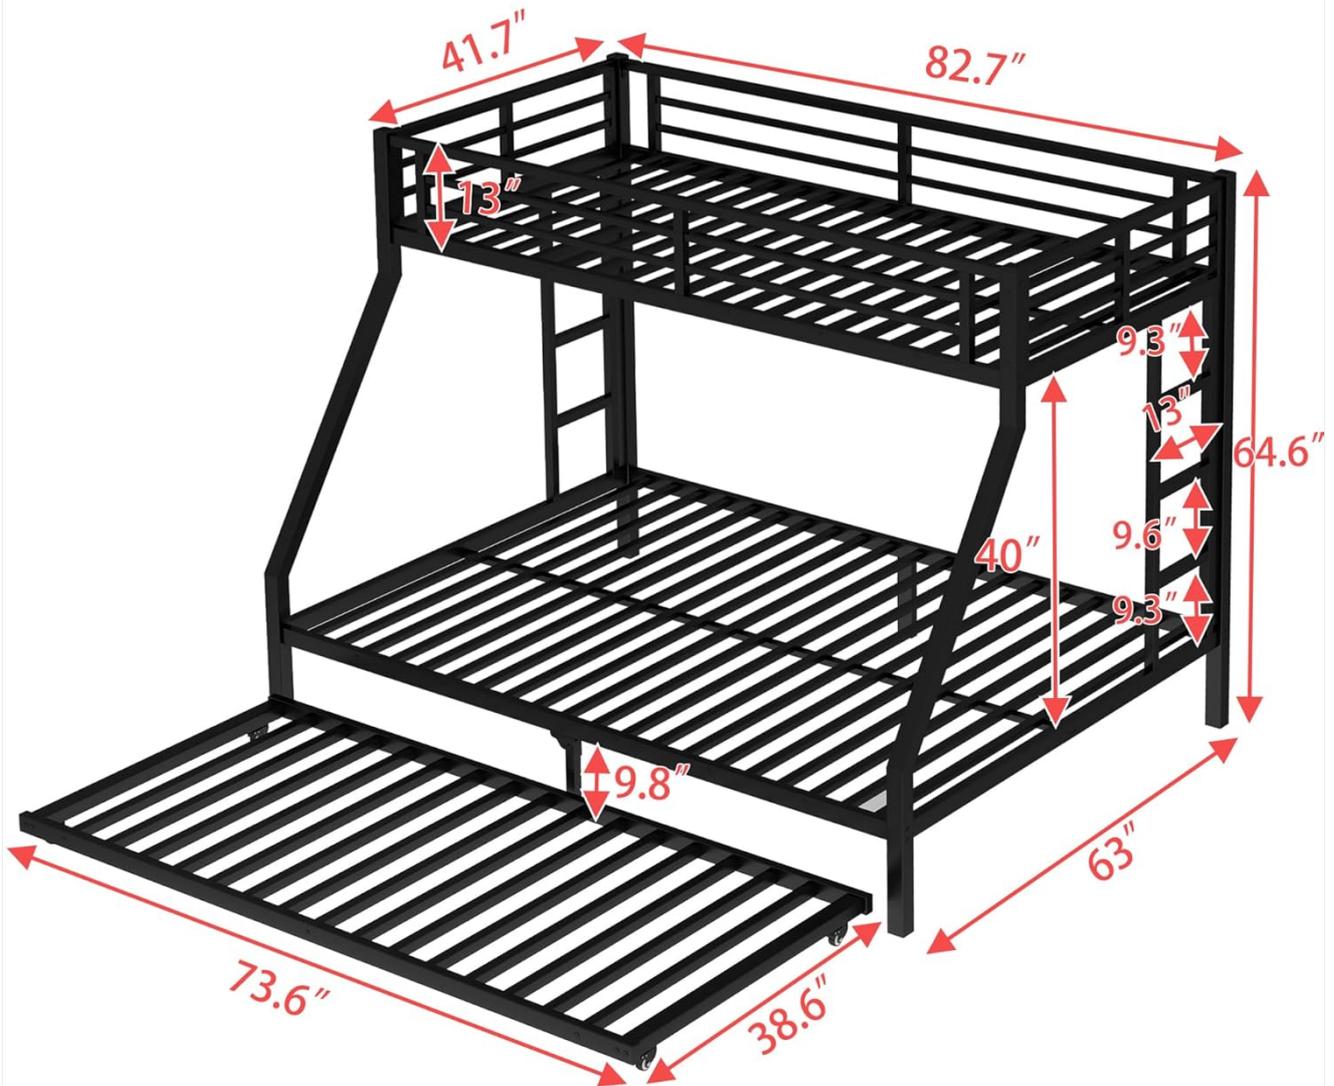


Image: Dimensional diagram of the bunk bed, showing overall length, width, height, and clearances.

OPERATING INSTRUCTIONS

Using your Bellemave bunk bed is simple and convenient:

- **Accessing Top Bunk:** Use the integrated ladder to safely climb to and descend from the top bunk. Always face the ladder when climbing.
- **Using the Trundle:** To use the trundle bed, gently pull it out from under the bottom bunk. The wheels allow for smooth movement. To store, push it back into place until it is fully under the main bed frame.
- **Under-Bed Storage:** The design offers 9.8 inches of under-bed clearance, providing space for storage bins or other items.



Image: The bunk bed with the trundle bed fully extended, ready for use.

MAINTENANCE

Proper maintenance will ensure the longevity and continued safety of your bunk bed:

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the powder-coated finish.
- **Fastener Checks:** Regularly inspect all bolts, screws, and connections. Over time, these may loosen. Retighten them periodically to maintain structural integrity and prevent squeaking.
- **Slat Integrity:** Ensure all metal slats are properly seated and the plastic stoppers are intact to prevent movement and noise.
- **Trundle Wheels:** Keep the trundle wheels free of debris to ensure smooth operation.



Image: Close-up of the trundle bed, showing its metal frame and wheels for easy movement.

TROUBLESHOOTING

If you encounter any issues with your bunk bed, consider the following:

- **Squeaking Noises:** Squeaking often indicates loose connections. Check and retighten all bolts and fasteners. Ensure the plastic stoppers on the slats are correctly positioned.
- **Trundle Not Sliding Smoothly:** Check for any obstructions under the bed or in the trundle's path. Ensure the wheels are clean and functioning correctly.
- **Instability/Wobbling:** This is usually due to loose fasteners. Re-check and tighten all connections throughout the entire frame.





Image: Detail of the integrated ladder and the full-length guardrails on the top bunk.

SPECIFICATIONS

| | |
|----------------------------------|--|
| Brand | Bellemave |
| Model Number | WL000053TXLQB-T |
| Size | Twin XL over Queen |
| Product Dimensions | 77.6"L x 63"W x 64.6"H |
| Color | Black |
| Material | Metal |
| Finish Type | Powder Coated |
| Compatible Mattress Sizes | Twin XL (top), Queen (bottom), Twin XL (trundle) |
| Included Components | Guardrails, Headboard, Slats, Trundle |
| Special Feature | Space Saving, Under-bed storage |
| Assembly Required | Yes |
| Item Weight | 87 pounds |
| UPC | 197793823630 |

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Bellemave website. This product is eligible for 90-day easy returns through Amazon.

If you require further assistance, have questions about assembly, or need to report missing/damaged parts, please contact Bellemave customer support. You can often find contact information on the packaging or by visiting the [Bellemave Store on Amazon](#).