

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [COSYLAND](#) /
- › [COSYLAND Stuffed Animal Storage Tower \(Model CS000189-1-US\)](#)

COSYLAND CS000189-1-US

COSYLAND Stuffed Animal Storage Tower Instruction Manual

Model: CS000189-1-US | Brand: COSYLAND

PRODUCT OVERVIEW

The COSYLAND Stuffed Animal Storage Tower is a free-standing, space-saving solution designed to organize plush toys in children's playrooms, bedrooms, or nurseries. Constructed from durable wood with elastic bands, it provides a secure and accessible storage space for a variety of stuffed animals.



Image: The COSYLAND Stuffed Animal Storage Tower, shown filled with various plush toys in a child's room setting.

SAFETY INFORMATION

This storage tower is designed with enhanced stability features to ensure safe use. Please observe the following:


- **Stable Base:** The tower includes four solid wooden stabilizers at the base to prevent tipping.
- **Child-Friendly Edges:** All wooden components feature smooth, child-friendly edges to minimize risk of injury.
- **Placement:** Place the tower on a flat, stable surface. For added security, consider placing it against a wall.
- **Supervision:** Always supervise children during play and when interacting with the storage tower.

The Difference You Can See & Feel

Dense spacing, fewer drops



Wide gaps, easy to drop

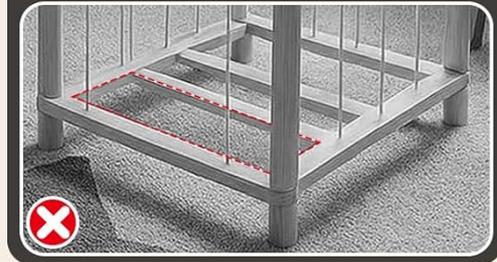

Easy in, easy out



Hard to find toys



Large storage capacity



Limited space, easy to fall

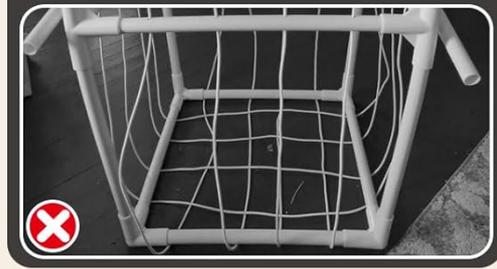


Image: Detail of the tower's base, highlighting the solid wooden stabilizers and rounded, child-friendly edges for enhanced safety.

PARTS LIST

Before assembly, ensure all parts are present. Refer to the diagram below for identification:



Image: An exploded view diagram illustrating all components required for assembly, including wooden frames, elastic cords, and hardware.

- Wooden Frame Pieces (various sizes)
- Elastic Cords (pre-threaded)
- Steel Screws
- Assembly Tool (Hex Key)
- "MY ZOO" Plaque

SETUP AND ASSEMBLY INSTRUCTIONS

The COSYLAND Stuffed Animal Storage Tower is designed for quick and easy assembly, typically taking 10-15 minutes. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list.
2. **Assemble Base:** Attach the four solid wooden stabilizers to the bottom frame using the provided screws. Ensure they are securely fastened.
3. **Connect Vertical Supports:** Join the vertical wooden posts to the base and subsequent tiers. The elastic cords are pre-threaded for convenience.
4. **Secure Tiers:** Fasten each tier of the wooden frame using the steel screws. Ensure all connections are tight and secure.
5. **Attach Top Arch:** Secure the decorative top arch, including the "MY ZOO" plaque, to the uppermost vertical supports.
6. **Final Check:** Once assembled, gently shake the tower to confirm stability. Ensure all screws are tightened and the structure is firm.

Your browser does not support the video tag.

Video: Official COSYLAND Stuffed Animal Storage Tower assembly and usage demonstration. This video provides a visual guide to the setup process and how children can interact with the product.


OPERATING INSTRUCTIONS

The storage tower is designed for easy access and organization of stuffed animals.

- **Storing Toys:** Children can easily place stuffed animals into the tower by dropping them from the open top or by gently pushing them through the elastic bands on the sides. The elastic bands are flexible enough to accommodate various toy sizes.
- **Retrieving Toys:** Toys can be retrieved by pulling them through the elastic bands on any side of the tower. The open design allows children to see and select their desired plush toy.
- **Capacity:** The extra-large design (55.5 x 21.7 x 19.3 inches) comfortably holds over 50 cuddly friends, both large and small.

Perfect Size for Everyday Homes

Compact 3-Tier Design, Easy to Organize

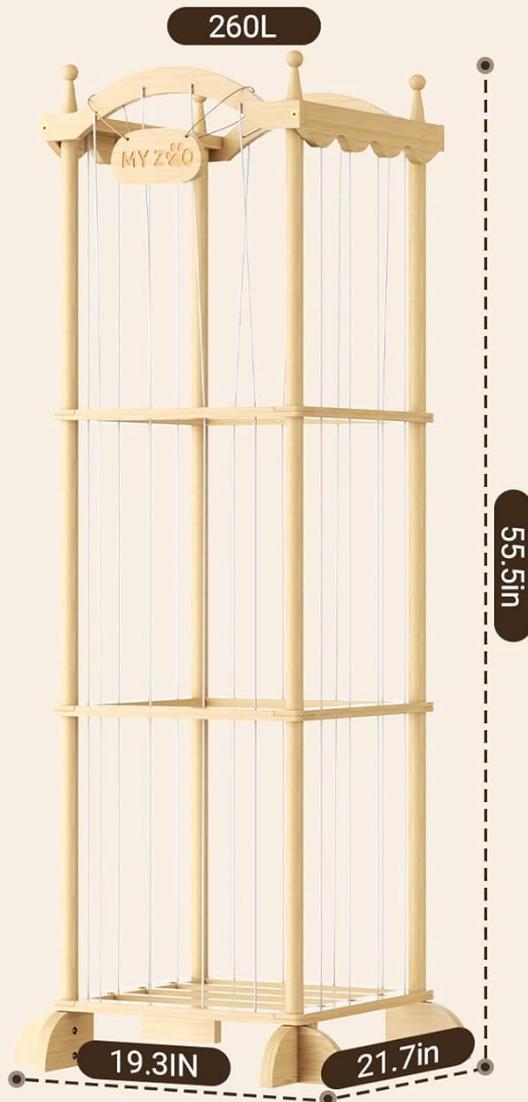

Castle-Inspired Design



Design Meets DIY Fun



Fits All Plush Sizes

Image: A child demonstrating how to place stuffed animals into the storage tower through the elastic side openings.

MAINTENANCE

To ensure the longevity and appearance of your COSYLAND Stuffed Animal Storage Tower, follow these simple maintenance guidelines:

- **Cleaning Wood:** Wipe wooden surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Elastic Cords:** Periodically check the elastic cords for any signs of wear or damage. While durable, excessive stretching or sharp objects can affect their integrity.
- **Hardware:** Occasionally inspect all screws and connections to ensure they remain tight. Re-tighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your storage tower, consider the following:

- **Small Toys Falling Out:** The bottom slats are designed to minimize gaps. If very small toys are slipping through the elastic, consider placing them on higher tiers or using a small fabric liner at the bottom for extremely tiny items.
- **Instability:** Ensure the tower is placed on a level surface. Check that all assembly screws are fully tightened. The four base stabilizers are crucial for stability.
- **Damaged Elastic:** If an elastic cord breaks or loses tension, contact customer support for possible replacement options.

SPECIFICATIONS

Model Number:	CS000189-1-US
Brand:	COSYLAND
Dimensions (L x W x H):	19.3 x 21.7 x 55.5 inches
Item Weight:	1 Kilogram
Material Type:	Wood
Mounting Type:	Floor Mount
Assembly Required:	Yes
Additional Features:	4 Extra Stabilizing Blocks at the Base, Castle-Inspired Design, Encourages Children's Organization Skills, Vertical Storage, Wider Design for More Stuffed Animals

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact COSYLAND customer service directly. Keep your purchase receipt for any warranty claims.

