

## Clarsen 1

# Clarsen Rotary Clothes Dryer 'Raumwunder' - Model 1

Instruction Manual

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- **Stable Placement:** Always ensure the clothes dryer is placed on a flat, stable surface to prevent tipping.
- **Overloading:** Do not exceed the recommended weight capacity. Overloading can cause damage to the dryer and potential injury.
- **Children and Pets:** Keep children and pets away from the dryer during use and assembly to prevent accidents.
- **Sharp Objects:** Avoid hanging clothes with sharp edges or objects that could damage the drying lines.
- **Weather Conditions:** While designed for outdoor use, in strong winds, secure the dryer with ground stakes (if included) or move it indoors to prevent it from being blown over.
- **Heat Sources:** Do not place the dryer near open flames, heaters, or other heat sources.
- **Cleaning:** Clean the dryer regularly with a damp cloth. Do not use abrasive cleaners.

## 2. SETUP AND ASSEMBLY

The Clarsen Rotary Clothes Dryer is designed for quick and easy setup without the need for tools.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Positioning:** Place the folded dryer on a flat, stable surface where you intend to use it.
3. **Unfolding:** Locate the central push-button mechanism. Press the button and gently pull the arms upwards until they lock into place, forming the open rotary structure. Ensure all four legs are fully extended and stable.
4. **Securing (Outdoor Use):** If using outdoors in windy conditions, utilize the provided ground stakes (if applicable) to secure the dryer's base to the ground for additional stability.

# WÄSCHESTÄNDER

FREISTEHEND



## EINFACHE MONTAGE

Schneller und einfacher Aufbau



## IDEALE HANDHABUNG

Dieser leichte und tragbare Wäscheständer lässt sich überall platzieren



## SICHER

Inklusive 4 Bodenheringen für zusätzliche Stabilität bei windigem Wetter



**Figure 2.1:** The dryer in its assembled state, ready for use. It highlights the simple setup and stable design.



Figure 2.2: The robust aluminum base and the dryer's compact folded form, illustrating its weather-resistant and stable construction.

### 3. OPERATING INSTRUCTIONS

The Clarsen Rotary Clothes Dryer offers 16 meters of drying line for efficient laundry drying.

- **Hanging Laundry:** Distribute laundry evenly across the drying lines to maintain balance and optimize drying. Avoid concentrating heavy items on one side.
- **Capacity:** The dryer provides over 16 meters of drying line, suitable for a significant amount of laundry.
- **Indoor/Outdoor Use:** This dryer is suitable for both indoor and outdoor environments, including bathrooms, balconies, patios, gardens, and utility rooms.
- **Folding for Storage:** To fold the dryer, locate the central push-button mechanism again. Press the button and gently push the arms downwards until the unit collapses into its compact, flat-folded state.

# PLATZSPARENDES RAUMWUNDER

mit 16m Trockenfläche



**Figure 3.1:** The dryer in use, demonstrating its space-saving design and ample drying capacity, requiring only 1 square meter of floor space.



Figure 3.2: Examples of suitable placement locations for the dryer, including garden, terrace, balcony, and inside the home.

## 4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your clothes dryer.

- **Cleaning:** Wipe down the aluminum frame and drying lines with a damp cloth periodically to remove dust and dirt. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Storage:** When not in use, especially during prolonged periods or adverse weather, fold the dryer and store it in a dry, protected area. Its compact design allows for easy storage.
- **Inspection:** Regularly inspect the drying lines, frame, and joints for any signs of wear, damage, or loose connections. Address any issues promptly.

## 5. TROUBLESHOOTING

If you encounter any issues with your Clarsen Rotary Clothes Dryer, refer to the following common solutions:

- **Dryer is unstable:**

- Ensure the dryer is placed on a completely flat and level surface.
- Verify that all four legs are fully extended and locked into position.
- If outdoors, use ground stakes to secure the base, especially in windy conditions.
- Check for uneven distribution of laundry. Redistribute items to balance the load.

- **Difficulty unfolding or folding:**

- Ensure the central push-button mechanism is fully pressed.
- Check for any obstructions or debris in the folding mechanism.
- Apply gentle, even pressure when unfolding or folding. Do not force the mechanism.

- **Drying lines appear loose or sagging:**

- Avoid overloading the lines.
- Inspect the attachment points of the lines to the frame for any dislodgement.

## 6. SPECIFICATIONS

<b>Brand</b>	Clarsen
<b>Model Number</b>	1
<b>Color</b>	Grey
<b>Material</b>	Aluminum
<b>Open Dimensions (L x W x H)</b>	138 x 102 x 112 cm
<b>Weight</b>	1.94 kg
<b>Drying Line Length</b>	16 meters
<b>Recommended Use</b>	Clothes
<b>Mounting Type</b>	Floor Mount

## 7. WARRANTY AND SUPPORT

Warranty information for this product is not provided within the available product data. For specific warranty details or technical support, please contact the seller or manufacturer directly through your purchase platform.