

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KEMEI](#) /

› [KEMEI 3023-702 Hair and Beard Trimmer User Manual](#)

KEMEI 3023-702

KEMEI 3023-702 Hair and Beard Trimmer User Manual

MODEL: KM-3023-702

1. OVERVIEW

The KEMEI 3023-702 is a professional-grade hair and beard trimmer designed for precision grooming. Featuring a durable full metal body, advanced ceramic and DLC blades, and a powerful 9000 RPM motor, this trimmer delivers efficient and smooth cutting performance. It includes an intelligent LED display for real-time battery status and lubrication reminders, along with flexible dual charging options for convenience.




Ceramic & DLC Blades

Self-sharp steel zero-gapped design for 0 mm hair trimming



One-touch

ON/OFF Button

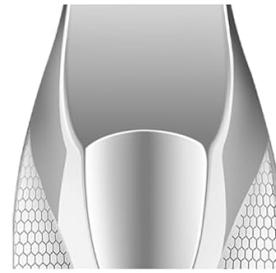

Full Metal Body

Aluminum Alloy Fuselage and anti-skid design



LED Display

Real-time display of remaining power and lubricant reminder

Image: KEMEI 3023-702 Hair and Beard Trimmer, showcasing its sleek design.

2. SAFETY INSTRUCTIONS

- Keep blades away from children.
- Do not ingest or inhale small parts.
- Dispose of used parts responsibly.
- Keep the charger away from flammable materials when charging.
- Do not immerse the trimmer in water.
- Ensure the trimmer is switched off before cleaning or maintenance.
- Use only the provided charging cable and base.

3. WHAT'S INCLUDED

Your KEMEI 3023-702 package includes the following items:

- KEMEI 3023-702 Hair and Beard Trimmer
- Charging Base
- Charging Cable (Type-C)

- 5 Trimmer Guide Combs (1mm, 2mm, 3mm, 4mm, 5mm)
- Cleaning Brush
- Lubricating Oil
- User Manual

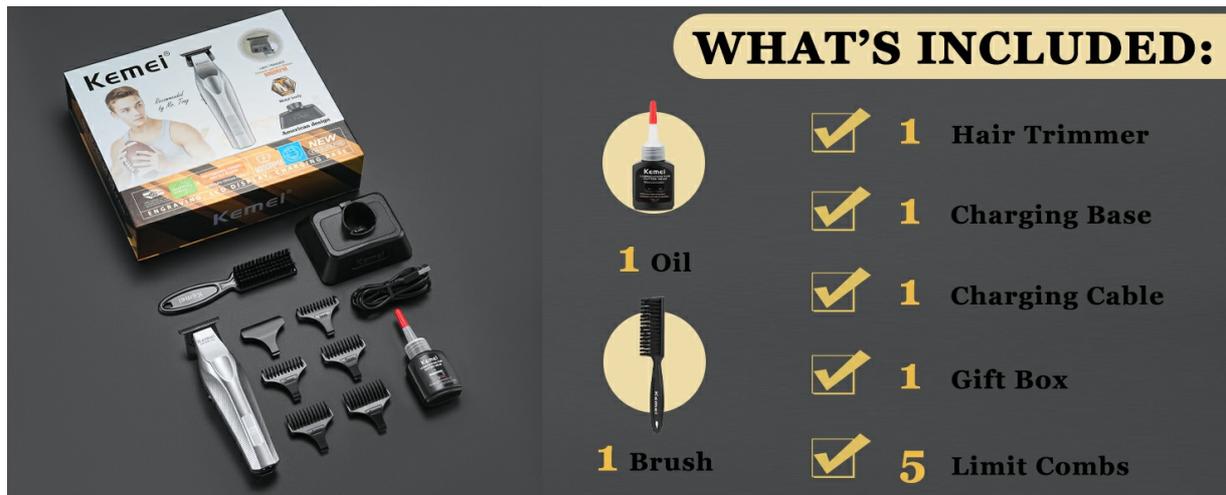


Image: All items included in the KEMEI 3023-702 package, including the trimmer, charging accessories, guide combs, and maintenance tools.

4. SETUP AND CHARGING

Initial Charge

Before first use, fully charge the trimmer for approximately 3 hours. The intelligent LCD display will show the battery percentage and charging status.

Charging Options

The KEMEI 3023-702 offers two convenient charging methods:

1. **Charging Dock:** Place the trimmer securely into the provided charging base.
2. **Type-C Cable:** Connect the Type-C charging cable directly to the port on the underside of the trimmer.

A full charge provides up to 120 minutes of cordless operation.



Image: The KEMEI 3023-702 trimmer demonstrating both charging via its base and direct Type-C cable connection.

5. OPERATION

Attaching Guide Combs

To adjust hair length, select one of the five guide combs (1mm, 2mm, 3mm, 4mm, 5mm). Align the comb with the trimmer blade and snap it into place. Ensure it is securely attached before use.

A promotional graphic for the Kemei 3023-702 trimmer. The trimmer is shown in a silver and black color scheme, standing on its black base. The base has the 'Kemei' logo. The trimmer's body has a textured, honeycomb-like pattern. A digital display on the handle shows '100'. To the right, a white callout box contains the following text: '3 H Charge Time' (with a clock icon), '120 Mins Running Time', and '2000 mAh Battery Type'. Below this, a circular inset shows a close-up of the trimmer's handle with a USB-C port. At the bottom right, text reads '2 Charging Methods: Base charging and type-c charging'. The background is a dark, starry space.

FAST USB CHARGING

3 H Charge Time

120 Mins Running Time

2000 mAh Battery Type

2 Charging Methods:
Base charging and type-c charging

Image: The KEMEI 3023-702 trimmer shown with its set of five guide combs for different cutting lengths.

Powering On/Off

Locate the power switch on the side of the trimmer. Slide it to the 'ON' position to activate the trimmer. Slide it back to the 'OFF' position to turn it off.

Trimming Hair and Beard

Hold the trimmer with the blade flat against the skin or at the desired angle. Move the trimmer slowly against the direction of hair growth for an even cut. The zero-gapped ceramic and DLC blades are designed for precise lines and close trimming.

PRO MEN'S HAIR TRIMMER

Meet all the daily needs of men



Image: The KEMEI 3023-702 trimmer in use for various grooming tasks, including hair trimming, beard trimming, and creating hair art.

6. MAINTENANCE

Cleaning the Blades

After each use, turn off the trimmer and remove any attached guide comb. Use the provided cleaning brush to remove loose hairs from the blades. For a more thorough cleaning, the blades can be carefully detached and rinsed under running water, ensuring they are completely dry before reattaching.

Lubrication

Apply a few drops of the included lubricating oil to the blades regularly, especially if the LED display shows a lubricant reminder. This helps maintain blade sharpness and ensures smooth operation.

5 GUIDE LIMIT COMBS

Adjust hair length to your preference

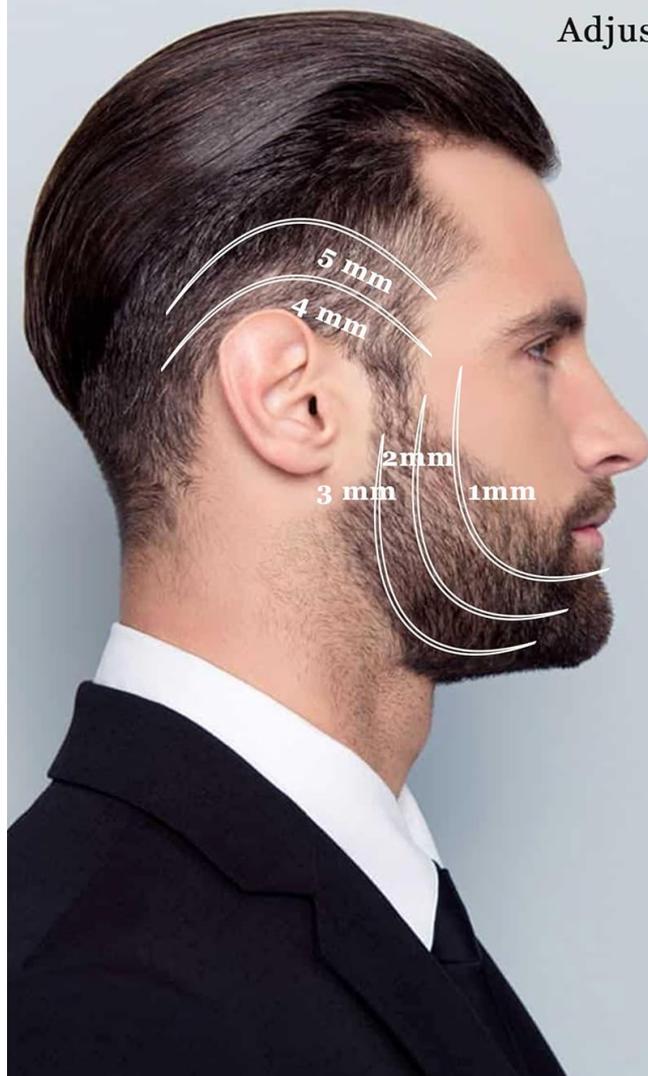


Image: A close-up view of the KEMEI 3023-702 trimmer's ceramic and DLC blades, highlighting their precision design.

7. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the battery is charged. Connect the trimmer to the charger and allow it to charge for at least 30 minutes before attempting to power on again.
- **Poor cutting performance:** Clean the blades thoroughly to remove any trapped hair or debris. Apply lubricating oil to the blades. If performance does not improve, the blades may need replacement.
- **Trimmer pulls hair:** This often indicates dull blades or insufficient lubrication. Clean and oil the blades. If the issue persists, consider replacing the blades.
- **LED display not working:** Ensure the trimmer is charged. If the issue continues, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	KM-3023-702

Motor Speed	9000 RPM
Battery Type	2000 mAh Rechargeable Lithium Battery
Charging Time	3 Hours
Runtime	Up to 120 minutes
Blade Material	Ceramic and DLC (Diamond-Like Carbon)
Body Material	Full Metal (Aluminum Alloy)
Display	LED (Battery Percentage, Lubricant Reminder, Charging Status)
Charging Interface	Type-C and Charging Dock
Included Combs	1mm, 2mm, 3mm, 4mm, 5mm

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official KEMEI website. Keep your purchase receipt as proof of purchase for any warranty claims.