

## Tefal FV8082E0

# Tefal Puregliss FV8082E0 Steam Iron User Manual

Model: FV8082E0 | Brand: Tefal

[Introduction](#)   [Safety](#)   [Product Overview](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)  
[Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Tefal Puregliss FV8082E0 Steam Iron. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and keep them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the iron.
- Use the iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- The iron should always be turned to OFF before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.

- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Contact qualified service personnel for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

### 3. PRODUCT OVERVIEW

The Tefal Puregliss FV8082E0 is a high-performance steam iron designed for efficient and effortless ironing. Familiarize yourself with its components:



**Image 1:** Front view of the Tefal Puregliss FV8082E0 Steam Iron, showcasing its black and grey design with the water tank and control dial visible.

- **Water Tank:** For filling with water to generate steam.
- **Temperature Control Dial:** Adjusts the soleplate temperature for different fabric types.

- **Steam Control Lever:** Regulates continuous steam output.
- **Steam Boost Button:** Delivers an extra burst of steam for stubborn creases.
- **Spray Button:** Mists water onto fabric for easier ironing.
- **Durilium Airglide Soleplate:** Provides smooth gliding and even heat distribution.
- **Calc Collector:** A removable component designed to collect scale particles, ensuring long-lasting steam performance.
- **Power Cord:** Connects the iron to the electrical outlet.





**Image 2:** Underside view of the iron, highlighting the Durilium Airglide soleplate with its numerous steam holes and smooth, durable coating.

## 4. SETUP AND FIRST USE

---

### 4.1 Before First Use

- Remove any labels or protective covers from the soleplate.
- It is normal for a small amount of smoke or odor to be produced during the first few minutes of use. This will quickly disappear.
- For optimal results, iron an old piece of fabric (e.g., an old towel) for a few minutes to remove any manufacturing residues from the soleplate.

### 4.2 Filling the Water Tank

1. Ensure the iron is unplugged from the electrical outlet.
2. Set the steam control lever to the "Dry Ironing" position (no steam).
3. Open the water tank inlet cover.
4. Fill the water tank with tap water up to the "MAX" level indicator. Do not overfill.
5. Close the water tank inlet cover securely.

*Note:* You can use tap water. However, if your water is very hard, it is recommended to mix 50% tap water with 50% distilled water. Never use 100% distilled or demineralized water, scented water, water from tumble dryers, or water containing additives, as these can damage the iron.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Setting the Temperature

1. Plug the iron into a suitable electrical outlet.
2. Turn the temperature control dial to the desired setting according to the fabric type. Refer to the fabric care labels on your garments.

3. The indicator light will illuminate, indicating the iron is heating up. It will turn off when the selected temperature is reached.

*Tip:* Always start with fabrics requiring lower temperatures and progress to higher temperatures to avoid damaging delicate items.

## 5.2 Steam Ironing

Steam ironing is suitable for most fabrics, except very delicate ones that require dry ironing.

1. Ensure the water tank is filled.
2. Set the temperature control dial to a setting within the steam zone (usually indicated on the dial).
3. Once the indicator light turns off, indicating the iron is at temperature, adjust the steam control lever to the desired steam output.
4. Move the iron smoothly over the fabric.

## 5.3 Steam Boost Function

For stubborn creases, press the steam boost button. This delivers a powerful burst of steam. Wait a few seconds between each press to allow the iron to reheat and generate sufficient steam.



**Image 3:** The iron being used to steam a plush toy, demonstrating the powerful steam output for various items.

## 5.4 Vertical Steaming

The iron can be used for vertical steaming to refresh hanging garments, curtains, or delicate fabrics.

1. Hang the garment on a hanger.

2. Set the temperature control dial to the maximum setting.
3. Hold the iron vertically, a few centimeters away from the fabric.
4. Press the steam boost button repeatedly while moving the iron up and down the garment.



**Image 4:** A person using the iron for vertical steaming on a shirt hanging on a rack, illustrating its versatility.

## 5.5 Spray Function

Press the spray button to mist water onto dry or stubborn creases. This helps to dampen the fabric for easier ironing.

## 5.6 Auto-Off Safety Feature

For safety and energy saving, your Tefal Puregliss iron is equipped with an Auto-Off feature. The iron will automatically switch off if left unattended:

- After 8 minutes if left vertically on its heel rest.
- After 30 seconds if left horizontally on its soleplate or tipped over.

To restart the iron, simply move it. The indicator light will illuminate, and the iron will reheat to the selected temperature.

## 6. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and extends the lifespan of your iron.

### 6.1 Cleaning the Soleplate

- Always unplug the iron and allow it to cool completely before cleaning.
- Wipe the soleplate with a damp cloth or a non-abrasive sponge.
- Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the soleplate coating.

## 6.2 Cleaning the Calc Collector

The integrated Calc Collector helps prevent scale buildup and maintains steam performance. It should be cleaned regularly, especially in areas with hard water.

1. Ensure the iron is unplugged and completely cold.
2. Locate the Calc Collector at the rear of the iron (refer to Image 5).
3. Pull out the Calc Collector.
4. Rinse the collector under running water to remove any scale particles.
5. Reinsert the clean Calc Collector firmly back into the iron until it clicks into place.



**Image 5:** Close-up view of the iron's rear, showing the removable Calc Collector being taken out for cleaning, with collected scale visible.

## 6.3 Storage

- After use, unplug the iron and empty any remaining water from the tank.
- Allow the iron to cool completely before storing.
- Store the iron vertically on its heel rest in a safe, dry place.

## 7. TROUBLESHOOTING

If you encounter issues with your iron, refer to the following table before contacting customer service:

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; Auto-Off activated.	Check power connection; test outlet with another appliance; move the iron to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low; steam control set to dry ironing; Calc Collector blocked.	Fill water tank; set temperature to steam zone; adjust steam control; clean Calc Collector.
Water drips from the soleplate.	Temperature too low for steam; iron left horizontal too long with steam on.	Allow iron to reach correct temperature before using steam; ensure iron is moved continuously or placed on heel rest.
White flakes coming from soleplate.	Scale buildup.	Clean the Calc Collector. If problem persists, perform a full descaling procedure (refer to manufacturer's website for detailed instructions if needed).

## 8. PRODUCT SPECIFICATIONS

- **Brand:** Tefal
- **Model:** FV8082E0
- **Type:** Steam Iron
- **Power/Wattage:** 3000 Watts
- **Steam Output:** Up to 50 g/min continuous steam
- **Steam Boost:** Up to 280 g/min
- **Soleplate Material:** Durilium Airglide
- **Special Features:** Auto Shutoff, Steam Boost, Vertical Steaming, Scale Protection (Calc Collector), Active Steam Holes, Spray Button, Steam Disinfection
- **Item Weight:** Approximately 1.76 Kilograms

## 9. WARRANTY AND SUPPORT

Tefal products are manufactured to high quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Tefal website for detailed warranty information.

For technical assistance, spare parts, or repair services, please contact Tefal customer support in your region. Contact details can typically be found on the official Tefal website or in the documentation provided with your product.

Keep your proof of purchase (receipt) for warranty claims.

© 2025 Tefal. All rights reserved. This manual is for informational purposes only.