

Manuals.plus /

› FANMIS /

› FANMIS Classic Digital Sports Watch Model 1888 User Manual

FANMIS 1888

FANMIS Classic Digital Sports Watch Model 1888 User Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the FANMIS Classic Digital Sports Watch Model 1888. This timepiece combines a retro-inspired design with modern digital functionality, offering features such as dual time zones, an alarm, a stopwatch, and a countdown timer. This manual provides detailed instructions to help you understand and operate your watch effectively.

2. PRODUCT OVERVIEW

The FANMIS Classic Digital Sports Watch is designed for durability and functionality. It features a robust zinc alloy case, a comfortable stainless steel band, and a clear digital display with an EL backlight for visibility in low-light conditions.





Front view of the FANMIS Classic Digital Sports Watch, showcasing its square digital display, gold-tone bezel, and two-tone stainless steel band. The display shows time, date, and day of the week.

Key Features:

- **Retro-Inspired Digital Design:** Classic square styling with a digital display.
- **Multi-functional:** Includes dual time zones, date and week display, stopwatch, countdown timer, and alarm.
- **Durable Construction:** Crafted with a zinc alloy case and a stainless steel band and buckle.
- **30M Water Resistance:** Suitable for hand washing, rain, and light splashes. Not for swimming or diving.

- **EL Backlight:** Ensures easy time reading in low-light conditions.

Button Functions:

The watch features four buttons, typically located on the sides of the watch case. For the purpose of this manual, they are referred to as A, B, C, and D:

- **Button A (Top Left):** Activates the EL Backlight.
- **Button B (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Countdown, Dual Time).
- **Button C (Top Right):** Used for Start/Stop in Stopwatch mode, displaying the date in Time mode, and adjusting values in setting modes.
- **Button D (Bottom Right):** Used for Reset in Stopwatch mode, setting/adjusting values in setting modes, and turning the alarm on/off.

3. SETUP AND INITIAL CONFIGURATION

Setting Time and Date:

1. In normal Time mode, press **Button B** three times to enter the Time Setting mode. The seconds will begin to flash.
2. Press **Button C** to reset the seconds to zero.
3. Press **Button D** to move the flashing selection to the hour digits.
4. Press **Button C** to adjust the hour. Pay attention to the AM/PM indicator if using 12-hour format.
5. Press **Button D** to move the flashing selection to the minute digits.
6. Press **Button C** to adjust the minutes.
7. Continue pressing **Button D** to cycle through year, month, and day settings, adjusting each with **Button C**.
8. Once all settings are correct, press **Button B** to exit the Time Setting mode and return to normal Time mode.

12/24 Hour Format:

While in Time Setting mode (seconds flashing), press **Button C** when the hour digits are flashing to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4. OPERATING INSTRUCTIONS

Using the EL Backlight:

Press **Button A** (Top Left) at any time to illuminate the display for a few seconds, providing visibility in dark environments.

Alarm Function:

1. From normal Time mode, press **Button B** once to enter Alarm mode.
2. Press **Button C** to toggle the alarm ON or OFF. An alarm icon will appear when the alarm is active.
3. To set the alarm time, press **Button D**. The hour digits will flash.
4. Press **Button C** to adjust the hour.
5. Press **Button D** to move to the minute digits.
6. Press **Button C** to adjust the minutes.
7. Press **Button D** again to exit alarm time setting.
8. Press **Button B** to return to normal Time mode.

Stopwatch Function:

1. From normal Time mode, press **Button B** twice to enter Stopwatch mode. The display will show '00:00:00'.
2. Press **Button C** to start the stopwatch.
3. Press **Button C** again to pause the stopwatch.
4. Press **Button D** to reset the stopwatch to '00:00:00' while it is paused.
5. To continue timing after a pause, press **Button C**.
6. Press **Button B** to return to normal Time mode.

Countdown Timer Function:

1. From normal Time mode, press **Button B** three times to enter Countdown Timer mode.
2. To set the countdown time, press **Button D**. The hour digits will flash.
3. Press **Button C** to adjust the hour.
4. Press **Button D** to move to the minute digits.
5. Press **Button C** to adjust the minutes.
6. Press **Button D** again to exit countdown time setting.
7. Press **Button C** to start the countdown.
8. Press **Button C** again to pause the countdown.
9. Press **Button D** to reset the countdown to the set time while it is paused.
10. Press **Button B** to return to normal Time mode.

Dual Time Function:

1. From normal Time mode, press **Button B** four times to enter Dual Time mode.
2. To set the second time zone, press **Button D**. The hour digits will flash.
3. Press **Button C** to adjust the hour.
4. Press **Button D** to move to the minute digits.
5. Press **Button C** to adjust the minutes.
6. Press **Button D** again to exit dual time setting.
7. Press **Button B** to return to normal Time mode.

5. MAINTENANCE

Water Resistance:

The watch is rated for 30 meters (3ATM) water resistance, meaning it can withstand splashes, rain, and brief immersion like hand washing. It is **not** suitable for swimming, showering, or diving. **Important: Do not press any buttons underwater.** Pressing buttons underwater can compromise the watch's water resistance and lead to internal damage.

Temperature Exposure:

Avoid exposing the watch to extreme hot or cold temperatures, as this can affect its performance and battery life.

Cleaning:

To clean your watch, wipe it gently with a soft, dry cloth. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

Battery Replacement:

When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

6. TROUBLESHOOTING

Display is blank or dim:

- The battery may be low. Consider replacing the battery.
- Ensure the watch is not exposed to extreme temperatures.

Buttons are unresponsive:

- Check if the watch is in a specific mode that restricts button functionality.
- If the watch has been exposed to water, ensure it is completely dry.

Mist or droplets inside the watch:

If mist or droplets are found inside the watch surface, contact the manufacturer or a qualified service center immediately for maintenance. This prevents moisture corrosion of the internal components.

Time is inaccurate:

- Re-set the time following the instructions in the 'Setting Time and Date' section.
- A low battery can sometimes affect timekeeping accuracy.

7. SPECIFICATIONS



The FANMIS Classic Digital Sports Watch displayed on a person's wrist, illustrating its size and fit. The watch features a two-tone gold and silver stainless steel band and a clear digital display.

Feature	Detail
Model Number	1888
Movement	Original Quartz Digital Movement
Case Material	Zinc Alloy
Band Material	Stainless Steel
Buckle Material	Stainless Steel (Deployment Clasp With Safety)
Crystal Material	Glass
Case Diameter	29.8mm x 40.2mm (1.17in x 1.58in)
Case Thickness	9.7mm (0.38in)
Band Width	21.7mm (0.85in)
Watch Length	23cm (9.06in)
Weight	Approximately 84.4g
Water Resistance	30M (3ATM) - Splash/Rain Resistant
Functions	Time (12/24 hour), Date, Week, EL Light, Alarm, Stopwatch, Countdown Timer, Dual Time

8. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your FANMIS Classic Digital Sports Watch Model 1888, please refer to the retailer where the product was purchased or contact FANMIS customer service directly.

Please retain your proof of purchase for warranty claims.

For more information, you may visit the official FANMIS store: [FANMIS Store on Amazon](#)