

[Manuals.plus](#) /

› [VEPRAG](#) /

› Universal TV Remote Replacement Compatible for Most Brands LED LCD 3D HDTV Smart TV Remote Control User Manual

VEPRAG RC-G008

VEPRAG Universal TV Remote Control User Manual

Model: RC-G008



Image: Front view of the VEPRAG Universal TV Remote Control, showcasing its layout and buttons.

This manual provides comprehensive instructions for the setup, operation, and maintenance of your VEPRAG Universal TV Remote Control (Model RC-G008). This remote is designed to be compatible with a wide range of LED, LCD, 3D, HDTV, and Smart TVs from most major brands. Please read this manual carefully before first use to ensure proper functionality and to maximize your remote control's performance.

SETUP

Before using your new universal remote control, you will need to install batteries and program it to work with your television.

1. Battery Installation

The universal remote control requires two (2) AAA alkaline batteries (not included). Ensure correct polarity when inserting the batteries.

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Programming the Remote

There are two primary methods to program your VEPRAG Universal TV Remote Control:

Method 1: Brand Search (Automatic Programming)

This method allows the remote to automatically search for the correct code for your TV brand.

1. Ensure your TV is turned on.
2. Press and hold the corresponding brand button on the remote control (e.g., SAMSUNG, SONY, PHILIPS) for approximately 5 seconds.
3. The LED indicator on the remote will flash three times, indicating that the setting is complete.
4. Test the remote's functions (e.g., Power, Volume, Channel) with your TV. If it does not work, repeat the process or try Method 2.

Method 2: Set by Code (Manual Programming)

This method requires you to manually enter a 3-digit code specific to your TV brand from the provided code list.

1. Ensure your TV is turned on.
2. Press and hold the corresponding brand button on the remote control for approximately 3 seconds. Release the button when the LED indicator flashes three times.
3. Refer to the code list provided in the instruction manual (also shown in the image below) and enter the 3-digit code for your TV brand using the number buttons on the remote.
4. If the code is correct, the LED light on the remote will turn off. If the code is incorrect, the LED light will remain on, indicating an error. Try another code from the list for your brand.
5. Test the remote's functions with your TV.

RC-G008

UNIVERSAL REMOTE CONTROL LCD/LED TV REMOTE CONTROLLER

Operating Instruction

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.



Note on batteries

- Do not mix old batteries with ones or mix different types of batteries together.
- If the remote doesn't work in using process, please reinstall the batteries.
- When the remote control is not sensitive, please renew the batteries.

HOW TO SET UP YOUR REMOTE:

A. SET UP BY CODE

Step.1 Press [MUTE] + [POWER] buttons together for 3 sec until led light is lit, then release it.



Step.2 Input your 3 digit TV_CODE from code list. If the code is right, the LED light will go off. If the code is wrong, the LED light will still be on. If this happens, try to enter the code again as there may have been an error the first time.

BRAND	CODE LIST	TV
SAMSUNG	023,001,024,025,026,027	
SONY	028,002,030,029,031,032	
PHILIPS	033,003,034	
Panasonic	005,004,038,039,040,041,035,036,037	
SHARP	045,007,046,047,048,049,050,058,057,056,055,053,052,051	
TOSHIBA	059,008,060,061,062,063,064,065,066	
HITACHI	009,067	
VIZIO	068,010,069,070,071,072	
TCL	011,073,075,074,076	

BRAND	CODE LIST	TV
JVC	012,077,079,078,080,081	
HISENSE	013,014,049,050,058,057,056,055,054,053,052,051	
VESTEL	015	
SEIKI	016	
SANYO	017	
INSIGNIA	018	
MAGNAVOX	021,035,036,037	
RCA	019	
Haier	020	
WESTINGHOUSE	022	

Step.3 Please check the function of Remote. If it doesn't work well, please you can try one of the other codes and repeat the process from step 1.

NOTE: During setting process, if no key is pressed in 10 seconds it will exit automatically.

B. Brand Search



1). Turn on TV. Press the button of the corresponding brand for 5 sec, the LED flashes three times, then the setting is completed



Default Mode:

- Under the default setting, RC-G008 can directly control many brands, include LG/SAMSUNG/SONY/PHILIPS/PANASONIC/SHARP TV.
- Restore to the initial setting, please and hold the [OK] + [0] buttons about 3sec, the LED light will blink four times, now it is in initial setting.

Image: A section of the user manual detailing the "Set by Code" and "Brand Search" programming methods, including a table of 3-digit brand codes for various TV manufacturers.

OPERATING INSTRUCTIONS

Once programmed, your VEPRAG Universal TV Remote Control functions similarly to your original TV remote. Below are key features and operational notes.

Universal Compatibility

This remote is designed to be compatible with a wide range of TV brands, including but not limited to:

- Samsung, Sanyo, Vizio, Philips, Sharp, Insignia, Toshiba, TCL, Hisense, Panasonic, Magnavox, JVC, Hitachi, Westinghouse, Vestel, Seiki, Sony, Haier, RCA.



Compatible TV Brands

Samsung, TCL

Sony, Vizio, Sharp

Philips, Panasonic

JVC, Toshiba, Selki

Hitachi, Haier, RCA

Insignia, Sanyo

Westinghouse

Hisense

Image: The universal remote control displayed alongside a comprehensive list of compatible television brands.

Backlight Feature

The remote control is equipped with fluorescent buttons and stylish orange LED backlighting. This feature improves visibility, allowing you to easily see each button in dark or dimly lit rooms.



The remote control is equipped with fluorescent buttons.

Provides visibility for operating remote control buttons in dark environments at night.

Image: Close-up of the remote control, emphasizing the fluorescent buttons that glow for better visibility in low light.





Image: The remote control with its orange LED backlighting illuminated, showcasing the enhanced visibility of the buttons.

Important Notes

This universal remote control is specifically designed for televisions. It is **NOT** compatible with streaming devices, Roku Streaming Sticks, or TV Sticks.

MAINTENANCE

Proper care will extend the life of your remote control.

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
 - If the remote control is not sensitive, try removing and reinstalling the batteries.
- **Programming Issues (LED light remains on after code entry):**
 - This indicates an incorrect code was entered. Refer to the code list in the manual (or the image in the Setup section) and try another 3-digit code for your TV brand.
 - Ensure you are holding the brand button for the correct duration (3 seconds for manual code entry, 5 seconds for brand search).
- **Some Functions Not Working:**
 - While universal, some specific advanced functions might not be supported for all TV models.
 - Ensure the remote is pointed directly at the TV's IR receiver.
 - Re-program the remote using a different code for your TV brand, if available.

SPECIFICATIONS

Feature	Detail
Model	RC-G008
Brand	VEPRAG
Product Dimensions	6.6 x 1.5 x 0.7 inches
Item Weight	1.06 ounces
Batteries Required	2 AAA batteries (not included)
Special Feature	Backlit, Universal
Color	Black
Max Number of Supported Devices	2 (typically one TV, but can be programmed for another if compatible)
Compatible Devices	Television (LED, LCD, 3D, HDTV, Smart TV)

Feature	Detail
Manufacturer	VEPRAG

WARRANTY AND SUPPORT

For specific warranty information regarding your VEPRAG Universal TV Remote Control, please refer to the documentation included with your purchase or visit the official VEPRAG website. If you require further assistance or have questions not covered in this manual, please contact VEPRAG customer support through the channels provided on their official website or your retailer's support page.

Please retain your proof of purchase for any warranty claims.

© 2025 VEPRAG. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question