

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GOVO](#) /
- › [GOVO GOSURROUND 600 Soundbar User Manual](#)

GOVO GoSurround 600

GOVO GOSURROUND 600 Soundbar User Manual

Model: GoSurround 600

Brand: GOVO

1. INTRODUCTION

Thank you for purchasing the GOVO GOSURROUND 600 2.1 Channel Soundbar. This manual provides essential information for the safe and efficient use of your new audio system. Please read it thoroughly before operation and retain it for future reference.

Package Contents

Ensure all items listed below are present in your package:

- 1 x GOVO GOSURROUND 600 Soundbar
- 1 x Subwoofer
- 1 x Remote Control
- 1 x Aux Cable
- 1 x User Manual
- 1 x Warranty Card

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the device to rain, moisture, or extreme temperatures.
- Do not open the casing. Refer all servicing to qualified personnel.
- Keep the device away from direct sunlight, heat sources, and strong magnetic fields.
- Ensure proper ventilation around the soundbar and subwoofer.
- Use only the power adapter supplied with the unit.
- Disconnect the power plug during lightning storms or when unused for long periods.

3. PRODUCT OVERVIEW

The GOVO GOSURROUND 600 system consists of a soundbar and a wired subwoofer, designed to enhance your audio experience with 2.1 channel sound and deep bass.



Figure 3.1: The GOVO GOSURROUND 600 Soundbar and its accompanying wired subwoofer.

Soundbar Controls and Indicators

The soundbar features integrated controls and indicators for easy access. Specific button functions are detailed in the Operating Instructions section.

Remote Control

The included remote control provides full functionality for managing your soundbar settings, including power, volume, input selection, and equalizer modes.

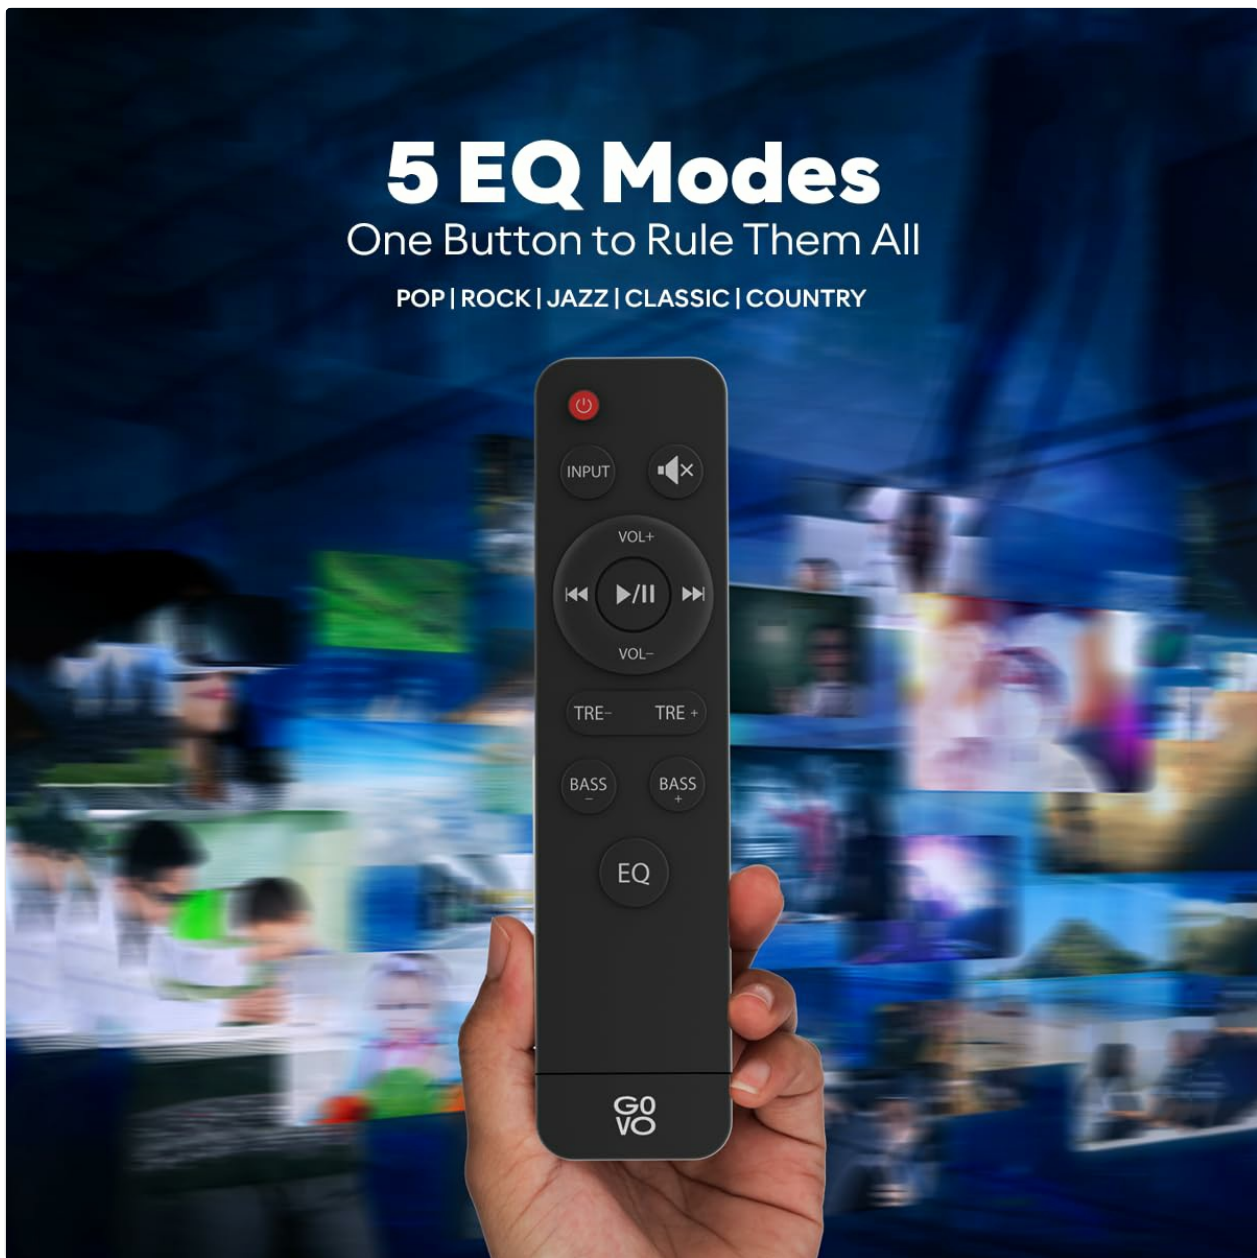


Figure 3.2: The remote control for the GOVO GOSURROUND 600 Soundbar, showing various function buttons.

4. SETUP

Follow these steps to set up your GOVO GOSURROUND 600 Soundbar system.

4.1 Placement

- Place the soundbar centrally below your television or display.
- Position the subwoofer on the floor near the soundbar, ensuring it has adequate space for sound dispersion.

Powerful Drivers. Crystal Sound

Bold Drivers. Bass Beast



Figure 4.1: Recommended placement of the soundbar in front of a television and the subwoofer beside it.

4.2 Connecting the Subwoofer

The subwoofer connects to the soundbar via a wired connection. Locate the dedicated subwoofer output port on the soundbar and the input port on the subwoofer. Connect them securely using the provided cable.

4.3 Power Connection

Connect the power adapter to the DC input port on the soundbar, then plug the adapter into a wall outlet. Ensure the power outlet is easily accessible.

Your Room. Your Sound

Designed to blend in. Tuned to stand out



Figure 4.2: Rear panel of the soundbar showing the HDMI, AUX, USB, SUB (subwoofer output), and DC power input ports.

5. OPERATING INSTRUCTIONS

This section details how to operate your GOVO GOSURROUND 600 Soundbar.

5.1 Power On/Off

- To power on, press the **Power** button on the remote control or the soundbar.
- To power off, press the **Power** button again. The soundbar will enter standby mode.

5.2 Volume Control

- Press **VOL+** on the remote to increase volume.
- Press **VOL-** on the remote to decrease volume.
- Press the **Mute** button to mute or unmute the sound.

5.3 Input Source Selection

Press the **INPUT** button on the remote control or the soundbar to cycle through available input sources:

Bluetooth, HDMI (ARC), AUX, and USB.

5.4 Equalizer (EQ) Modes

The soundbar features 5 preset equalizer modes to optimize audio for different content types. Press the **EQ** button on the remote to switch between:

- **Pop**
- **Rock**
- **Jazz**
- **Classic**
- **Country**

5.5 Bass and Treble Adjustment

Use the **BASS+** / **BASS-** and **TRE+** / **TRE-** buttons on the remote control to fine-tune the bass and treble levels according to your preference.

6. CONNECTIVITY

The GOVO GOSURROUND 600 offers multiple connectivity options for various devices.

6.1 Bluetooth Pairing (BT v5.3)

1. Power on the soundbar and select the Bluetooth input mode using the **INPUT** button. The indicator light will flash, indicating pairing mode.
2. On your mobile device, enable Bluetooth and search for "GOVO GOSURROUND 600" in the list of available devices.
3. Select the soundbar to pair. Once connected, the indicator light will stop flashing and remain solid.

6.2 HDMI (ARC) Connection

For optimal audio quality and control, connect your TV to the soundbar using an HDMI cable (not included) via the HDMI (ARC) port.

1. Connect one end of an HDMI cable to the HDMI (ARC) port on your TV.
2. Connect the other end to the HDMI (ARC) port on the soundbar.
3. Select HDMI input on the soundbar using the **INPUT** button.
4. Ensure your TV's HDMI ARC function is enabled in its audio settings.

6.3 AUX Connection

Use the provided 3.5mm AUX cable to connect devices with an analog audio output.

1. Connect one end of the AUX cable to the AUX port on the soundbar.
2. Connect the other end to the headphone jack or audio output port of your device.
3. Select AUX input on the soundbar using the **INPUT** button.

6.4 USB Playback

The soundbar supports audio playback from USB storage devices.

1. Insert a USB drive containing audio files into the USB port on the soundbar.
2. Select USB input on the soundbar using the **INPUT** button.

3. Playback will begin automatically. Use the remote control to navigate tracks.

7. MAINTENANCE

Proper care ensures the longevity and performance of your soundbar system.

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar and subwoofer. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a cool, dry place.
- **Ventilation:** Ensure that the speaker grilles and vents are not obstructed to prevent overheating.

8. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Check power cable connection; Try a different power outlet
No sound	Incorrect input source; Volume too low; Mute activated; Cables not connected properly	Select correct input source; Increase volume; Deactivate mute; Reconnect audio cables securely
Bluetooth pairing failed	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in BT mode and flashing; Move device closer; Turn off other Bluetooth devices
Remote control not working	Batteries depleted; Obstruction between remote and soundbar	Replace remote batteries; Remove any obstructions; Ensure remote is pointed at the soundbar's sensor
Subwoofer not producing bass	Subwoofer cable loose; Bass level set too low	Check and secure the subwoofer connection cable; Increase bass level using the remote control

9. SPECIFICATIONS

Technical specifications for the GOVO GOSURROUND 600 Soundbar system.

Model Name	GoSurround 600
Speaker Type	Soundbar with Subwoofer
Surround Sound Channel Configuration	2.1
Speaker Maximum Output Power	90 Watts

Subwoofer Diameter	4 Inches
Speaker Size (Soundbar)	2 Inches (2 x 2" speakers)
Wireless Communication Technology	Bluetooth v5.3
Connectivity Technology	Auxiliary, Bluetooth, HDMI (ARC), USB
EQ Modes	Pop, Rock, Jazz, Classic, Country
Control Method	Remote
Product Dimensions	20D x 12W x 33.5H Centimeters (Note: These dimensions likely refer to the subwoofer or packaging, as the soundbar is typically longer.)
Item Weight	2.8 kg
Material	Plastic
Power Source	Corded Electric

10. WARRANTY AND SUPPORT

The GOVO GOSURROUND 600 Soundbar comes with a **Limited Warranty**. Please refer to the included Warranty Card for detailed terms and conditions, including the warranty period and coverage.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact GOVO customer support. Contact information can typically be found on the warranty card or the official GOVO website.

Please retain your purchase receipt as proof of purchase for warranty services.