

# Olvy A10 Cordless Stick Vacuum Cleaner with Mop Function User Manual

Model: A10

## 1. INTRODUCTION

Thank you for choosing the Olvy A10 Cordless Stick Vacuum Cleaner with Mop Function. This appliance is designed for efficient cleaning of various floor types, offering both vacuuming and mopping capabilities. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.



*Image: The Olvy A10 Cordless Stick Vacuum Cleaner in its full assembly, alongside various attachments and the wall mount.*

## 2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

## 3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Unit (Handheld Vacuum)

- Adjustable Extension Tube
- Floor Brush Head
- Removable Battery
- Water Tank (for mopping)
- Mop Pad
- 2-in-1 Brush Tool
- Crevice Tool
- Wall Mount Bracket
- Power Adapter
- Replacement HEPA Filter (2x)
- User Manual

## Makkelijk verplaatsen en opbergen

 Lichtgewicht

Wandbeugel



Zelfstaand



*Image: A visual representation of all components included with the Olvy A10 Cordless Stick Vacuum Cleaner.*

## 4. PRODUCT OVERVIEW

The Olvy A10 features a powerful 350W motor providing up to 35,000 Pa suction, an integrated mop function, and a multi-stage HEPA filtration system. It includes an intelligent LED display for monitoring status and an auto-mode for adaptive cleaning.

### Key Features:

- **Powerful Suction:** 350W motor with 35,000 Pa for deep cleaning on various surfaces.
- **2-in-1 Functionality:** Seamlessly switch between vacuuming and mopping.
- **Intelligent LED Display:** Provides real-time information on battery level, suction mode, and dust concentration.
- **Auto Mode:** Automatically adjusts suction power based on detected dirt levels.
- **HEPA 13 Filtration:** Captures 99.99% of fine particles, suitable for allergy sufferers.
- **Long Run Time:** Up to 60 minutes on a single charge with a 2200 mAh removable battery.
- **Lightweight and Versatile:** Easy to maneuver and convert into a handheld vacuum for various cleaning tasks.

## Meervoudige HEPA-filtratie

Filtert 99,99% van de deeltjes voor schone en gezondere lucht



*Image: Close-up of the intelligent LED display showing battery indicator, low power warning, auto mode, dust concentration, and control panel.*



*Image: The LED display indicating 'Auto-mode' and the current power level during operation.*

## 5. SETUP AND ASSEMBLY

### 5.1 Initial Charging

Before first use, fully charge the battery. The battery takes approximately 4-5 hours to fully charge.

1. Remove the battery from the main unit by pressing the release button.
2. Connect the power adapter to the charging port on the battery.
3. Plug the adapter into a power outlet. The battery indicator on the LED display will show charging status.
4. Once fully charged, disconnect the adapter.

## Alles-in-één Slimme LED Scherm



*Image: The removable battery unit, highlighting its 2200 mAh capacity, 4-5 hour charging time, and up to 60 minutes run time.*

### 5.2 Assembling the Vacuum Cleaner


1. **Attach the Battery:** Slide the charged battery into the main unit until it clicks into place.
2. **Attach the Extension Tube:** Connect the adjustable extension tube to the main unit. Ensure it clicks securely.
3. **Attach the Floor Brush:** Connect the floor brush head to the other end of the extension tube.

4. **Install Wall Mount (Optional):** Choose a suitable location for the wall mount. Secure it to the wall using the provided screws and anchors. This allows for convenient storage and charging.

## **Slimme LED-verlichting** onthult zelfs de donkerste hoekjes



**Flexibele reiniging onder alle meubels in huis**

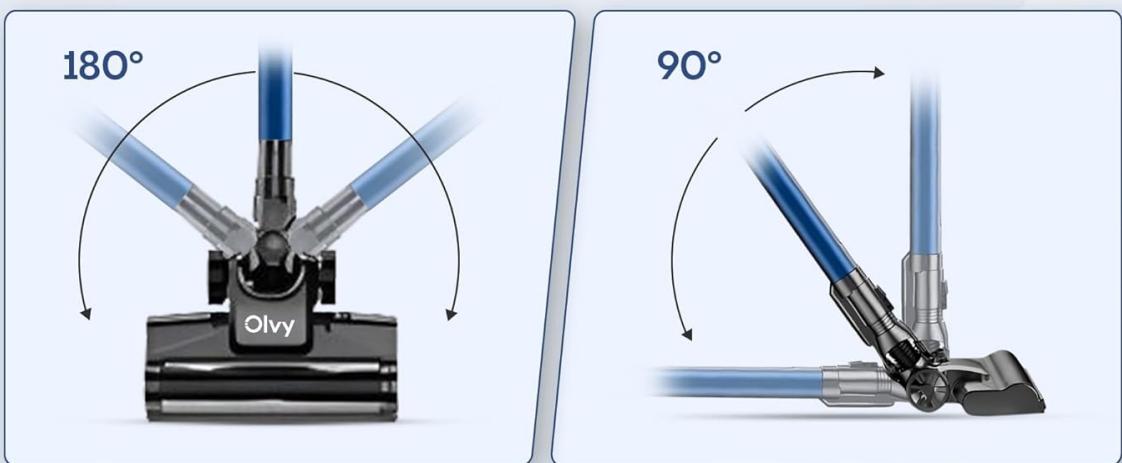

*Image: The vacuum cleaner demonstrating both wall-mounted storage and self-standing capability.*

## **6. OPERATING INSTRUCTIONS**

### **6.1 Basic Operation**

1. **Power On/Off:** Press the power button on the main unit to turn the vacuum cleaner on or off.
2. **Adjust Suction Power:** The vacuum offers 5 suction levels. Use the control panel on the LED display to cycle through the power modes (Low, Normal, High, Turbo).
3. **Auto Mode:** Activate the intelligent auto mode for automatic suction adjustment based on dirt detection. The LED display will show 'Auto' when this mode is active.

# De meest complete 2-in-1 steelstofzuiger

Alles wat je nodig hebt voor een zorgeloze schoonmaak



**Olvy**  
**A10 Cordless Vacuum Cleaner**  
Clean Smarter, Not Harder



Watertank



Wandbeugel



Hoofdapparaat




Verstelbare buis



Vloerborstel



Accu

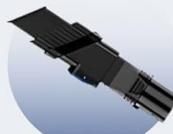

2-in-1 borstel



Kierenzuiger



Hepa-filter (2x)



Dweilmop



Adapter



Handleiding

*Image: The vacuum cleaner demonstrating its 4 suction levels (Low, Normal, High, Turbo) and intelligent auto mode, which adapts to dirt levels.*

## 2-in-1 Steelstofzuiger met Dweilfunctie

Moeiteloos stofzuigen én dweilen voor een stralend  
schone vloer



*Image: A user operating the Olvy A10, showcasing its powerful 350W motor and 35,000 Pa suction for effective cleaning of various debris like hair, dust, crumbs, and sand.*

### 6.2 Using the Mop Function

The integrated mop function allows for simultaneous vacuuming and wet cleaning of hard floors.

- 1. Fill Water Tank:** Detach the water tank from the floor brush head. Fill it with clean water. Do not use corrosive liquids or detergents that may damage the tank or floor.
- 2. Attach Mop Pad:** Securely attach the mop pad to the bottom of the water tank.
- 3. Reattach Water Tank:** Reinstall the filled water tank onto the floor brush head.
- 4. Begin Mopping:** Operate the vacuum cleaner as usual. The mop pad will dampen the floor as you vacuum, providing a streak-free clean.



Oplaadtijd  
4-5 uur



2200 mAh



Werkduur tot **60 minuten**

## Verwijderbare Accu

*Image: A detailed view of the 2-in-1 stick vacuum with mop function, showing water being dispensed for simultaneous vacuuming and mopping on a hard floor.*



*Image: The mop function of the Olvy A10 actively cleaning a hard floor, demonstrating its effectiveness in removing dirt and leaving a clean surface.*

### 6.3 Using Attachments

- **2-in-1 Brush Tool:** Ideal for cleaning upholstery, curtains, and delicate surfaces.
- **Crevice Tool:** Perfect for reaching tight spaces, corners, and edges.
- To use, detach the extension tube and connect the desired attachment directly to the main unit.


## De stofzuiger past zich vanzelf aan het vuil en de ondergrond aan

Slimme sensoren herkennen de vuilste plekken en pakken die grondig aan, geen plekje wordt overgeslagen



*Image: The Olvy A10 being used in different configurations, including as a stick vacuum for floors, a handheld for high areas, and for cleaning under furniture.*

# Waarom kiezen voor Olvy ?

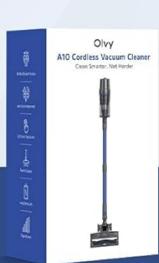

**Olvy**

**Anderen**

2-in-1 Steelstofzuiger en Dweil

Alleen stofzuiger

35KPA Zuigkracht

25 KPA zuigkracht

Langdurig gebruik

Gaat snel leeg

Inclusief 2 HEPA Filters

Slechts 1 HEPA-filter

Stille werking

Luidruchtig

5 zuigniveaus

2 zuigniveaus

Geschikt voor alle oppervlakten

Beperkt tot enkele oppervlakken

*Image: The vacuum's LED lighting revealing hidden dust particles on the floor, and diagrams illustrating its 180° and 90° flexible head rotation for cleaning under furniture.*

## 7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Olvy A10 vacuum cleaner.

### 7.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the 'Dust Concn' indicator on the LED display shows high concentration.

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach it from the main unit.
3. Hold the dustbin over a trash can and press the bottom release latch to open the lid and empty the contents.

4. Close the lid and reattach the dustbin to the main unit.

## Eén klik

Efficiënt stof verwijderen was nog nooit zo makkelijk!



Grote **0,8L** Stof capaciteit

*Image: The dustbin being emptied with a single click, demonstrating its large 0.8L capacity.*



*Image: A user washing the dustbin under running water, illustrating the washable components for easy cleaning.*

## 7.2 Cleaning the Filters

The Olvy A10 uses a multi-stage filtration system, including an HEPA filter, which should be cleaned regularly.

1. Remove the dustbin.
2. Twist and pull out the filter assembly (HEPA filter, dust filter, stainless steel filter).
3. Tap off loose dirt from each filter component.
4. Rinse the filters under cold running water. Do not use hot water or detergents.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.
6. Reassemble the filters and place them back into the dustbin, then reattach the dustbin to the main unit.

## Veelzijdige en betrouwbare

stofzuiger met hoge zuigkracht



*Image: A cutaway diagram illustrating the multi-stage HEPA filtration system, including the dustbin filter, stainless steel filter, dust filter, HEPA air filter, and air outlet filter.*

## 7.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

1. Turn off the vacuum cleaner.

2. Press the release tab on the side of the floor brush head to remove the brush roll cover.
3. Lift out the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and secure the cover.

## 7.4 Cleaning the Mop Pad

After each use of the mop function, remove and clean the mop pad.

1. Detach the mop pad from the water tank.
2. Rinse the mop pad under running water or machine wash it with mild detergent.
3. Allow the mop pad to air dry completely before storing or reusing.

## 8. TROUBLESHOOTING

If you encounter any issues with your Olvy A10, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Charge the battery fully. Ensure the battery is securely clicked into the main unit.
Low suction power	Dustbin is full. Filters are clogged. Brush roll is tangled. Obstruction in the nozzle or tube.	Empty the dustbin. Clean all filters thoroughly and ensure they are dry. Remove any hair or debris from the brush roll. Check for and remove any blockages.
Brush roll not spinning	Brush roll is tangled or jammed.	Turn off the vacuum. Remove the brush roll and clear any obstructions.
Mop function not working	Water tank is empty or not properly installed. Mop pad is dry.	Fill the water tank. Ensure the water tank is securely attached to the floor brush. Dampen the mop pad slightly before use if needed.
Short run time	Battery not fully charged. Using high suction mode continuously. Battery degradation.	Ensure battery is fully charged. Use lower suction modes for longer run time. If battery life significantly decreases, consider replacing the battery.

## 9. SPECIFICATIONS

Feature	Specification
Brand	Olvy
Model Number	A10
Color	Black
Product Dimensions	32 x 19 x 32 cm
Weight	5 kg
Motor Power	350W
Suction Power	Up to 35,000 Pa
Number of Speeds	5 (including Auto Mode)
Noise Level	55 Decibels
Run Time	Up to 1 hour (60 minutes)
Battery Capacity	2200 mAh
Charging Time	4-5 hours
Filter Type	HEPA 13 (Washable)
Dustbin Capacity	0.8L
Power Source	Battery
Recommended Surfaces	All floors (carpets, hard floors)
Special Features	2-in-1 Vacuum & Mop, LED Display, Auto Mode, Pet-friendly, Lightweight

## 10. WARRANTY AND SUPPORT

Olvy products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Olvy website. Please retain your proof of purchase for warranty claims.