

[Manuals.plus](#) /

› [HAUSMEISTER](#) /

› HAUSMEISTER Hydroflex Portable Carpet Cleaner Machine User Manual

HAUSMEISTER Hydroflex

HAUSMEISTER Hydroflex Portable Carpet Cleaner Machine

USER MANUAL

Model: Hydroflex | Brand: HAUSMEISTER

Introduction

The HAUSMEISTER Hydroflex Portable Carpet Cleaner Machine is designed for deep cleaning of carpets, upholstery, and car interiors. Its 500W motor provides powerful suction to lift pet stains, accidents, and embedded odors. This manual provides instructions for safe and effective use, maintenance, and troubleshooting.

Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the electrical outlet before cleaning or servicing.
- Do not immerse the appliance in water or other liquids.
- Use only cleaning products recommended for carpet and upholstery cleaners.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without tanks in place.
- Do not use if the cord or plug is damaged. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- This appliance is for household use only.

Package Contents

- HAUSMEISTER Hydroflex Portable Carpet Cleaner Machine
- 3 Brush Heads (for multi-surface and auto detailing)
- User Manual

Setup Instructions

1. Fill the Clean Water Tank:

Remove the clean water tank (480ml capacity) from the unit. Fill it with clean water and a suitable carpet cleaning solution according to the solution's instructions. Do not overfill past the MAX line.



Image: A person filling the clean water tank of the cleaner under a kitchen faucet. The tank is transparent green.

2. Attach a Brush Head:

Select the appropriate brush head for your cleaning task (e.g., for carpets, upholstery, or car seats) and securely attach it to the nozzle of the cleaner.



STAIN-BUSTER SPRAY

Built-in spray helps to loosen and lift away tough stains

Image: The Hausmeister Hydroflex cleaner shown with three detachable brush heads, highlighting its versatility.

3. **Connect to Power:**

Plug the power cord into a suitable electrical outlet. Ensure the power switch is in the OFF position before plugging in.

Operating Instructions

1. **Pre-Treat (Optional):**

For tough stains, you may pre-treat the area with a suitable cleaning solution before using the machine. Follow the pre-treatment product's instructions.

2. **Turn On the Machine:**

Flip the power switch to the ON position. The machine will start to operate.

3. **Spray Cleaning Solution:**

Press the spray button located on the handle to dispense cleaning solution onto the stained area. Ensure even coverage.



SPACE-SAVING DESIGN

Small enough to fit easily into your cleaning cupboard

Image: A close-up view of the cleaner's handle, showing the spray button for dispensing cleaning solution.

4. **Scrub and Extract:**

Move the cleaner slowly over the wet area, applying gentle pressure. The brush head will scrub the fibers, and the powerful suction will extract the dirty solution into the dirty water tank. Make overlapping passes for best results.



Image: The Hausmeister Hydroflex cleaner actively removing a pet stain from a carpet, with a small dog observing nearby.



VERSATILE CLEANING

Tackles carpets, hard floors and upholstery effortlessly

Image: A collage showing the cleaner being used on different surfaces: a carpet, a sofa, and a hard floor with a spill, demonstrating its versatile cleaning capabilities.



480ml (clean)
water tank

900ml (dirty)
water tank

Spray
button

5 metre
power cable

Image: The Hausmeister Hydroflex cleaner being used to clean a car seat, highlighting its utility for auto detailing.

Your browser does not support the video tag.

Video: A demonstration of the Hausmeister Hydroflex Portable Carpet Cleaner Machine in action, showing its effectiveness on various surfaces.

5. Repeat if Necessary:

For heavily soiled areas, you may need to repeat the spraying and extraction process until the area is clean.

6. Allow to Dry:

After cleaning, allow the treated area to dry completely. The low-water system helps ensure fast drying times.

Maintenance

1. Empty and Clean Dirty Water Tank:

After each use, turn off and unplug the machine. Remove the dirty water tank (900ml capacity) and empty its contents. Rinse the tank thoroughly with clean water.

WEIGHT: 2.5KG



Image: A person demonstrating how to remove and empty the dirty water tank from the cleaner.

2. Clean Brush Heads:

Remove the brush head(s) and rinse them under clean water to remove any debris or residue. Allow them to air dry before reattaching or storing.

3. Self-Cleaning Function:

The machine features a self-cleaning function. Refer to the specific instructions in the product packaging for how to activate and use this feature for internal cleaning.

4. Storage:

Store the clean and dry machine in a cool, dry place. Its compact size allows for easy storage in closets or small spaces.



Image: The Hausmeister Hydroflex cleaner neatly stored inside a cupboard, demonstrating its space-saving design.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure unit is securely plugged in; turn power switch ON; check circuit breaker.
No spray or reduced spray.	Clean water tank empty; spray nozzle clogged.	Refill clean water tank; clean spray nozzle.
Reduced suction.	Dirty water tank full; dirty water tank not properly seated; nozzle clogged.	Empty dirty water tank; re-seat dirty water tank; clear any clogs from the nozzle.
Water leaking.	Tanks not properly seated; tank seals damaged.	Ensure both tanks are securely in place; check tank seals for damage and replace if necessary.

Specifications

Feature	Detail
Brand	HAUSMEISTER
Model Name	Hydroflex
Power	500W
Clean Water Tank Capacity	480ml (approx. 16.2 fl oz)
Dirty Water Tank Capacity	900ml (approx. 30.4 fl oz)
Item Weight	7 Pounds (approx. 3.17 kg)
Power Source	AC
Color	Blue
UPC	762949851388

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact HAUSMEISTER customer service. Keep your proof of purchase for warranty claims.

Online support and contact information may be available on the official HAUSMEISTER website.