

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Comfort Direct](#) /
- › [Comfort Direct Bradbury Ceiling Fan Remote Control User Manual \(Model CDTR214D\)](#)

Comfort Direct CDTR214D

Comfort Direct Bradbury Ceiling Fan Remote Control User Manual

Model: CDTR214D | Brand: Comfort Direct

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Comfort Direct Bradbury Ceiling Fan Remote Control (Model CDTR214D). Please read this manual thoroughly before use to ensure proper functionality and safety. This remote is designed for use with specific Harbor Breeze Bradbury Ceiling Fan models, including BRD48MBK6LR, BRD48BNK6LR, BRD48OSB6LR, BRD48MWW6LR, BRD60MBK6LR, BRD60BNK6LRS, and BRD60OSB6LR.

SAFETY INFORMATION

Always ensure the power to the ceiling fan is turned off at the circuit breaker before performing any installation or maintenance. Do not expose the remote control to water or excessive moisture. Keep batteries out of reach of children. Dispose of used batteries responsibly.

PACKAGE CONTENTS

- 1 x Comfort Direct Bradbury Ceiling Fan Remote Control
- 1 x Wall Mount Holder
- 2 x Mounting Screws



Image: The remote control, its wall mount holder, and two mounting screws, illustrating the complete package contents.

SPECIFICATIONS

Model Number	CDTR214D
Product Dimensions	2 x 1 x 4 inches
Item Weight	6 ounces
Battery Requirement	1 x 23A 12V battery (not included)
Special Feature	Radiofrequency (RF) control

Compatible Devices	Harbor Breeze Bradbury Ceiling Fans (BRD48MBK6LR, BRD48BNK6LR, BRD48OSB6LR, BRD48MWW6LR, BRD60MBK6LR, BRD60BNK6LRS, BRD60OSB6LR)
---------------------------	--

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert one 23A 12V battery, ensuring the polarity (+/-) matches the diagram inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: The rear view of the remote control with the battery cover removed, revealing the battery compartment for a 23A 12V battery.

2. Pairing the Remote Control with Your Ceiling Fan

Important: Only one remote can be programmed per fan. You cannot use two separate remotes to control the same fan.

1. **Turn Power Off To Fan:** Ensure the power supply to your ceiling fan is completely off at the wall switch or circuit breaker.
2. **Turn Power Back On To Fan:** Restore power to the ceiling fan.
3. **Press and Hold "0" Key:** Within 30 seconds of restoring power, press and hold the "0" button on your remote control for 5 seconds. The fan light should blink or the fan should briefly turn on to indicate successful pairing.



Image: Visual guide for the remote pairing process, showing the three key steps.

3. Wall Mount Installation

The included wall mount holder allows for convenient storage of your remote control.

1. Choose a suitable location on a wall, away from direct sunlight or heat sources.

2. Use the two provided screws to securely attach the wall mount holder to the wall.
3. Place the remote control into the holder for easy access.

SEAMLESS HOME INTEGRATION

Comfort in Every Room



COMFORT DIRECT



Great for Any Room

Perfect for living rooms or bedrooms.

Easy Access Anywhere

Use it in any room, anytime.

Wall Mount Option

Install it easily on your wall.

Blends With Any Décor

Matches modern, cozy, or minimal spaces.

Image: The remote control securely placed in its wall mount holder, demonstrating its convenient placement on a wall.

OPERATING INSTRUCTIONS

Once paired, your remote control provides full control over your compatible ceiling fan and its light.



Image: Front view of the remote control, showing the fan speed buttons (1, 2, 3, 0) and the light control button.

Fan Speed Control

- Press "1" for Low fan speed.

- Press **"2"** for Medium fan speed.
- Press **"3"** for High fan speed.
- Press **"0"** to turn the fan off.

Light Control with Dimming

- Press the **Light Button** (usually depicted as a light bulb icon) to turn the fan light On or Off.
- To dim the light, press and hold the **Light Button**. Release the button when the desired brightness level is reached.

MAINTENANCE

Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is likely time to replace the battery. Follow the battery installation steps outlined in the "Setup" section to replace the 23A 12V battery. Ensure proper disposal of the old battery according to local regulations.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the battery is correctly installed and has sufficient charge. Replace the battery if necessary.
 - Ensure the remote is within range of the fan's receiver.
 - Re-attempt the pairing process as described in the "Setup" section.
- **Fan or light not responding after pairing:**
 - Verify that the power to the fan is on at the wall switch or circuit breaker.
 - Confirm that the remote was successfully paired (fan light blink or brief fan operation). If not, repeat the pairing steps carefully.
 - Ensure no other remote is attempting to control the same fan, as only one remote can be paired per fan.



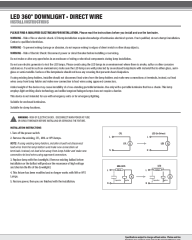
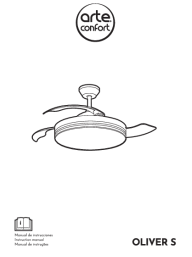


WARRANTY

This Comfort Direct Bradbury Ceiling Fan Remote Control comes with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For warranty service, please contact Comfort Direct customer support.

SUPPORT

For further assistance, technical support, or inquiries regarding your Comfort Direct Bradbury Ceiling Fan Remote Control, please visit the Comfort Direct website or contact their customer service department. Contact information can typically be found on the product packaging or the official Comfort Direct website.

Related Documents - CDTR214D

	<p>Hampton Bay Comfort Breeze Remote Control Use and Care Guide</p> <p>This guide provides instructions for the use, care, and installation of the Hampton Bay Comfort Breeze remote control for ceiling fans. It includes safety information, warranty details, troubleshooting tips, and operating instructions.</p>
	<p>Hampton Bay Thermostatic Remote Control User and Care Guide</p> <p>A comprehensive guide for the Hampton Bay Thermostatic Remote Control, covering installation, operation, and troubleshooting for your ceiling fan.</p>
	<p>LED 360° Downlight - Direct Wire Installation Instructions</p> <p>Comprehensive installation instructions for the Sunco Lighting LED 360° Downlight (Direct Wire), covering safety precautions, wiring diagrams, and installation steps for replacing CFL, MHL, or HPS lamps.</p>
	<p>Arteconfort OLIVER S Ceiling Fan - Installation, Operation, and Maintenance Manual</p> <p>Comprehensive user guide for the Arteconfort OLIVER S ceiling fan. Learn about safe installation, remote control functions, troubleshooting common issues, maintenance tips, and warranty information. Enhance your home comfort with this modern ceiling fan.</p>
	<p>Installation and Operation Manual: Universal Smart Wi-Fi Ceiling Fan Remote Control</p> <p>Comprehensive guide for installing and operating the Universal Smart Wi-Fi Ceiling Fan Remote Control (Model 99434), including remote functions, app integration, and safety information.</p>
	<p>Sunco 2x2 LED Ceiling Panel Installation Manual</p> <p>Installation manual for the Sunco 2x2 LED Ceiling Panel light fixture, detailing included hardware, step-by-step installation, technical specifications, safety warnings, and FCC compliance information.</p>