

Comfort Direct CDTR214D

Reidsport Ceiling Fan Remote Control Instruction Manual

Model: CDTR214D | Brand: Comfort Direct

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Reidsport Ceiling Fan Remote Control. Please read this manual thoroughly before use to ensure proper function and safety.



Image: Front view of the Reidsport Ceiling Fan Remote Control, showing the power button and fan speed buttons (0, 1, 2, 3).

SAFETY INFORMATION

Always observe the following safety precautions:

- Ensure power is turned off at the circuit breaker before performing any installation or maintenance.
- Do not expose the remote control to water or excessive humidity.
- Use only the specified battery type (12V 23A).
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Reidsport Ceiling Fan Remote Control
- Wall Mount Holder
- Mounting Screws (2)



Image: The remote control, its wall mount holder, and two mounting screws, indicating the complete package contents.

SPECIFICATIONS

Feature	Detail
Model Number	CDTR214D
Product Dimensions	2 x 1 x 4 inches
Item Weight	6 ounces

Battery Type	1 x 12V 23A (not included)
Compatible Devices	Harbor Breeze Reidsport Ceiling Fans (RDS44MBK5LR, RDS44BNK5LR, RDS44MW5LR, RDS52MBK6LR, RDS52BNK6LR, RDS52MW6LR)
Special Feature	Radiofrequency (RF) Control

SETUP AND PAIRING

1. Battery Installation

The remote control requires one 12V 23A battery (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert one 12V 23A battery, ensuring the correct polarity (+ and -).
4. Slide the battery cover back into place until it clicks securely.

FCC ID
2AQZU-18018



Image: Rear view of the remote control with the battery compartment open, showing where to insert the 12V 23A battery.

2. Pairing with Ceiling Fan Receiver

Follow these steps to pair the remote control with your existing ceiling fan receiver:

1. **Turn Power Off To Fan:** Locate the circuit breaker or wall switch that controls power to your ceiling fan and turn it OFF. Ensure the fan is completely powered down.



Image: A hand turning off a wall light switch, illustrating the first step of cutting power to the fan.

2. **Turn Power Back On To Fan:** After a few seconds, turn the power back ON to the ceiling fan.
3. **Press and Hold "0" Key:** Within 30 seconds of restoring power, press and hold the "0" key on the remote control for 5 seconds. The fan light should blink or the fan should respond, indicating successful pairing.



Image: A close-up of the remote control, with the "0" button highlighted, indicating the button to press for pairing.

If pairing is unsuccessful, repeat the steps. Ensure the remote control is within range of the fan receiver during the pairing process.

SUPER SIMPLE PAIRING PROCESS

1. POWER OFF FAN
2. POWER ON FAN
3. PRESS & HOLD "0"
KEY FOR 5 SECONDS



Image: The remote control securely placed in its wall mount holder, positioned on a wall near a ceiling fan, illustrating the ease of access after setup.

OPERATING INSTRUCTIONS

The remote control provides comprehensive control over your ceiling fan's functions.

- **Power Button (Top Button):** Press to turn the fan light ON or OFF. Press and hold to dim the fan light.
- **Fan Speed Buttons (1, 2, 3, 0):**
 - "1": Sets fan speed to Low.
 - "2": Sets fan speed to Medium.
 - "3": Sets fan speed to High.
 - "0": Turns the fan OFF.

ALL-IN-ONE FAN REMOTE



Full Speed + Light Control

Dim the Light with One Tap

Works with Multiple Models

Full Speed + Light Control

C
COMFORT DIRECT



Image: The remote control displayed alongside icons and text describing its functions: full speed control, light control, dimming, and compatibility with multiple fan models.

MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the 12V 23A battery when the remote's range decreases or it becomes unresponsive. Dispose of old batteries according to local regulations.
- **Storage:** Store the remote control in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Remote control not responding.	Dead or incorrectly installed battery.	Replace the 12V 23A battery, ensuring correct polarity.
Remote control not pairing with fan.	Incorrect pairing procedure or power interruption.	Repeat the pairing steps carefully (Power Off, Power On, Hold "0" for 5 seconds). Ensure power is completely cycled.
Limited range or intermittent control.	Low battery or interference.	Replace battery. Ensure no major obstructions between remote and fan receiver.
Fan light not dimming.	Fan receiver or light kit does not support dimming.	Verify your ceiling fan's specifications for dimming compatibility.

WARRANTY AND SUPPORT

This product comes with a **1 Year Manufacturer Warranty**.
For technical support or warranty claims, please contact Comfort Direct customer service. Refer to your purchase documentation for contact details or visit the official Comfort Direct website.
Note: The warranty does not cover damage caused by improper installation, misuse, or unauthorized modifications.