

[manuals.plus](#) /

› [WantJoin](#) /

› [WantJoin WZQPJK86001BKUS01 5-in-1 Electric Food Processor and Vegetable Chopper User Manual](#)

## WantJoin WZQPJK86001BKUS01

# WantJoin WZQPJK86001BKUS01 5-in-1 Electric Food Processor and Vegetable Chopper

User Manual

## INTRODUCTION

---

Thank you for choosing the WantJoin WZQPJK86001BKUS01 5-in-1 Electric Food Processor and Vegetable Chopper. This versatile appliance is designed to simplify food preparation by offering multiple functions including slicing, dicing, and shredding. Please read this manual thoroughly before first use to ensure safe and efficient operation.



Image 1: The WantJoin 5-in-1 Electric Food Processor in operation, shredding carrots. Various cutting attachments are visible on the side.

## IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the magnetic safety switch is in the locked position before operating the machine.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use only attachments and accessories recommended by the manufacturer.
- Avoid contact with moving parts.
- Ensure the appliance is placed on a stable, flat, and dry surface during use. The base features silicone anti-skid suction cups

for stability.

# STABLE & SAFE

## Anti-Slip Base, Large Feed Chute



Image 2: The food processor demonstrating its large feed chute for whole ingredients and the non-slip suction cups on its base for stability.

### PRODUCT COMPONENTS

The WantJoin 5-in-1 Electric Food Processor includes the following main components:

- Motor Base: Contains the 100W 4000RPM copper motor.

- Feed Chute: Large, removable chute for inserting ingredients.
- Lid with Safety Switch: Ensures safe operation when closed.
- Blade Assembly: Various interchangeable stainless steel blades for different cutting styles.
- Pusher: For safely guiding ingredients into the blades.
- Cleaning Tools: Brushes and specialized tools for easy cleanup.



Image 3: An internal diagram of the food processor highlighting the 100W 4000RPM electric motor and the thickened 420 stainless steel blades.

## SETUP AND ASSEMBLY

---

Before first use, wash all removable parts (feed chute, lid, blades, pusher) with warm soapy water, rinse thoroughly, and dry. The motor base should be wiped clean with a damp cloth.

1. Place the motor base on a stable, flat surface.
2. Select the desired blade for your cutting task (e.g., 2.5mm slicing, 6x6mm dicing, 2.5mm shredding).
3. Carefully place the chosen blade onto the central shaft in the motor base. Ensure it is securely seated.
4. Attach the lid, ensuring the magnetic safety switch aligns and locks into position. The machine will not operate if the lid is not correctly secured.
5. Insert the feed chute into the opening on the lid.
6. Plug the appliance into a 110-120V power outlet.

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly process of the WantJoin Food Processor, including how to install different blades and secure the lid and feed chute.

## OPERATING INSTRUCTIONS

---

The food processor is designed for efficient processing of various vegetables and fruits. It can process up to 300 pounds per hour.

### General Operation:

1. Ensure the appliance is properly assembled and plugged in.
2. Place a container beneath the output chute to collect processed food.
3. Turn on the appliance using the one-touch switch.
4. Carefully insert ingredients into the feed chute. For larger items, the large feed chute allows for whole ingredients without pre-cutting.
5. Use the pusher to gently guide ingredients towards the blades. Do not force ingredients.
6. Once processing is complete, turn off the appliance and unplug it before disassembling or cleaning.

### Blade Functions:

- **Slicing (2.5mm):** Ideal for cucumbers, potatoes, and other vegetables requiring thin, uniform slices.
- **Dicing (6x6mm, 8x8mm, 12x12mm):** Perfect for carrots, potatoes, onions, and other ingredients needing precise cubes.
- **Shredding (2.5mm):** Suitable for creating fine shreds of carrots, zucchini, or cabbage.

# 5 IN 1 FUNCTIONS

Slice, Dice  
Chop in Seconds



Image 4: This image illustrates the five different cutting functions of the food processor, including various sizes for dicing, slicing, and shredding.

Your browser does not support the video tag.

Video 2: This video showcases the 5-in-1 vegetable chopper in action, demonstrating its ability to slice, dice, and shred various vegetables efficiently.


## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your food processor.


1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: feed chute, lid, pusher, and blades.
3. Hand wash all removable parts with warm, soapy water. Use the provided cleaning brushes to remove any food residue from the blades and dicing grids.
4. The motor base should be wiped clean with a damp cloth. Do not immerse it in water.
5. Ensure all parts are thoroughly dry before reassembling or storing.
6. Store the blades safely to prevent accidental cuts.

# EASY TO USE

Removable for Cleaning  
Cleaning Tool Included

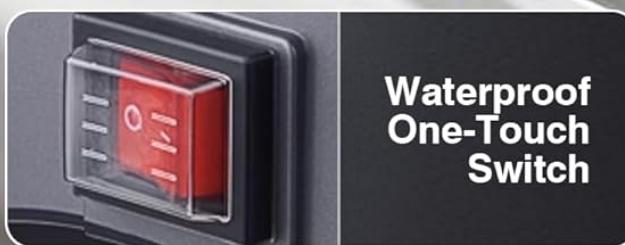

Waterproof  
One-Touch  
Switch

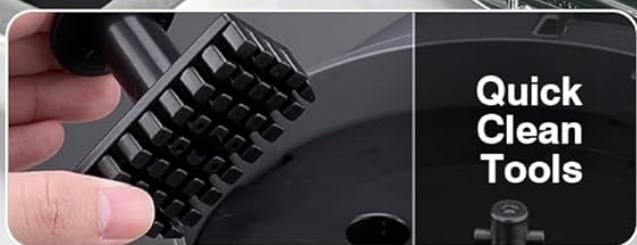

Quick  
Clean  
Tools

Image 5: The image shows the easy cleaning process of the food processor, with removable parts being rinsed under a faucet and specialized cleaning tools for thorough maintenance.

## TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; safety switch not engaged; power outage.	Ensure power cord is securely plugged in. Check that the lid is properly closed and the magnetic safety switch is engaged. Verify power supply.
Food is not processed evenly.	Incorrect blade selection; ingredients too large or too small; forcing ingredients.	Ensure the correct blade is installed for the desired cut. Cut larger ingredients into manageable pieces if necessary. Do not force ingredients; use gentle, even pressure with the pusher.
Motor sounds strained or stops.	Overloading the appliance; hard ingredients.	Reduce the amount of food being processed at once. For very hard vegetables, consider pre-boiling slightly or cutting into smaller pieces. Turn off and unplug, then clear any blockages.

## SPECIFICATIONS

---

- **Model Name:** WZQPJK86001BKUS01
- **Power:** 100W
- **Voltage:** 110-120V
- **Motor Speed:** 4000 RPM
- **Material:** Thickened 420 Stainless Steel Blades, Durable Metal Body
- **Product Dimensions:** 11.81"D x 10.63"W x 14.96"H (approximately 30cm D x 27cm W x 38cm H)
- **Item Weight:** 8.79 pounds (approximately 4 kg)
- **Product Care:** Hand Wash (removable parts)
- **Special Feature:** Adjustable Thickness (implied by multiple blade sizes)

# PRODUCT INFORMATION

9.45 x 8.07 x 13.98inch | 100W 4000RPM


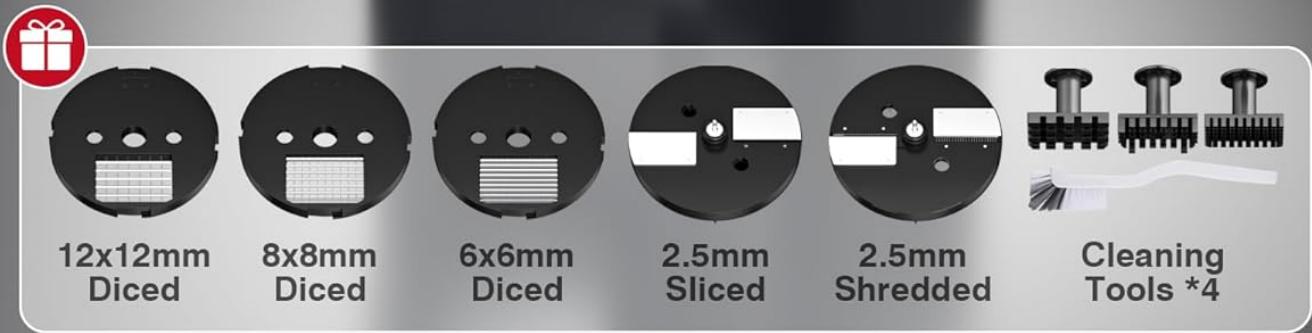


Image 6: Detailed product information including dimensions and a visual representation of the various dicing, slicing, and shredding blades, along with cleaning tools.

## WARRANTY AND SUPPORT

The WantJoin WZQPK86001BKUS01 Electric Food Processor comes with a one-year coverage. For any issues or technical assistance, please contact our professional one-on-one technical support team. Refer to your purchase documentation for contact details.

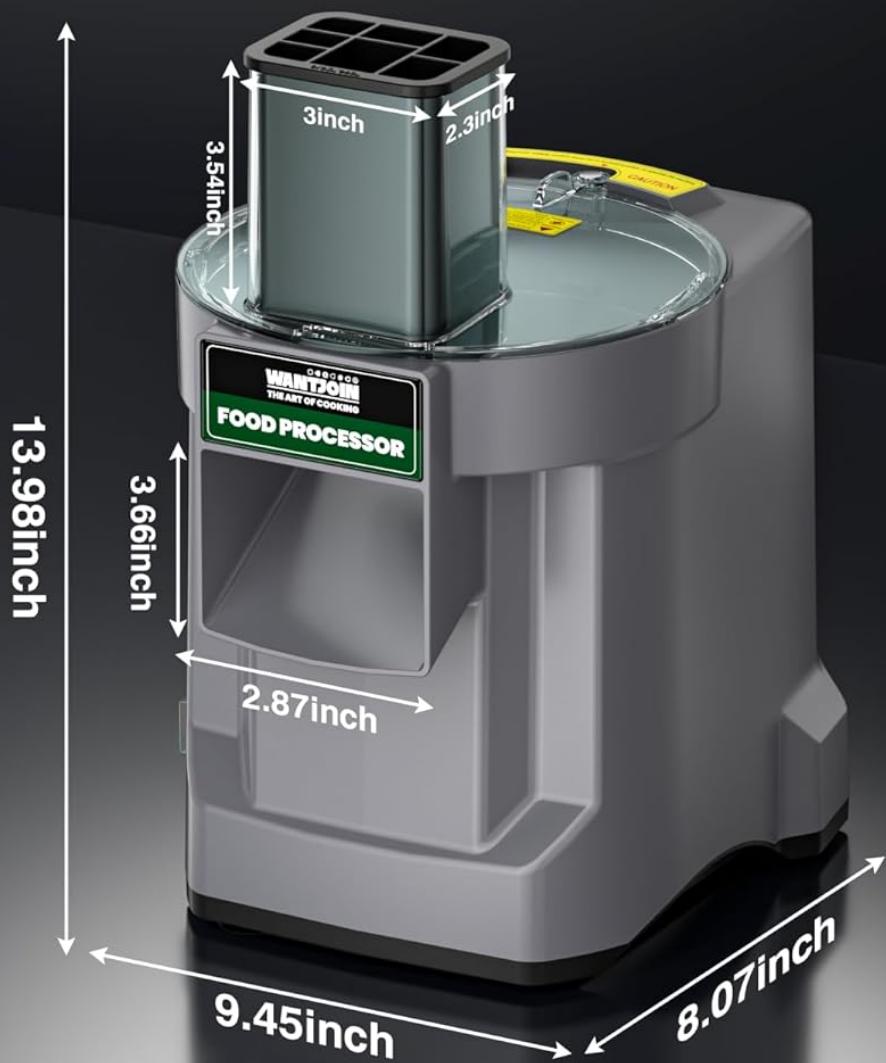