

MEIZE D116

MEIZE D116 Android 14 Tablet User Manual

Model: D116

1. INTRODUCTION

Welcome to the user manual for your MEIZE D116 Android 14 Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. Please read this manual thoroughly to ensure optimal performance and longevity of your tablet.

2. PACKAGE CONTENTS

Before you begin, please verify that all items are present in your package:

- MEIZE D116 Android 14 Tablet
- Keyboard
- Mouse
- Touch Pen
- Protective Case
- Charging Adapter
- USB-C Cable



Image: The MEIZE D116 Tablet displayed with its complete set of accessories, including the keyboard, mouse, touch pen, protective case, charging adapter, and USB-C cable.

3. DEVICE LAYOUT

Familiarize yourself with the physical components of your MEIZE D116 tablet:

Image: A detailed diagram illustrating the location of the front camera, flash, rear camera, headphone jack, Micro SD slot, Type-C charging port, volume up/down buttons, and power button on the MEIZE D116 Tablet.

- **Front Camera:** For video calls and selfies.
- **Rear Camera & Flash:** For high-resolution photos and videos.
- **Headphone Jack (3.5mm):** Connect wired headphones.
- **Micro SD Slot:** Insert a Micro SD card for expandable storage.
- **Type-C Port:** For charging and data transfer.
- **Volume Buttons:** Adjust audio volume.
- **Power Button:** Press and hold to power on/off or restart; short press to sleep/wake.
- **Speakers:** Located on the bottom edge for audio output.

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's Type-C port and the other end to the charging adapter. Plug the adapter into a power outlet. The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power Button until the MEIZE logo appears.
- **To Power Off:** Press and hold the Power Button until the power options appear on screen, then select "Power Off."
- **To Restart:** Press and hold the Power Button until the power options appear, then select "Restart."

4.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network. This is crucial for downloading updates and setting up your Google account.
3. Sign in with your Google account or create a new one. This is required to access the Google Play Store and other Google services.
4. Follow the on-screen prompts to set up security features (PIN, pattern, or password) and other preferences.

4.4 Connecting Accessories

Your MEIZE D116 tablet supports various accessories for enhanced productivity.

4.4.1 Bluetooth Keyboard and Mouse

To connect the included Bluetooth keyboard and mouse:

1. Ensure the keyboard and mouse are charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Toggle Bluetooth **On**.
4. The tablet will scan for available devices. Select the keyboard and mouse from the list to pair them. Follow any on-screen pairing instructions.

Use With Various Accessories

512GB Additional Expansion



Image: A user operating the MEIZE D116 Tablet with an external Bluetooth keyboard and mouse, demonstrating its laptop-like functionality.

4.4.2 Touch Pen

The touch pen can be used for precise input, drawing, and navigation. No pairing is required for basic touch pen functionality.

5. BASIC OPERATION

5.1 Touchscreen Gestures

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Navigate through screens or scroll content.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

5.2 Home Screen Navigation

The home screen is your central hub for apps and widgets. You can customize it by adding or removing app icons and widgets.

5.3 App Management

- **Install Apps:** Download apps from the Google Play Store.
- **Uninstall Apps:** Tap and hold an app icon, then drag it to the "Uninstall" option, or go to **Settings > Apps**.
- **Close Apps:** Swipe up from the bottom of the screen and swipe away the app card to close it.

5.4 Split-Screen Functionality

The Android 14 operating system allows for split-screen multitasking. To use this feature:

1. Open the first app you want to use.
2. Swipe up from the bottom of the screen to access the recent apps view.
3. Tap the app icon at the top of the first app's card.
4. Select "Split top" or "Split screen."
5. Choose a second app from your recent apps or app drawer to fill the other half of the screen.

8000mAh Battery Super Capacity Upgrade

This Android tablet is equipped with an 8000mAh battery life upgrade, providing you with a longer user time, watching videos for up to 10 hours, playing games for up to 8 hours, and listening to music for more than 12 hours, bringing you more entertainment time and Internet time.

 **Videos**
10 hours

 **Games**
8 hours

 **Music**
12 hours



Image: Examples of the MEIZE D116 Tablet in various usage scenarios, including video conferencing, reading, and professional work tasks.

6. CONNECTIVITY

6.1 Wi-Fi Connection

Your tablet supports 5G/2.4G dual-band Wi-Fi for stable and fast internet access.

1. Go to **Settings > Network & internet > Wi-Fi**
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list and enter the password if prompted.

Support 5G/2.4G WIFI

Stable and Fast Network Connection, Bring you a Good Online Experience



Image: The MEIZE D116 Tablet screen prominently displaying the 5G Wi-Fi symbol, indicating its capability for high-speed wireless connectivity.

6.2 Bluetooth 5.0

Bluetooth 5.0 allows you to connect wireless headphones, speakers, keyboards, mice, and other compatible devices.

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Select the device you wish to pair from the list.

6.3 3.5mm Headphone Jack

For wired audio, connect your headphones to the 3.5mm headphone jack located on the tablet's side.

7. CAMERA USAGE

The MEIZE D116 tablet features a 13MP rear camera and an 8MP front camera for capturing photos and videos.

1. Open the Camera app from your home screen or app drawer.
2. Switch between front and rear cameras using the camera toggle icon.
3. Tap the shutter button to take a photo or press the record button to start/stop video recording.

4. Access various camera modes and settings within the app for different effects and adjustments.



Image: Examples demonstrating the clarity and detail captured by the 13MP rear camera and 8MP front camera of the MEIZO D116 Tablet.

8. STORAGE AND MEMORY

Your tablet comes with 128GB of internal storage and 8GB of RAM (expandable to 16GB virtually). You can further expand storage up to 512GB using a Micro SD card.



Image: The MEIZE D116 Tablet showcasing its large memory capacity, including 128GB internal storage, 16GB (8+8) running memory, and support for up to 512GB additional expansion.

8.1 Expandable Storage

To insert a Micro SD card:

1. Locate the Micro SD slot on the side of the tablet.
2. Gently insert the Micro SD card into the slot until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format it for use as portable or internal storage.

9. BATTERY MANAGEMENT

The MEIZE D116 tablet is equipped with an 8000mAh battery, providing extended usage times.

8000mAh Large Battery Capacity



Game
7hrs



Video
8hrs



Reading
12hrs



Music
12hrs



Reading
12hrs



Standby
48hrs



Image: The MEIZE D116 Tablet with a visual representation of its 8000mAh battery, along with icons indicating approximate usage durations: 10 hours for videos, 8 hours for games, and 12 hours for music.

9.1 Optimizing Battery Life

- Reduce screen brightness.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close background apps.
- Enable battery saver mode in **Settings > Battery**.

10. MAINTENANCE

10.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

10.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**

11. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

- **Device not powering on:** Ensure the tablet is charged. Connect it to the charger and try powering on again.
- **Wi-Fi connection issues:** Restart your tablet and your Wi-Fi router. Forget the network in settings and reconnect.
- **Slow performance:** Close unnecessary background apps. Clear cache for frequently used apps. Consider performing a factory reset if performance does not improve (see below).
- **Apps crashing:** Ensure apps are updated. Clear the app's cache and data in **Settings > Apps**.

11.1 Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. Back up any important data before proceeding.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and follow the on-screen prompts.

12. SPECIFICATIONS

Detailed technical specifications for the MEIZE D116 Android 14 Tablet:

Feature	Specification
Brand	MEIZE
Model Name	D116
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels
Processor	Octa-Core, 2 GHz (MediaTek)
RAM	8GB (16GB Expandable)
Internal Storage	128 GB
Expandable Storage	Up to 512GB (Micro SD)
Rear Camera	13 MP
Front Camera	8 MP
Battery Capacity	8000mAh
Average Battery Life	10 Hours
Wireless Connectivity	802.11ac, 802.11b, 802.11g, 802.11n (5G/2.4G Dual Band Wi-Fi), Bluetooth 5.0
Product Dimensions	10 x 7 x 0.3 inches

Feature	Specification
Item Weight	2.99 pounds

13. WARRANTY AND SUPPORT

13.1 Limited Warranty

Your MEIZE D116 tablet is covered by a limited manufacturer's warranty against defects in materials and workmanship under normal use. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

13.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the MEIZE professional customer service team. They are dedicated to providing support and have extensive experience in assisting customers. Contact information can typically be found on the MEIZE official website or on the packaging materials.