

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

Enchen Mini-X

Enchen Mini-X Electric Shaver Instruction Manual

Model: Mini-X

PRODUCT OVERVIEW

The Enchen Mini-X Electric Shaver is a compact, portable, and waterproof grooming device designed for men. It features innovative 2-direction flex heads for an efficient shave, a multi-functional display for clear information, and a long-lasting rechargeable battery, making it ideal for both daily use and travel.



Figure 1: Enchen Mini-X Electric Shaver

Key Features:

- **2-Direction Flex Heads:** Adapts to facial contours for a smooth and efficient shave.
- **Waterproof Design:** Allows for convenient wet or dry shaving and easy cleaning under running water.
- **Rechargeable Battery:** Provides up to 60 minutes of cordless shaving on a single charge.
- **Multi-Functional Display:** Shows battery percentage and travel lock status.
- **Compact and Portable:** Ideal for travel and on-the-go use.

SETUP AND INITIAL USE

Unboxing and Components:

Upon opening the package, ensure all components are present:

- Enchen Mini-X Electric Shaver
- USB-C Charging Cable
- Cleaning Brush (if included)
- User Manual (this document)

Initial Charging:

Before first use, fully charge the shaver. Connect the USB-C charging cable to the shaver's charging port and plug the other end into a compatible USB power adapter (not included) or a computer USB port.



Figure 2: Charging the Enchen Mini-X Shaver

- The multi-functional display will show the battery percentage increasing during charging.
- A full charge takes approximately **1.5 hours**.
- Once fully charged, the display will show 100%.
- A full charge provides up to **60 minutes** of cordless run time.

OPERATING INSTRUCTIONS

Powering On/Off:

Press the power button located on the front of the shaver to turn it on or off.



Figure 3: Holding the Shaver for Use

Shaving Technique:

For optimal results, hold the shaver at a right angle to your skin and move it in gentle, circular motions. The 2-direction flex heads are designed to adapt to the contours of your face, ensuring a close and comfortable shave.

MESS-FREE SHAVING



Figure 4: Shaver Head Design

Multi-Functional Display:

The digital display on the shaver provides real-time information:

- **Battery Percentage:** Indicates the remaining battery life.
- **Travel Lock Indicator:** A lock icon will appear when the travel lock is activated.

MULTI-FUNCTIONAL DISPLAY



Figure 5: Multi-Functional Display

Travel Lock Feature:

To prevent accidental activation during travel, the shaver is equipped with a smart travel lock. To activate or deactivate the travel lock, press and hold the power button for 3 seconds. The lock icon on the display will indicate its status.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

Cleaning the Shaver:

The Enchen Mini-X Shaver is 100% waterproof, allowing for easy cleaning.

1. Turn off the shaver.
2. Gently detach the magnetic cutter head from the shaver body.

3. Rinse the cutter head and the shaver body under running water to remove hair clippings and debris.
4. For a more thorough cleaning, use the provided cleaning brush (if applicable) to remove stubborn hair particles from the blades.
5. Allow all parts to air dry completely before reattaching the cutter head and storing the shaver.



Figure 6: Waterproof Cleaning

Note: Do not use abrasive cleaning agents or harsh chemicals, as these may damage the shaver's finish or internal components.

TROUBLESHOOTING

If you encounter any issues with your Enchen Mini-X Shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted. Travel lock is activated.	Charge the shaver fully. Deactivate travel lock by pressing and holding the power button for 3 seconds.
Poor shaving performance.	Cutter heads are dirty or clogged. Blades are worn.	Clean the cutter heads thoroughly. Consider replacing the cutter heads if performance does not improve after cleaning (replacement parts sold separately).
Shaver not charging.	Charging cable or adapter is faulty. Charging port is obstructed.	Ensure the USB-C cable is securely connected. Try a different USB power adapter or port. Check the charging port for debris.

If the problem persists after trying these solutions, please contact Enchen customer support.

SPECIFICATIONS

Detailed technical specifications for the Enchen Mini-X Electric Shaver:

Feature	Detail
Product Name	Electric Shaver
Model	Mini-X
Dimensions (L x W x H)	2.24 x 1.18 x 2.64 inches (57mm x 30mm x 67mm)
Weight	4.32 ounces (approx. 122g)
Battery Type	1 Lithium Ion battery (included)
Run Time	Up to 60 minutes
Charging Time	Approx. 1.5 hours
Power Source	Battery Powered (USB-C charging)
Special Feature	Cordless, Waterproof, Multi-Functional Display, Travel Lock

PRODUCT PARAMETERS



Product Name:

Electric Shaver

Model:

Mini X

Run Time:

60 mins

Charging Time:

1.5 hours

Figure 7: Product Dimensions

WARRANTY AND SUPPORT

Warranty Information:

Specific warranty details for the Enchen Mini-X Electric Shaver are typically provided with your purchase documentation. Please refer to the warranty card or information included in your product packaging for terms and conditions, including warranty period and coverage.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Enchen customer support. Contact information can usually be found on the product packaging, the official Enchen website, or through your retailer.

Note: No official product videos from the seller were found in the provided data to embed in this manual.

Related Documents

	<p>ENCHEN Blackstone 3 Rotary Shaver User Manual</p> <p>Comprehensive user manual for the ENCHEN Blackstone 3 Rotary Shaver, covering important precautions, product description, usage instructions, display content, cleaning and maintenance, troubleshooting, and product parameters.</p>
	<p>ENCHEN X7 Electric Shaver User Manual: Operation, Cleaning, and Troubleshooting</p> <p>Comprehensive guide for the ENCHEN X7 Electric Shaver, detailing safety instructions, usage, maintenance, troubleshooting tips, and warranty information. Learn how to effectively use and care for your ENCHEN X7 shaver.</p>
	<p>Maszynka do strzyżenia Enchen Boost 2 (czarny) - Specyfikacja Techniczna</p> <p>Szczegółowy opis i specyfikacja techniczna maszynki do strzyżenia Enchen Boost 2 w kolorze czarnym. Poznaj kluczowe cechy, parametry techniczne, zasilanie, czas pracy i wyposażenie.</p>