

EKEMOND G769S

EKEMOND 7-Pads Electronic Drum Set User Manual

Model: G769S

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

Thank you for choosing the EKEMOND 7-Pads Electronic Drum Set. This manual provides essential information for the safe and efficient use of your new electronic drum set. Please read it thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Ensure all components are present upon unboxing:

- 1 x Electronic Drum Pad (with 7 pads: 3 Toms, 1 HI-HAT, 1 SNARE, 1 RIDE, 1 CRASH)
- 2 x Foot Pedals (for Bass Drum and HI-HAT)
- 2 x Drumsticks
- 1 x Headphone
- 1 x USB Power Cable (DC5V)



Image: Overview of the EKEMOND 7-Pads Electronic Drum Set, showing the main drum pad, foot pedals, USB cable, headphones, and drumsticks, with labels for each drum pad.

SETUP

1. **Unroll the Drum Pad:** Carefully unroll the silicone drum pad on a flat, stable surface.
2. **Connect Foot Pedals:** Plug the two foot pedals into their designated ports on the control module. One pedal is for the bass drum, and the other is for the HI-HAT.
3. **Power On:**
 - **USB Power:** Connect the provided USB cable to the DC5V port on the drum set and to a USB power adapter (not included) or a computer USB port.
 - **Battery Power:** Insert 2 x AAA batteries (not included) into the battery compartment on the underside of the control module.
4. **Connect Headphones (Optional):** For private practice, plug the included headphones into the headphone jack on the control module.
5. **Connect External Speaker (Optional):** To amplify the sound, connect an external speaker (not included) to the AUX output port on the control module.

Enjoy Your Music Privately

With earphone not disturb others



**Without headhone
will bother others**

Image: A child playing the EKEMOND electronic drum set with headphones connected, demonstrating private practice.

OPERATION

Basic Drumming

- Use the provided drumsticks or your hands to strike the individual drum pads.
- The 7 pads correspond to different drum sounds: 3 Toms, 1 HI-HAT, 1 SNARE, 1 RIDE, and 1 CRASH.
- The HI-HAT and SNARE positions can be exchanged based on user preference.
- Press the foot pedals to activate the bass drum and HI-HAT sounds.

Introduces Marvellous Music Learning Methods



Image: Two children engaging with the EKEMOND electronic drum set, highlighting its interactive nature.

Control Module Functions

The control module features several buttons for enhanced functionality:

- **Volume Control:** Adjust the overall sound output.
- **Rhythm Selection:** Cycle through various pre-set rhythms.
- **Demo Songs:** Play pre-loaded demo songs for practice or enjoyment.
- **Record Function:** Record your drumming sequences. Press the record button to start, play your sequence, and press again to stop.
- **Playback Function:** Play back your recorded drumming sequences.
- **Kit Selection:** Change between different drum kit sounds.

Built-in Stereo Speaker

Better Stereo Sound and Astonishing Bass Effect



Image: A detailed view of the control module and its built-in stereo speaker, illustrating the sound output capability.

MAINTENANCE

- **Cleaning:** Wipe the drum pad and control module with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, roll up the drum pad gently to save space. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If using batteries, remove them if the device will not be used for an extended period to prevent leakage.



Image: Demonstrates the ease of cleaning the drum set and its roll-up feature for convenient storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from drum pads.	Power is off; volume is too low; headphones/external speaker not connected or faulty.	Ensure power is on. Increase volume. Check headphone/speaker connections and functionality.
Foot pedals not responding.	Pedals not properly connected.	Verify that both foot pedals are securely plugged into their respective ports.
Drum set not powering on.	No power source; batteries depleted or incorrectly inserted; USB cable faulty.	Check USB connection or replace AAA batteries. Ensure batteries are inserted with correct polarity.

SPECIFICATIONS

- **Model:** G769S
- **Brand:** EKEMOND
- **Material:** Silicone
- **Drum Pads:** 7 (3 Toms, 1 HI-HAT, 1 SNARE, 1 RIDE, 1 CRASH)
- **Foot Pedals:** 2 (Bass Drum, HI-HAT)
- **Power Options:** 2 x AAA Batteries (not included) or DC5V via USB cable
- **Connectivity:** USB, Auxiliary (for headphones/external speaker)
- **Item Weight:** Approximately 1 Pound

WARRANTY & SUPPORT

The EKEMOND 7-Pads Electronic Drum Set comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. For warranty claims, technical support, or any inquiries, please contact EKEMOND customer service through the retailer where the product was purchased or visit the official EKEMOND website for contact information.