

EJGAME UR-NS2286

EJGAME Wireless Controller UR-NS2286 User Manual

Model: UR-NS2286

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your EJGAME Wireless Controller UR-NS2286. This controller is designed for multi-platform compatibility, offering an enhanced gaming experience with features such as Hall Effect joysticks and triggers, customizable RGB lighting, dual vibration, and programmable buttons.



The EJGAME Wireless Controller UR-NS2286 offers broad compatibility across multiple gaming platforms.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- EJGAME Wireless Controller UR-NS2286

- USB Charging Cable
- USB Wireless Adapter (for PC connectivity)
- User Manual (this document)

3. CONTROLLER LAYOUT

Familiarize yourself with the buttons and features of your controller:

- **Left/Right Analog Sticks:** For movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Triggers:** Analog triggers with Hall Effect technology.
- **+, -, Home, Screenshot Buttons:** System functions.
- **Turbo Button:** Activates and adjusts Turbo function.
- **Light Button:** Controls RGB lighting.
- **M1/M2 Buttons:** Programmable back buttons.
- **USB-C Port:** For charging and wired connection.

4. SETUP AND CONNECTIVITY

4.1 Charging the Controller

Before first use, fully charge the controller. Connect the USB charging cable to the controller's USB-C port and the other end to a USB power source (e.g., console, PC, or USB wall adapter). The RGB lights will indicate charging status and turn off when fully charged.

4.2 Connecting to Nintendo Switch / Switch OLED / Switch Lite

1. On your Switch console, go to **System Settings > Controllers and Sensors > Change Grip/Order**.
2. Press and hold the **Home button** on the EJGAME controller for 3-5 seconds until the indicator lights flash rapidly.
3. Once connected, the indicator light(s) on the controller will remain solid.

Wake-up Function: Press the **Home button** on the controller to wake up your Nintendo Switch console from sleep mode. *Note: The wake-up function is not supported for Switch 2.*



2 Programmable keys

Combos with a single click, simplifying the complex and making combat one step faster.

The controller supports one-button wake-up for Nintendo Switch consoles.

4.3 Connecting to PC (Windows 10 and above)

The controller can be connected to a PC via the included USB wireless adapter or directly via a USB cable.

4.3.1 Wireless Connection (via USB Adapter)

1. Plug the USB wireless adapter into an available USB port on your PC.
2. Press and hold the **Home button** on the EGAME controller for 3-5 seconds until the indicator lights flash rapidly.
3. The controller will automatically pair with the adapter. Once connected, the indicator light(s) on the controller will remain solid.

4.3.2 Wired Connection (via USB Cable)

1. Connect the controller to your PC using the USB charging cable.
2. The PC should automatically detect and install the necessary drivers.

4.4 Connecting to iOS / Android / Steam Deck

The controller supports Bluetooth connectivity for iOS (13.0 and above), Android (5.0 and above), and Steam Deck.

1. Enable Bluetooth on your device (iOS, Android, or Steam Deck).
2. Press and hold the **Home button** on the EGAME controller for 3-5 seconds until the indicator lights flash rapidly.
3. On your device, search for new Bluetooth devices and select "EGAME Controller" (or similar) from the list.
4. Once paired, the indicator light(s) on the controller will remain solid.



2 Programmable keys

Combos with a single click, simplifying the complex and making combat one step faster.

The controller and its USB adapter provide universal compatibility across various devices.

5. OPERATING INSTRUCTIONS

5.1 RGB Lighting Adjustment

The controller features 7 colors of RGB lighting and 4 light modes. Use the **Light button** in combination with other controls to adjust:

- **Light + D-Pad Up/Down:** Adjust brightness.
- **Light + R Button:** Cycle through lighting modes (Dazzle, Monochrome, Monochrome Breathe, Monochrome Breathe Cycle).
- **Light + Right Analog Stick (press down):** Change lighting color (Red, Orange, Yellow, Green, Cyan, Blue, Violet).



One Button Wake Up

Customize your gaming atmosphere with various RGB lighting modes.

5.2 Vibration Intensity Adjustment

The controller features dual vibration motors with 4 adjustable levels: 100%, 75%, 50%, and 0% (off). To adjust, press the **Turbo button** and the **D-Pad Up/Down** simultaneously.

Hall Effect Joysticks and Triggers

Upgraded. Robust and long-lasting. Offering higher precision and sensitivity.



Adjust the vibration intensity to suit your preference for an immersive gaming experience.

5.3 Turbo Function Configuration

The controller supports both automatic and manual Turbo modes with three adjustable speeds (5-10-15Hz).

- **To set Turbo:** Press and hold the **Turbo button**, then press the desired action button (A/B/X/Y, L/R, ZL/ZR). The button will now have Turbo functionality.
- **To adjust Turbo speed:** Press and hold the **Turbo button**, then press the **Right Analog Stick (press down)** to cycle through speeds.
- **To clear Turbo:** Repeat the Turbo setting process for the specific button, or press and hold the **Turbo button** for 5 seconds to clear all Turbo settings.

5.4 Programmable Back Buttons (M1/M2)

The M1 and M2 buttons on the back of the controller can be programmed for sequential actions or simultaneous multi-key commands.



COOL RGB Lighting for Gamers

- LIGHT + [D-pad] ↑ ↓ Adjust the brightness of the led
- LIGHT + [R] ↑ ↓ Adjust the lighting mode
- LIGHT + [L] ↑ ↓ Adjust the lighting color

Utilize the M1 and M2 programmable keys for custom macros and simplified gameplay.

5.5 Hall Effect Joysticks and Triggers

The controller is equipped with Hall Effect joysticks and linear triggers, providing enhanced precision and durability.

- **Hall Effect Joysticks:** Offer zero drift and high accuracy due to contactless magnetic sensors.
- **Hall Effect Linear Triggers:** Provide contactless activation with 256 levels of pressure sensitivity and 0.1mm

resolution precision, ensuring instant and accurate input in games.



Hall Effect joystick technology ensures zero drift and pro-level accuracy.



Hall Effect linear triggers provide precise and responsive input with 256 levels of pressure sensitivity.

5.6 Magnetic Snap-on Faceplate

The controller features a sleek, semi-transparent magnetic snap-on faceplate. This design allows for easy removal and customization, though it is primarily for aesthetic purposes and does not affect core functionality.



The magnetic snap-on faceplate offers a sleek, semi-transparent design.

6. MAINTENANCE

Proper care will extend the life of your controller:

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** Do not expose the controller to extreme temperatures. If storing for an extended period, charge the battery to approximately 50% to maintain battery health.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and excessive dust.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

- **Controller not connecting:** Ensure the controller is charged. Re-attempt the pairing process. For PC, try a different USB port for the adapter or connect via USB cable.
- **Buttons or joysticks unresponsive:** Ensure the controller is fully charged. If connected wirelessly, try a wired connection to rule out interference. Perform a factory reset if available (refer to manufacturer's website for specific reset procedures if not detailed here).
- **Vibration not working:** Check if vibration is enabled in the game settings and on the controller (ensure it's not set to 0%).
- **RGB lights not working:** Ensure the controller is charged. Try adjusting the lighting modes and colors using the Light button combinations. If the issue persists after the controller has died completely, this may indicate a hardware issue.
- **Input lag or disconnection:** Ensure there are no obstructions or strong interference sources between the controller and the receiving device. Move closer to the device.
- **Switch 2 Wake-up Function:** Please note that the controller's wake-up function is not supported for Switch 2.

8. SPECIFICATIONS

Feature	Detail
Model Number	UR-NS2286
Brand	EJGAME
Connectivity Technology	USB, Bluetooth
Compatible Devices	Nintendo Switch, Nintendo Switch 2, Nintendo Switch Lite, PC (Windows 10+), iOS (13.0+), Android (5.0+), Steam Deck
Controller Type	Gamepad
Button Quantity	16

Feature	Detail
Additional Features	Ergonomic design, Hall Effect Joysticks, Hall Effect Triggers, Wake-up function (Switch only), Turbo function, RGB Lighting, Programmable M1/M2 buttons, Dual Vibration
Power Source	Wireless (Rechargeable Battery)
Color	Black

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact EJGAME customer service directly. Keep your proof of purchase for any warranty claims.

For the latest drivers, firmware updates, or additional support resources, please visit the official EJGAME website.



© 2026 EJGAME. All rights reserved.