

WALKINGPAD X21

WALKINGPAD X Series Folding Treadmill User Manual

MODEL: X21

Brand: WALKINGPAD

1. Introduction and Overview

The WALKINGPAD X21 is a smart, foldable treadmill designed for home use, offering a convenient and efficient way to stay active. It features a unique tri-fold technology for vertical storage, saving significant floor space. This manual provides essential information for the safe and effective use of your WalkingPad X21.

The X21 model is an excellent choice for users who prioritize compact design and ease of use, providing speeds up to 7.5 mph suitable for walking and light jogging. Its robust construction ensures a smooth and quiet workout experience.



Figure 1: WALKINGPAD X21 Folding Treadmill in its operational state.

2. Setup and Initial Use

The WALKINGPAD X21 comes fully assembled, requiring no complex setup. Simply unpack the unit, unfold it, and connect to power. Ensure the treadmill is placed on a flat, stable surface.

2.1 Unpacking and Placement

Carefully remove the treadmill from its packaging. The packaging includes protective materials to ensure safe transit. Place the treadmill on a level floor, ensuring adequate space around it for safe operation.

2.2 Included Accessories

Your WalkingPad X21 package includes:

- Lubricating Oil: For routine belt maintenance.
- Power Cable: A 1.95-meter power cable for connecting to an electrical outlet.
- Tablet Holder: An accessory to securely hold your tablet or smartphone during workouts.
- Allen Key: Used for adjusting the treadmill belt tension.

Product Information

Speed range: 1-7.5 mph
Max weight: 242 lbs
Net weight: 81 lbs
Belt size: 18.1" x 47.6"
Unfolded size: 55.8" x 27.9" x 41.4"
Folded size: 39.6" x 27.9" x 8.8"

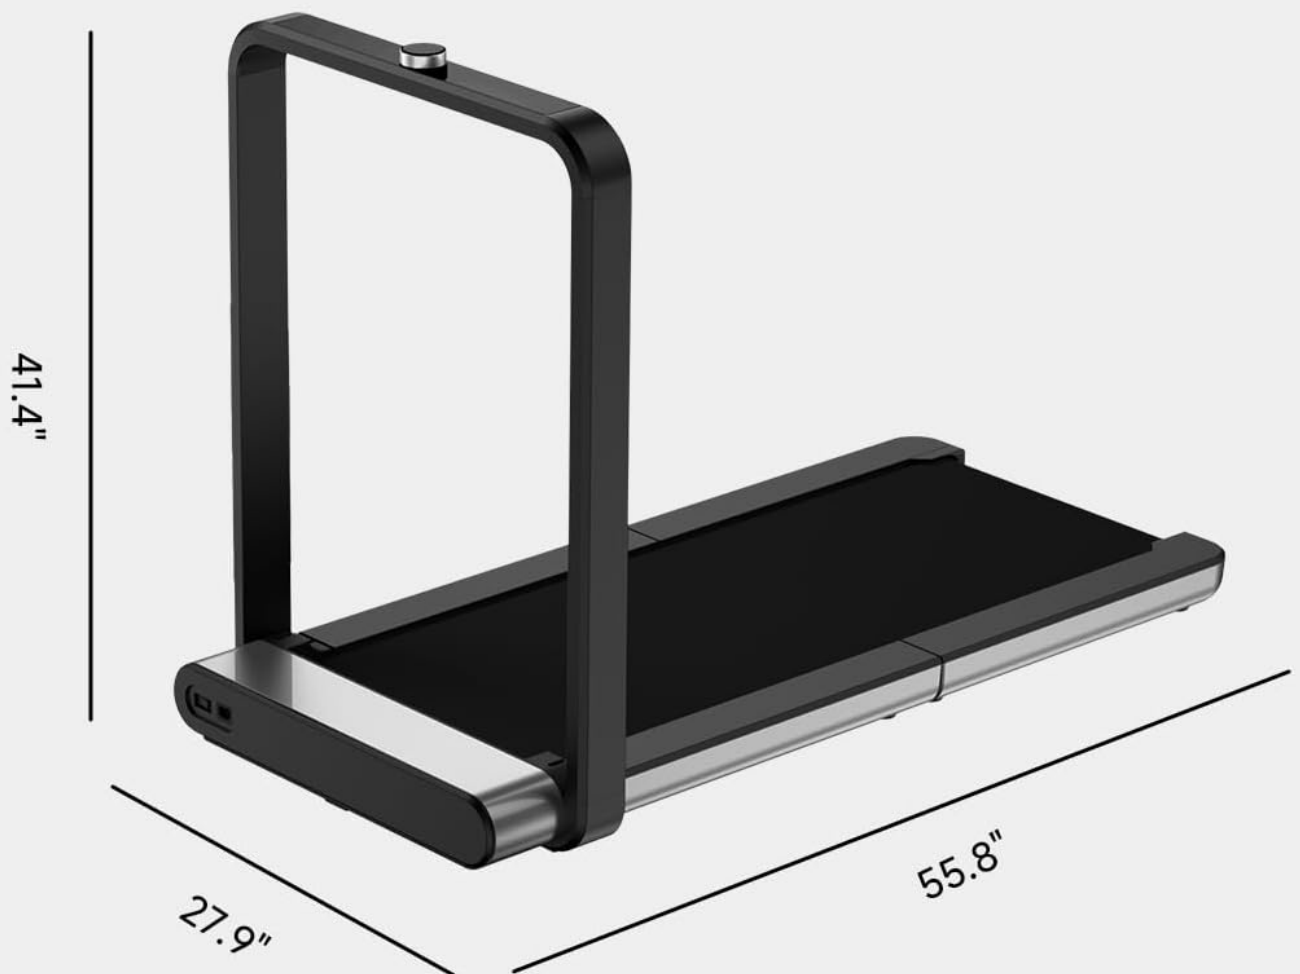


Figure 2: The WalkingPad X21 in its compact, folded state, ideal for vertical storage.

3. Operating Instructions

The WalkingPad X21 offers intuitive controls for a seamless workout experience.

3.1 Power On/Off

Connect the power cable to the treadmill and a suitable power outlet. Press the power button to turn the unit on or off.

3.2 Speed Control with Rotary Dial

Adjusting your speed is simple with the precision rotary dial located on the handle. Rotate the dial to increase or decrease the treadmill's speed. The speed range is from 1 to 7.5 miles per hour.

Gentle on Knees and Ankles



**8-Layer Durable
Running Belt**



Non-Slip



**55.1"x 20"
Belt Size**



Figure 3: The rotary dial provides quick and responsive speed adjustments.

3.3 LED Display

The integrated LED display provides real-time workout metrics, including time, speed, distance, and calories burned. This allows you to monitor your progress at a glance.

Sleek Hidden LED Display

View Multiple Stats at Once



Figure 4: The sleek hidden LED display shows essential workout data.

3.4 App Connectivity (Bluetooth)

The WalkingPad X21 can connect to your smartphone via Bluetooth, allowing for enhanced control and tracking through the dedicated app. The app may offer additional workout programs and detailed statistics.

4. Maintenance

Regular maintenance ensures the longevity and optimal performance of your WalkingPad X21.

4.1 Belt Lubrication

Periodically lubricate the running belt with the provided silicone oil to reduce friction and wear. Refer to the detailed instructions in the full user manual for the correct procedure and frequency.

4.2 Belt Adjustment

If the running belt becomes misaligned or feels loose/tight, use the Allen key to adjust the tension. Proper belt tension is crucial for smooth operation and user safety. Adjustments should be made gradually and evenly on both sides.

7.5 mph Perfect for Home Running



1-7.5 MPH
Speed Range



2.0 HP
Motor Power



242 LBS
Weight Capacity



Figure 5: Internal components, including the motor, designed for quiet and stable operation.

5. Troubleshooting

If you encounter issues with your WalkingPad X21, please refer to the following common troubleshooting tips:

- **No Power:** Ensure the power cable is securely connected to both the treadmill and a working electrical outlet. Check the power switch on the treadmill.
- **Belt Slipping/Sticking:** This may indicate a need for belt lubrication or tension adjustment. Refer to Section 4.
- **Unusual Noises:** Stop using the treadmill immediately. Check for any foreign objects under the belt or loose components. If the noise persists, contact customer support.
- **App Connectivity Issues:** Ensure Bluetooth is enabled on your device and the treadmill is powered on. Try restarting both the app and the treadmill.

For more detailed troubleshooting or issues not listed here, please contact WALKINGPAD customer support.

6. Specifications

Feature	Specification
Brand	WALKINGPAD
Model Name	WalkingPad X21
Color	gray
Product Dimensions (D x W x H)	42.91" x 30.71" x 11.02"
Item Weight	81 Pounds
Material	Aluminum
Maximum Speed	7.5 Miles per Hour
Minimum Speed	1 Miles per Hour
Special Feature	Foldable
Maximum Horsepower	2 Horsepower
Assembly Required	No
Power Source	Corded Electric
Connectivity Technology	Bluetooth
Metrics Measured	Distance, Speed, Time
Maximum Weight Recommendation	240 Pounds
Deck Length	47.6 Inches
Belt Width	18.1 Inches
Folded Size	27.9" x 37.6" x 8.9"

Folds Up Small to Save Space



Figure 6: Detailed product dimensions and key specifications.

7. Warranty and Support

7.1 Warranty Information

The WALKINGPAD X21 comes with a 1-Year Manufacturer Warranty. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included with your product or contact WALKINGPAD customer support.

7.2 Customer Support

For any questions, technical assistance, or service requests, please contact WALKINGPAD customer support. You can typically find contact information on the product packaging, the official WALKINGPAD website, or through your retailer.

The seller for this product is KINGSMITH WALKINGPAD, who also handles shipping and customer support inquiries.

© 2025 WALKINGPAD. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question