

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ufree](#) /
- › [Ufree Dual-Head Electric Trimmer \(Model AMU-7118-Q311\) User Manual](#)

Ufree AMU-7118-Q311

Ufree Dual-Head Electric Trimmer

Model: AMU-7118-Q311

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Ufree Dual-Head Electric Trimmer. Keep this manual for future reference.

- **Water Safety:** Avoid using or storing the trimmer near water sources such as bathtubs, showers, or sinks when it is plugged in. Although the device is IPX6 waterproof for wet use and rinsing, ensure it is unplugged during charging and avoid submerging the charging port in water.
- **Heat and Sunlight:** Keep the trimmer away from direct heat sources and prolonged direct sunlight to prevent damage to the battery and internal components.
- **Blade Care:** Always follow recommended cleaning and maintenance procedures. Dull or damaged blades can cause skin irritation or injury. Replace heads if they become dull or damaged.
- **Children:** This appliance is not intended for use by children. Keep out of reach of children.
- **Proper Use:** Use the trimmer only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.

2. PRODUCT OVERVIEW

The Ufree Dual-Head Electric Trimmer is a versatile grooming tool designed for efficient and gentle hair removal across various body areas. It features a dual-head system, ceramic blades, and a rechargeable battery for convenient use.

3-IN-1

BIKINI TRIMMER

Precision Head

Precisely shape and finish for touchably soft skin.

Trimmer Head

Quickly and easily trim longer hair down to size.

Nose Trimmer Head

A dedicated attachment for gentle nasal hair grooming.

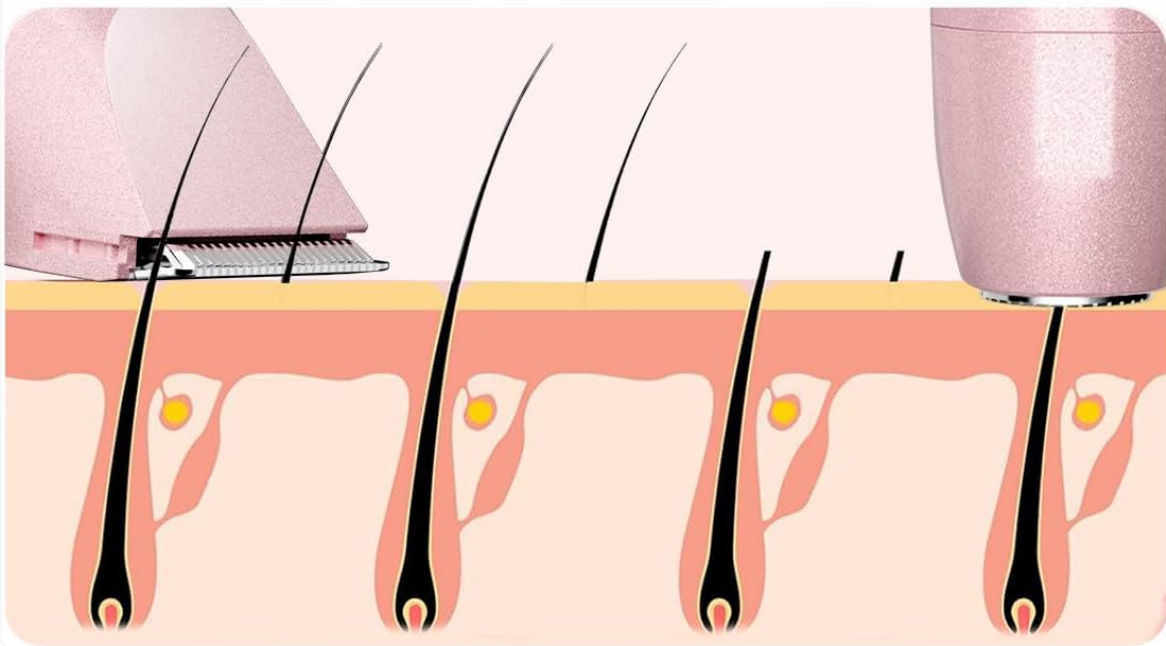


Image: The Ufree Dual-Head Electric Trimmer showcasing its two main heads: a precision head and a trimmer head, along with a separate nose trimmer attachment.

Key Features:

- **Dual-Head Design:** Includes a precision head for close shaving and a trimmer head for longer hair, plus an optional nose hair attachment.
- **Adjustable Guard Combs:** Two guard combs (3-6mm and 9-12mm) are provided for customized trimming lengths.
- **High-Performance Motor:** Equipped with a 7900RPM motor for efficient hair removal without pulling.
- **Ceramic Blades:** Gentle ceramic blades minimize nicks and irritation, suitable for sensitive skin.
- **Rechargeable with LED Display:** Features Type-C fast charging (90 minutes for full charge)

providing up to 70 minutes of continuous use. An LED display shows battery status and travel lock indicator.

- **IPX6 Waterproof:** Fully washable design allows for both dry and wet use, and easy cleaning under running water.
- **Travel-Friendly:** Compact size with a secure travel lock to prevent accidental activation.

Included Components:

- Ufree Dual-Head Electric Trimmer Unit
- Precision Head (pre-attached or separate)
- Trimmer Head (pre-attached or separate)
- Nose Trimmer Head
- 3-6mm Guard Comb
- 9-12mm Guard Comb
- Cleaning Brush
- Lubricating Oil
- Type-C Charging Cable
- Instruction Manual

3. SETUP

3.1 Initial Charging

1. Before first use, ensure the trimmer is fully charged.
2. Connect the provided Type-C charging cable to the charging port on the trimmer and plug the other end into a suitable USB power adapter (not included).
3. The LED display will indicate the charging status. A full charge typically takes approximately 90 minutes.
4. Once fully charged, disconnect the charging cable.

RECHARGEABLE

A quick charge powers 30 days of use.



70 Mins
Running Time



1.5 Hours
Charging time

Image: The Ufree Electric Trimmer being charged via its Type-C cable, with the LED display showing battery level.

3.2 Attaching/Changing Trimmer Heads

1. Ensure the trimmer is turned off before changing heads.
2. To remove a head, gently twist it counter-clockwise and pull it upwards.
3. To attach a head (precision, trimmer, or nose trimmer), align the head with the trimmer body and twist clockwise until it clicks securely into place.

3.3 Attaching Guard Combs (for Trimmer Head)

1. Select the desired guard comb (3-6mm or 9-12mm).
2. Align the comb with the trimmer head and slide it onto the blade until it locks securely.

3. Ensure the comb is firmly attached before use.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Travel Lock

- **To Power On:** Press and hold the power button for approximately 3 seconds. The LED display will illuminate.
- **To Power Off:** Press and hold the power button for approximately 3 seconds.
- **Travel Lock:** The trimmer features a 3-second activation lock to prevent accidental startup. This is indicated on the LED display. To engage/disengage, press and hold the power button until the lock icon appears/disappears.

4.2 Trimming Longer Hair (Trimmer Head)

Use the trimmer head with or without a guard comb for areas with longer hair, such as legs, arms, or bikini line.

1. Attach the trimmer head and desired guard comb (if needed).
2. Hold the trimmer at approximately a 45-degree angle against the skin.
3. Move the trimmer slowly and steadily against the direction of hair growth.
4. For best results, ensure the skin is taut.

ONE TRIMMER FOR EVERY SMOOTH TOUCH.



LEGS



Hair Trimmer Head

FACE



NOSE HAIR



3-6mm



9-12mm

Image: Demonstrates the Ufree Electric Trimmer being used on legs, face, and with the nose trimmer attachment, highlighting its versatility.

4.3 Achieving a Smooth Finish (Precision Head)

For a closer shave on stubble or very short hair, use the precision head.

1. Attach the precision head to the trimmer body.
2. Gently press the precision head against the skin.
3. Move the trimmer in small, circular motions to capture and remove remaining hairs.

4.4 Nose Hair Trimming (Nose Trimmer Head)

1. Attach the nose trimmer head.

2. Carefully insert the trimmer tip into the nostril or ear canal.
3. Move the trimmer gently in a circular motion to trim unwanted hair. Do not insert too deeply.

4.5 Wet and Dry Use

The Ufree trimmer is IPX6 waterproof, allowing for both dry and wet shaving. You can use it in the shower or with shaving cream/gel for added comfort. Always ensure the charging port is dry before connecting the charging cable.



IPX6 WATERPROOF
For Your Shower Routine

WATERPROOF **MULTIFUNCTIONAL**

RECHARGEABLE **INTERCHANGEABLE HEADS**

Image: A woman using the Ufree Electric Trimmer on her underarm in a wet environment, demonstrating its IPX6 waterproof capability.

5. MAINTENANCE

5.1 Cleaning the Trimmer Heads

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and detach the head you wish to clean.
2. Use the provided cleaning brush to remove any trapped hairs from the blades and inside the head.
3. Rinse the detached head under running water. You may also rinse the trimmer body, but ensure the charging port is covered and dry before charging.
4. Allow all parts to air dry completely before reattaching or storing.

5.2 Lubricating the Blades

To maintain blade sharpness and smooth operation, apply a small amount of lubricating oil periodically.

1. After cleaning and drying the trimmer head, apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

5.3 Storage

Store the trimmer in a cool, dry place away from direct sunlight and out of reach of children. Engage the travel lock feature when storing or traveling to prevent accidental activation.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------------|--|--|
| Trimmer does not turn on. | Low battery or travel lock engaged. | Charge the trimmer fully. Disengage the travel lock by pressing and holding the power button for 3 seconds. |
| Trimmer is not cutting effectively. | Blades are clogged with hair, dull, or not properly lubricated. | Clean the trimmer head thoroughly with the brush and rinse. Apply lubricating oil to the blades. If blades are dull, consider replacing the head. |
| Skin irritation or nicks occur. | Improper technique, dull blades, or dry shaving on sensitive skin. | Ensure you are moving the trimmer against hair growth (for trimmer head) or in circular motions (for precision head) with gentle pressure. Clean and lubricate blades. Try wet shaving with foam or gel. |
| Trimmer makes unusual noise. | Hair caught in blades or head not properly attached. | Turn off and clean the trimmer head. Ensure the head is securely attached. If the issue persists, contact customer support. |

7. SPECIFICATIONS

- **Model Name:** AMU-7118-Q311
- **Brand:** Ufree
- **Power Source:** Battery Powered (Rechargeable, Type-C)
- **Charging Time:** Approximately 90 minutes

- **Operating Time:** Up to 70 minutes of continuous use
- **Waterproof Rating:** IPX6
- **Blade Material:** Ceramic
- **Motor Speed:** 7900 RPM
- **Dimensions:** 8.5 x 4.29 x 1.81 inches
- **Item Weight:** 9.59 ounces (0.27 Kilograms)
- **Recommended Uses:** Bikini Line, Body, Face, Nose, Pubic, Under Arm
- **Included Components:** Trimmer unit, Precision Head, Trimmer Head, Nose Trimmer Head, 2 Guard Combs (3-6mm & 9-12mm), Cleaning Brush, Lubricating Oil, Type-C Charging Cable, Instruction Manual

8. WARRANTY AND SUPPORT

Ufree is committed to providing high-quality products and customer satisfaction.

- **30-Day Money Back Guarantee:** If you are not completely satisfied with your purchase, you may be eligible for a full refund within 30 days.
- **1-Year Warranty:** This product is covered by a 1-year limited warranty from the date of purchase, covering manufacturing defects.
- **24-Hour Support:** For any questions, concerns, or technical assistance, please contact Ufree customer support. Our team is available to assist you.

For further assistance, please visit the official Ufree website or contact our customer service team directly.