

XIAOMI MDZ-33-AA-2

XIAOMI TV Stick 4K (2nd Gen) Streaming Device User Manual

Model: MDZ-33-AA-2

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your XIAOMI TV Stick 4K (2nd Gen) streaming device. This device transforms any compatible television or monitor into a smart entertainment hub, offering access to a wide range of streaming content with 4K Ultra HD resolution, Dolby Vision, Dolby Atmos, and Wi-Fi 6 connectivity.



Image: The XIAOMI TV Stick 4K (2nd Gen) logo and device, highlighting its branding.

2. WHAT'S IN THE BOX

Verify that all the following components are included in your product packaging:

- XIAOMI TV Stick 4K (2nd Generation)
- Bluetooth remote control with voice commands
- Power Supply

- USB-C power cable
- HDMI extender



Image: The retail packaging for the XIAOMI TV Stick 4K (2nd Gen), displaying the device and remote on the box.

3. SETUP GUIDE

3.1. Connect the TV Stick

1. Locate an available HDMI port on your television or monitor.
2. Plug the XIAOMI TV Stick 4K (2nd Gen) directly into the HDMI port. If space is limited, use the provided HDMI extender cable.

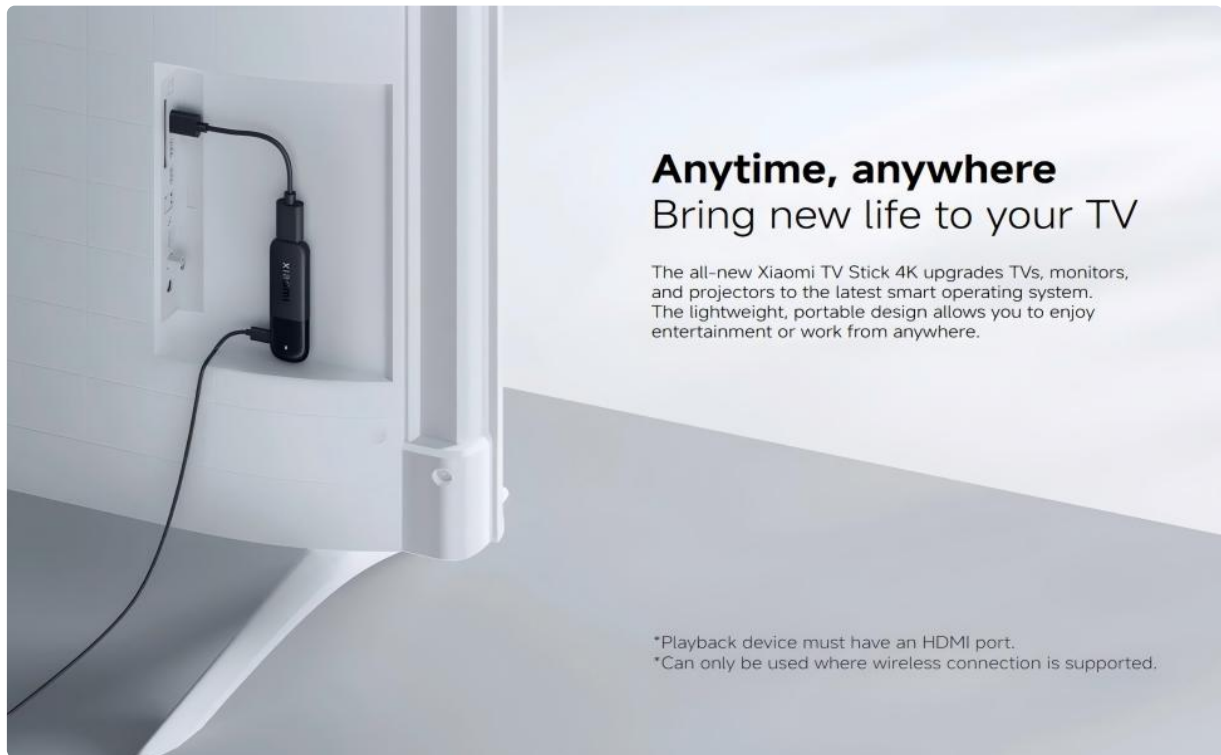 


Image: The XIAOMI TV Stick 4K (2nd Gen) connected to the HDMI port on the back of a television, illustrating its compact design and ease of connection.

3.2. Power Connection

1. Connect the USB-C power cable to the power input port on the XIAOMI TV Stick.
2. Plug the other end of the USB-C power cable into the provided power supply.
3. Insert the power supply into a wall outlet.

3.3. Remote Control Setup

1. Open the battery compartment on the back of the Bluetooth remote control.
2. Insert one AAAA battery (not always included, check packaging) according to the polarity indicators.
3. Close the battery compartment.
4. Once the TV Stick is powered on and displaying the setup screen, follow the on-screen instructions to pair the remote control. Typically, this involves pressing and holding specific buttons (e.g., Home and Back buttons) simultaneously until a pairing confirmation appears.



Image: The XIAOMI TV Stick 4K (2nd Gen) and its accompanying Bluetooth remote control, showing the device's compact form factor and the remote's button layout.

3.4. Initial Software Setup

1. Turn on your television and select the correct HDMI input source corresponding to where the TV Stick is connected.
2. Follow the on-screen prompts to complete the Google TV setup process. This includes selecting your language, connecting to your Wi-Fi network, and logging in with your Google account.
3. Accept the terms and conditions and install any necessary updates.

4. OPERATING INSTRUCTIONS

4.1. Navigating Google TV

Use the directional pad and select button on your remote to navigate the Google TV interface. The home screen provides personalized recommendations, access to installed apps, and various content categories.

- **Home Button:** Returns to the Google TV home screen.
- **Back Button:** Returns to the previous screen or menu.
- **Apps Button:** Provides quick access to your installed applications.

4.2. Voice Control with Google Assistant

The remote control features a dedicated Google Assistant button for voice commands. Press the button and speak clearly into the remote to:

- Search for movies, TV shows, or specific content.
- Open applications.
- Control playback (e.g., "Play," "Pause," "Fast forward").
- Get information (e.g., "What's the weather?").
- Control compatible smart home devices.

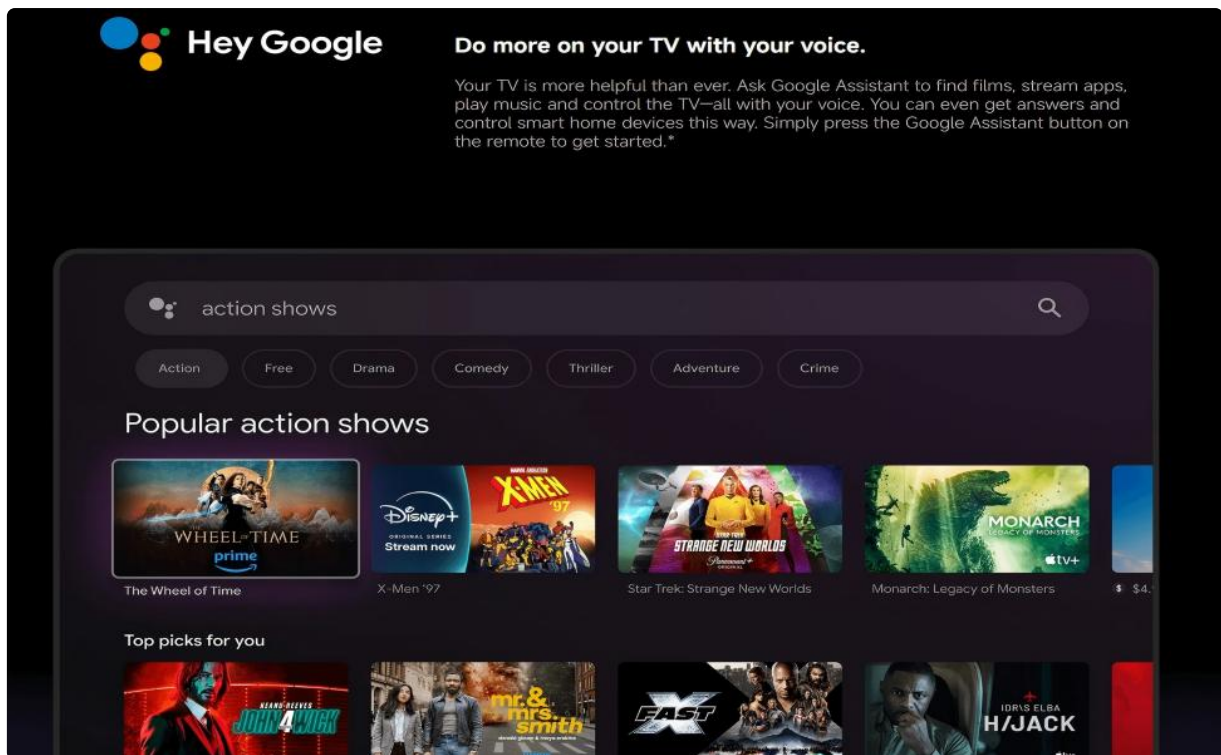 


Image: A television screen displaying the Google Assistant search interface, showing various content recommendations and a search bar for voice commands.

4.3. Casting Content

The XIAOMI TV Stick 4K (2nd Gen) supports Google Cast, allowing you to cast videos, photos, and music from your compatible smartphone, tablet, or computer directly to your TV. Look for the Cast icon () within supported applications on your mobile device.

4.4. 4K Ultra HD Playback

To experience content in 4K Ultra HD, ensure your television or monitor supports 4K resolution and that you are streaming 4K-compatible content from a supported service. The device's Wi-Fi 6 capability ensures stable and fast streaming for high-resolution content.

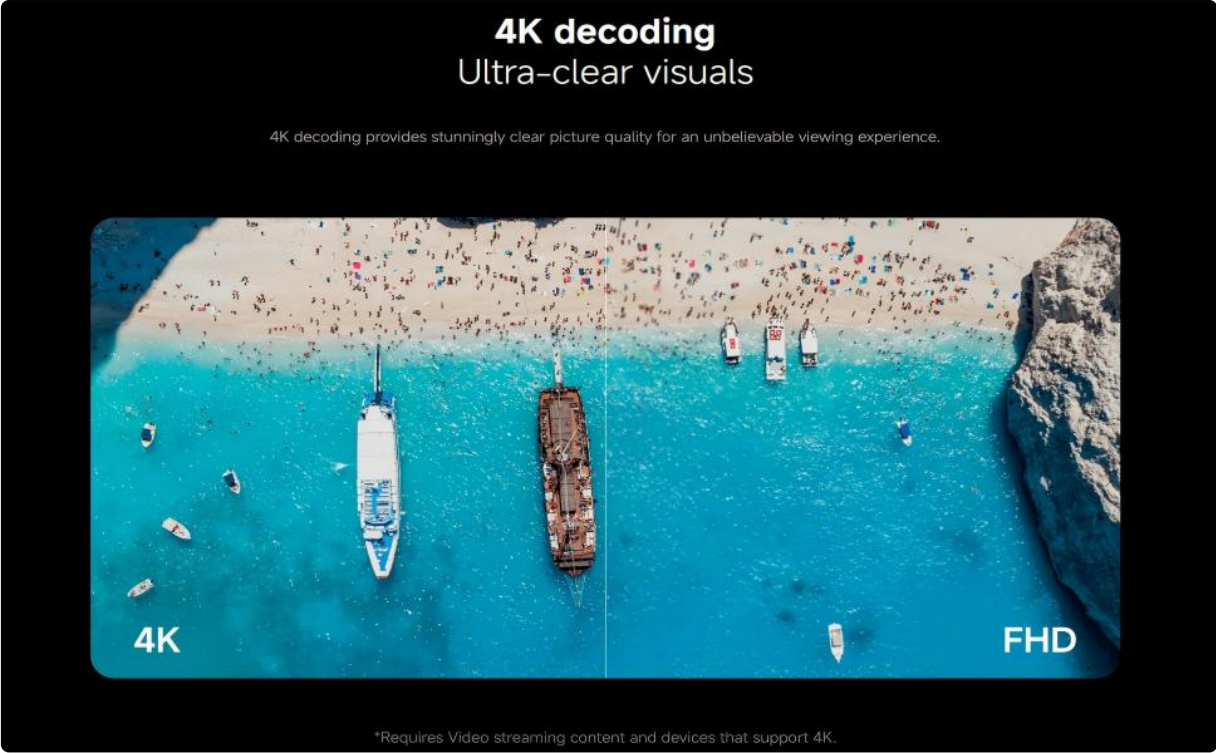 


Image: A visual comparison demonstrating the clarity of 4K decoding versus Full HD (FHD), highlighting the enhanced detail and resolution provided by 4K.

5. MAINTENANCE

To ensure optimal performance and longevity of your XIAOMI TV Stick 4K (2nd Gen), follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the device and remote. Avoid using liquid cleaners, aerosols, or abrasive materials.
- **Environment:** Keep the device away from direct sunlight, excessive heat, humidity, and dust. Ensure adequate ventilation around the device.
- **Software Updates:** Periodically check for and install software updates through the Google TV settings menu. Updates often include performance improvements and security enhancements.
- **Remote Batteries:** Replace the AAAA battery in the remote control when its performance degrades.

6. TROUBLESHOOTING

If you encounter issues with your XIAOMI TV Stick 4K (2nd Gen), refer to the following common problems and solutions:

Problem	Solution
No power or no display on TV	<ul style="list-style-type: none">• Ensure the TV Stick is securely plugged into the HDMI port.• Verify the USB-C power cable is connected to the stick and the power supply is plugged into a working outlet.• Check that your TV is set to the correct HDMI input source.• Try a different HDMI port or power outlet.

Problem	Solution
Remote control not responding	<ul style="list-style-type: none">• Replace the AAAA battery in the remote control.• Re-pair the remote control by following the instructions in Section 3.3.• Ensure there are no obstructions between the remote and the TV Stick.
Buffering or slow performance	<ul style="list-style-type: none">• Check your Wi-Fi connection strength and speed. Move the TV Stick closer to your router if possible.• Restart the TV Stick by unplugging it from power for 30 seconds and plugging it back in.• Restart your Wi-Fi router.• Close any unused applications running in the background.
No audio or video	<ul style="list-style-type: none">• Verify your TV's volume is up and not muted.• Check your TV's audio settings.• Ensure the HDMI cable is securely connected.• Try a different HDMI cable or port.
Factory Reset	If problems persist, you may perform a factory reset. This will erase all data and settings, returning the device to its original state. Navigate to Settings > System > About > Factory reset on your Google TV interface.

7. SPECIFICATIONS

Detailed technical specifications for the XIAOMI TV Stick 4K (2nd Gen):

Feature	Detail
Model Name	MDZ-33-AA-2
Brand	XIAOMI
Resolution	4K Ultra HD
Operating System	Google TV
Processor	6nm Quad-Core (2.5GHz A55 CPU)
Connectivity	Wi-Fi 6 (Dual-band), Bluetooth, HDMI, USB (via power cable)
Audio Support	Dolby Atmos, DTS:X
Video Support	Dolby Vision, HDR10+
Dimensions	10.68 x 2.94 x 1.68 inches
Item Weight	0.988 ounces
Controller Type	Bluetooth Voice Remote, App Control

Feature	Detail
Special Features	Browser, Chromecast, Parental Controls

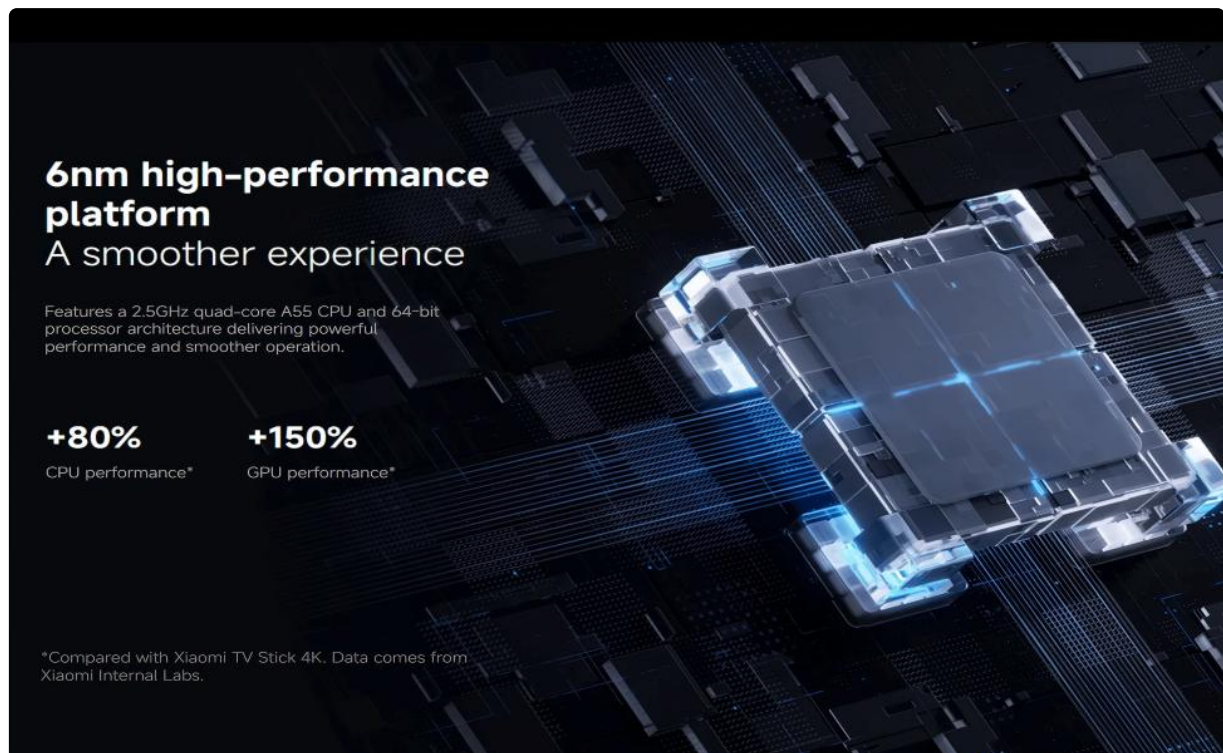 


Image: A diagram illustrating the 6nm high-performance platform, emphasizing the advanced CPU and GPU architecture for smoother operation and enhanced performance.



Image: A stylized graphic featuring the "Wi-Fi 6" logo, indicating the device's support for the latest wireless standard for faster and more stable connections.

8. WARRANTY INFORMATION

The XIAOMI TV Stick 4K (2nd Gen) is covered by a manufacturer's limited warranty. Please refer to the warranty card included in your product packaging or visit the official XIAOMI website for detailed terms and

conditions, including warranty period and coverage specifics. Keep your proof of purchase for warranty claims.

9. SUPPORT

For further assistance, technical support, or to access frequently asked questions, please visit the official XIAOMI support website. You may also find helpful resources and community forums online. Ensure you have your product model number (MDZ-33-AA-2) and serial number ready when contacting support.