

[Manuals.plus](#) /

> [Turtle Beach](#) /

> Turtle Beach Rematch Advanced Wired Gaming Controller Instruction Manual for Xbox & PC (TBC-2004-85)

Turtle Beach TBC-2004-85

Turtle Beach Rematch Advanced Wired Gaming Controller Instruction Manual

Model: TBC-2004-85

INTRODUCTION

The Turtle Beach Rematch Advanced Wired Gaming Controller is designed for enhanced gaming performance across Xbox Series X|S, Xbox One, and Windows PC platforms. This manual provides detailed instructions for setup, operation, customization, and maintenance to ensure optimal use of your controller.



Image: The Turtle Beach Rematch Advanced Wired Gaming Controller in Cherry Blossom design, showcasing its vibrant aesthetic.

PACKAGE CONTENTS

- Turtle Beach Rematch Advanced Wired Gaming Controller
- Detachable 8ft / 2.5m USB-C Wired Connection Cable

SETUP

Connecting the Controller

1. Locate the USB-C port on the top of your Rematch Advanced controller.
2. Connect the smaller end of the provided USB-C cable to the controller's port.
3. Connect the larger USB-A end of the cable to an available USB port on your Xbox console or Windows PC.
4. The controller will automatically power on and connect. The Xbox button on the controller will illuminate to indicate a successful connection.

OPERATING INSTRUCTIONS

Basic Controls

The Rematch Advanced controller features standard Xbox button layouts including A, B, X, Y buttons, D-pad, left and right analog sticks, bumpers (LB, RB), and triggers (LT, RT). Familiarize yourself with these controls for basic gameplay.

On-Board Audio Controls

The controller includes integrated audio controls for convenient management of game and chat audio. Use the dedicated buttons on the D-pad area for quick adjustments.



Image: The D-pad area of the controller, highlighting the built-in audio controls for game/chat mix, master volume, and mic mute.

- **Game/Chat Mix:** Adjust the balance between game audio and chat audio.
- **Master Volume:** Control the overall volume level.
- **Mic Mute:** Quickly mute or unmute your microphone.

Remappable Quick-Action Back Buttons

Two programmable quick-action buttons are located on the back of the controller, allowing you to assign frequently used functions for improved responsiveness.

OFFICIALLY LICENSED

By Xbox



Image: The back of the controller, illustrating the placement of the two mappable quick-action buttons. To map these buttons, refer to the Control Hub App section or the video below for detailed instructions.

Video: A demonstration on how to set up functions for the remappable back buttons on the controller.

2-Stop True Hall Effect Hair Triggers

The hair triggers feature two stop points, allowing for faster reaction times in games. Adjust the trigger stops to your preference for short or full pull distances.



Image: A detailed view of the controller's trigger, highlighting the 2-stop True Hall Effect Hair Trigger functionality.

Dual Rumble Motors and Impulse Triggers

Experience immersive feedback through dual rumble motors in the grips and impulse triggers, providing realistic vibrations for in-game events.

CONTROL HUB COMPANION APP

Customize Your Controller

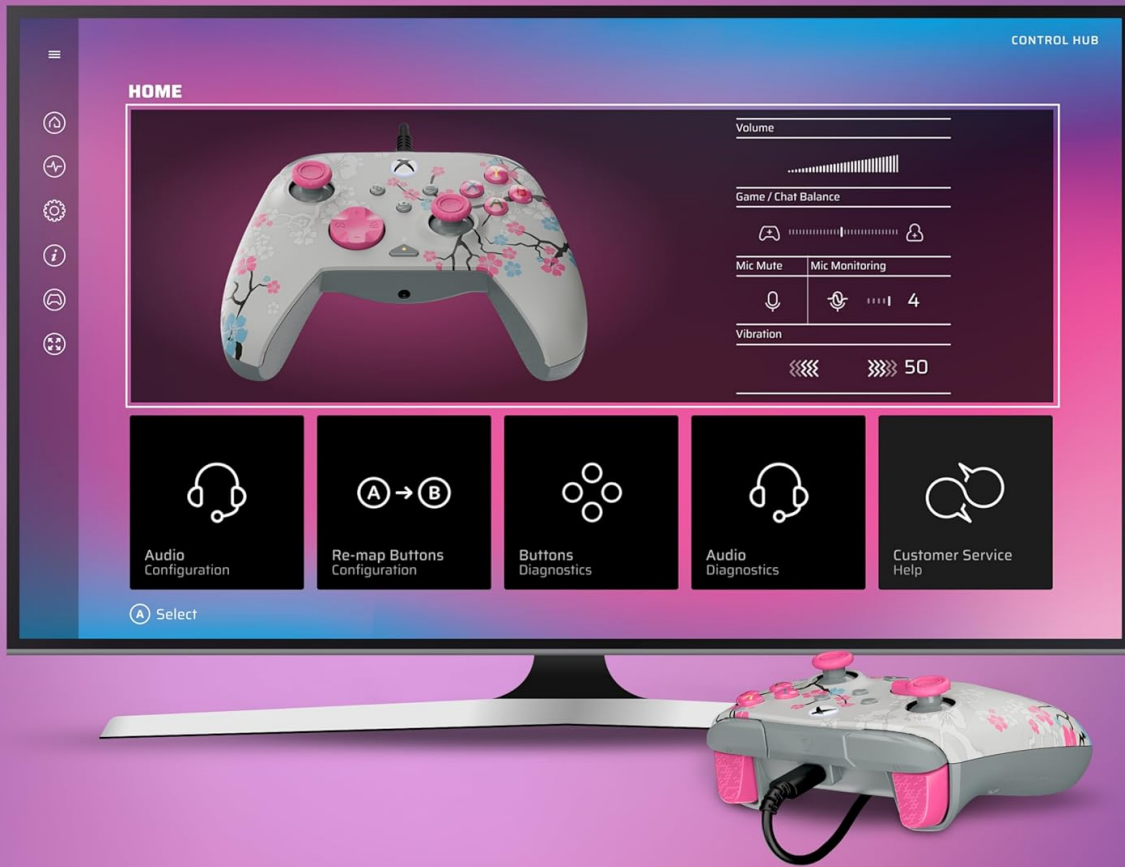


Image: A transparent view of the controller's side, revealing the internal dual rumble motors and impulse triggers for enhanced haptic feedback.

Control Hub App

Download the Turtle Beach Control Hub App for comprehensive controller configuration and diagnostics. The app allows you to customize button mappings, adjust audio settings, and perform diagnostic tests.



Image: A display showing the Turtle Beach Control Hub App, illustrating the various customization and diagnostic options

available for the controller.

SPECIAL FEATURES

Glow-in-the-Dark Design

The Cherry Blossom design features elements that glow in the dark after exposure to UV light, adding a unique visual effect to your controller.



Image: The Cherry Blossom controller design illuminated with a glow-in-the-dark effect.

Ergonomic Design

The controller is designed for extended comfort during long gaming sessions, featuring a comfortable grip and balanced weight.

MAINTENANCE

Cleaning

- Use a soft, dry cloth to wipe down the controller's surface.
- For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.

- Ensure the controller is disconnected from any power source before cleaning.

Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures to prevent damage.

TROUBLESHOOTING

Controller Not Responding

- Ensure the USB-C cable is securely connected to both the controller and the console/PC.
- Try connecting the controller to a different USB port.
- Restart your Xbox console or PC.
- Verify that the controller's firmware is up to date using the Control Hub App.

Audio Issues

- Check headphone connections to the controller's 3.5mm jack.
- Adjust game/chat mix and master volume using the on-board controls.
- Ensure your microphone is not muted.
- Test audio settings within your console or PC's system settings.

SPECIFICATIONS

Feature	Detail
Compatible Devices	PC, Windows, Xbox One, Xbox Series S, Xbox Series X
Controller Type	Gamepad
Connectivity Technology	USB A, USB C (Wired)
Additional Features	Ergonomic, Headphone Jack, Multiuse, Rumble
Button Quantity	14
Item Weight	13.76 ounces
Item Dimensions (D x W x H)	2.82"D x 6.9"W x 6.9"H
Model Name	Rematch Advanced (TBC-2004-85)
UPC	840454400540

WARRANTY AND SUPPORT

For detailed warranty information and support resources, please visit the official Turtle Beach support page:

[Turtle Beach Warranty and End-User License](#)

For further assistance, contact Turtle Beach customer support through their website.



Image: The product packaging displaying the 'Officially Licensed By Xbox' badge.