

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [Samsung Galaxy A16 5G SM-A166U User Manual](#)

Samsung SM-A166U

Samsung Galaxy A16 5G SM-A166U User Manual

Model: SM-A166U

1. GETTING STARTED

This section provides essential information to begin using your Samsung Galaxy A16 5G smartphone.

1.1 What's in the Box

- Samsung Galaxy A16 5G Smartphone
- USB-C Cable
- SIM Ejector Tool

Note: A power adapter may be sold separately.

1.2 Device Layout

Familiarize yourself with the physical components of your device.



Image: Front and side view of the Samsung Galaxy A16 5G. The front displays the 6.5-inch screen, while the side shows the power button, volume rocker, and USB-C port.

1.3 Inserting the SIM Card

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Place your Nano-SIM card into the tray with the gold contacts facing down.
4. Gently push the tray back into the slot until it clicks into place.

1.4 Initial Power On and Setup

1. Press and hold the Power button until the Samsung logo appears.

2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
3. Review and accept the terms and conditions to complete the initial setup.

2. OPERATING YOUR DEVICE

Learn how to navigate and utilize the core features of your Samsung Galaxy A16 5G.

2.1 Display and Navigation

- **Display:** The device features a 6.5-inch HD+ Infinity-V Display with a resolution of 720 x 1600 pixels.
- **Touch Gestures:** Use taps, swipes, and pinches to interact with the screen.
- **Home Screen:** Customize your home screen with widgets and app shortcuts.

2.2 Camera Functions

Your device is equipped with a 50MP Main Camera for capturing high-resolution photos and videos.

- Open the Camera app from your home screen or app drawer.
- Tap the shutter button to take a photo.
- Swipe left or right to switch between different camera modes (e.g., Photo, Video, Portrait).

2.3 Battery Management

The device includes a 5000 mAh battery designed for long-lasting use.

- To check battery usage, go to **Settings > Battery and device care > Battery**.
- Enable Power saving mode to extend battery life when needed.

2.4 Connectivity

- **Mobile Data:** Supports 5G and 4G LTE networks. Ensure your SIM card is active with your carrier.
- **Wi-Fi:** Connect to wireless networks via **Settings > Connections > Wi-Fi**.
- **Bluetooth:** Pair with other Bluetooth devices via **Settings > Connections > Bluetooth**.
- **Audio Jack:** A 3.5 mm audio jack is available for wired headphones.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device.

3.1 Cleaning Your Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.
- Do not expose the device to excessive moisture.

3.2 Software Updates

Keep your device's software up to date for the latest features and security patches.

- Go to **Settings > Software update > Download and install**.
- Ensure your device is connected to Wi-Fi and has sufficient battery charge before updating.

3.3 Storage Management

Your device comes with 128GB of internal storage. Manage it effectively to maintain performance.

- Check storage usage via **Settings > Battery and device care > Storage**.
- Delete unnecessary files, apps, or move them to cloud storage.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your device.

4.1 Device Not Powering On

- Ensure the battery is charged. Connect the device to a charger for at least 10 minutes.
- Perform a forced restart: Press and hold the Volume Down button and the Power button simultaneously for about 7-10 seconds.

4.2 Screen Unresponsive

- Restart the device using the forced restart method mentioned above.
- If the issue persists, check for software updates or consider a factory reset (data will be erased).

4.3 Network Connectivity Issues

- Toggle Airplane mode on and off.
- Check if your SIM card is properly inserted.
- Reset network settings: **Settings > General management > Reset > Reset network settings**.

4.4 App Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data: **Settings > Apps > [Select App] > Storage > Clear cache / Clear data**.
- Update the app from the Google Play Store.

5. SPECIFICATIONS

Detailed technical specifications for the Samsung Galaxy A16 5G SM-A166U.

Feature	Specification
Model Name	Galaxy A16 5G
Model Number	SM-A166U
Display Size	6.5 Inches
Display Resolution	720 x 1600
Operating System	Android 14
CPU Model	Exynos 850 S5E3830

Feature	Specification
CPU Speed	2.2 GHz
RAM	4 GB
Internal Storage	128 GB
Main Camera	50 MP
Battery Capacity	5000 mAh
Connectivity	5G, 4G LTE
Audio Jack	3.5 mm
Color	Blue

6. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Samsung support website.

- **Online Support:** samsung.com/us/support/
- **Contact:** Refer to your region's Samsung support page for phone numbers and chat options.