

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [KurieTim](#) /

› KurieTim 16" FHD Gaming Laptop (Model 13620h) User Manual

KurieTim 13620h

KurieTim 16" FHD Gaming Laptop (Model 13620h) User Manual

Comprehensive guide for setup, operation, and maintenance.

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your KurieTim 16" FHD Gaming Laptop. Please read this guide thoroughly to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- KurieTim 16" FHD Gaming Laptop
- Power Adapter
- User Manual (this document)

SETUP

1. Initial Power-On and Charging

Before first use, connect the laptop to the power adapter and a wall outlet. Allow the battery to charge fully. The charging port is located on the side of the laptop.

Connect with Ease

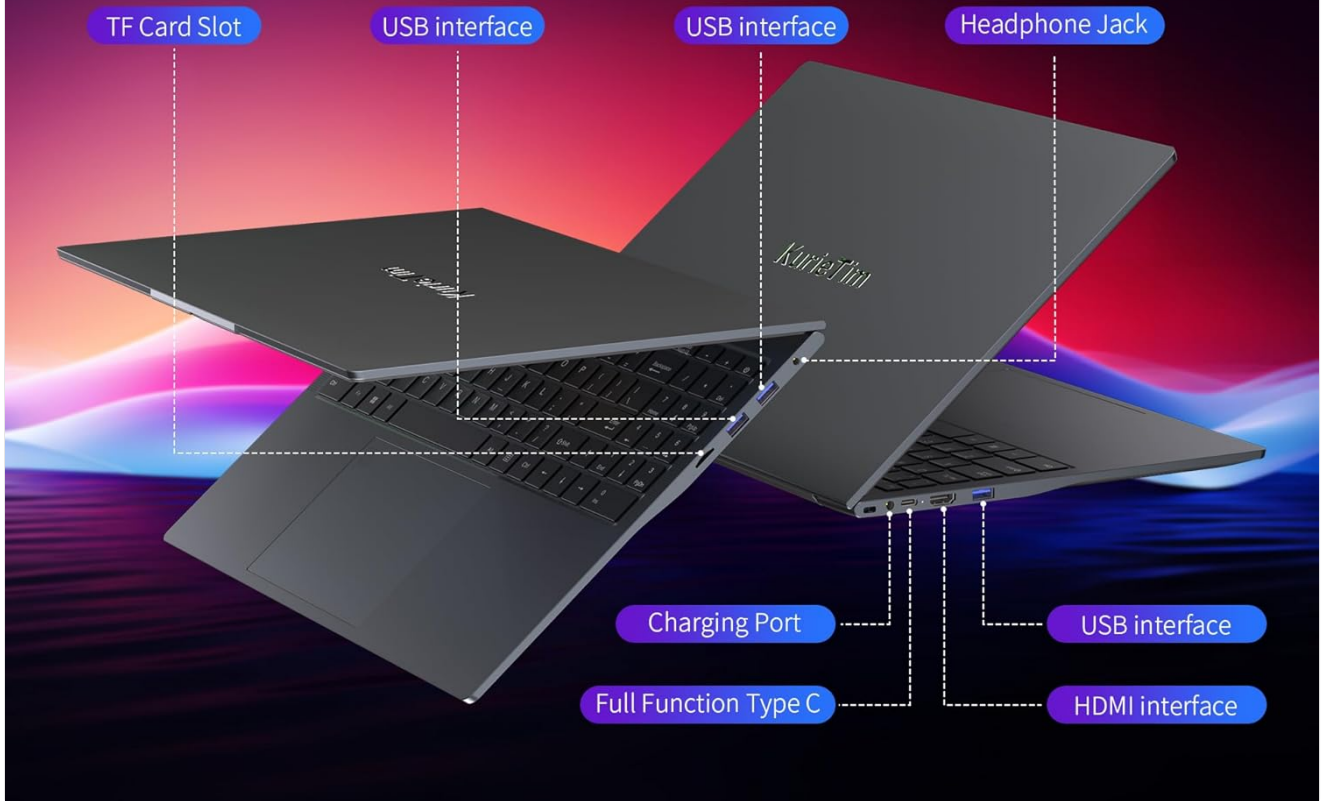


Image: Side view of the laptop highlighting the charging port and other interfaces.

2. Operating System Setup (Windows 11 Pro)

Upon first power-on, the laptop will guide you through the Windows 11 Pro setup process. Follow the on-screen instructions to configure language, region, network connection, and user accounts.

3. Fingerprint Reader Setup

For enhanced security, set up the fingerprint reader. This option is typically available during the initial Windows setup or can be configured later via Windows Settings > Accounts > Sign-in options. The fingerprint sensor is integrated into the power button or touchpad area.

Connect with Ease

Equipped with a backlight keyboard, which is perfect for working in low-light environments



Image: Close-up of the laptop keyboard showing the fingerprint unlock sensor, typically integrated into the power button or touchpad area.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press the power button located on the keyboard deck.
- **To Power Off:** Click the Start button in Windows, then select Power > Shut down.
- **Sleep Mode:** Close the laptop lid or select Power > Sleep from the Start menu.

2. Keyboard Features

Your laptop features a backlit keyboard and a numeric keypad for enhanced usability.

- **Backlit Keyboard:** Press **Fn + Fx** (where Fx is the designated function key, often F5 or F10) to toggle the keyboard backlight on/off or adjust brightness levels.
- **Numeric Keypad:** Use the dedicated numeric keypad for efficient data entry.

Connect with Ease

Equipped with a backlight keyboard, which is perfect for working in low-light environments



Image: Top-down view of the laptop keyboard, illustrating the backlit keys and numeric keypad.

3. Camera Privacy Switch

A physical privacy switch is provided for the integrated webcam. Slide the switch to cover or uncover the camera lens, ensuring your privacy when the camera is not in use.

Connect with Ease

Equipped with a backlight keyboard, which is perfect for working in low-light environments



Image: Detail of the laptop's top bezel, showing the webcam and its physical privacy switch.

4. Connectivity

The laptop offers various ports and wireless options:

- **USB Ports:** 1x USB 3.0, 2x USB 2.0 for connecting peripherals.
- **Type-C Port:** A full-function Type-C port for data transfer, video output, and power delivery (check specific functionality with device specifications).
- **HDMI Port:** Connect to external displays or projectors.
- **Headphone Jack:** For audio output.
- **TF Card Slot:** For expanding storage or transferring data from memory cards.
- **Wi-Fi:** Supports 802.11ac for wireless internet connectivity.
- **Bluetooth:** Version 4.2 for connecting wireless accessories.

Connect with Ease

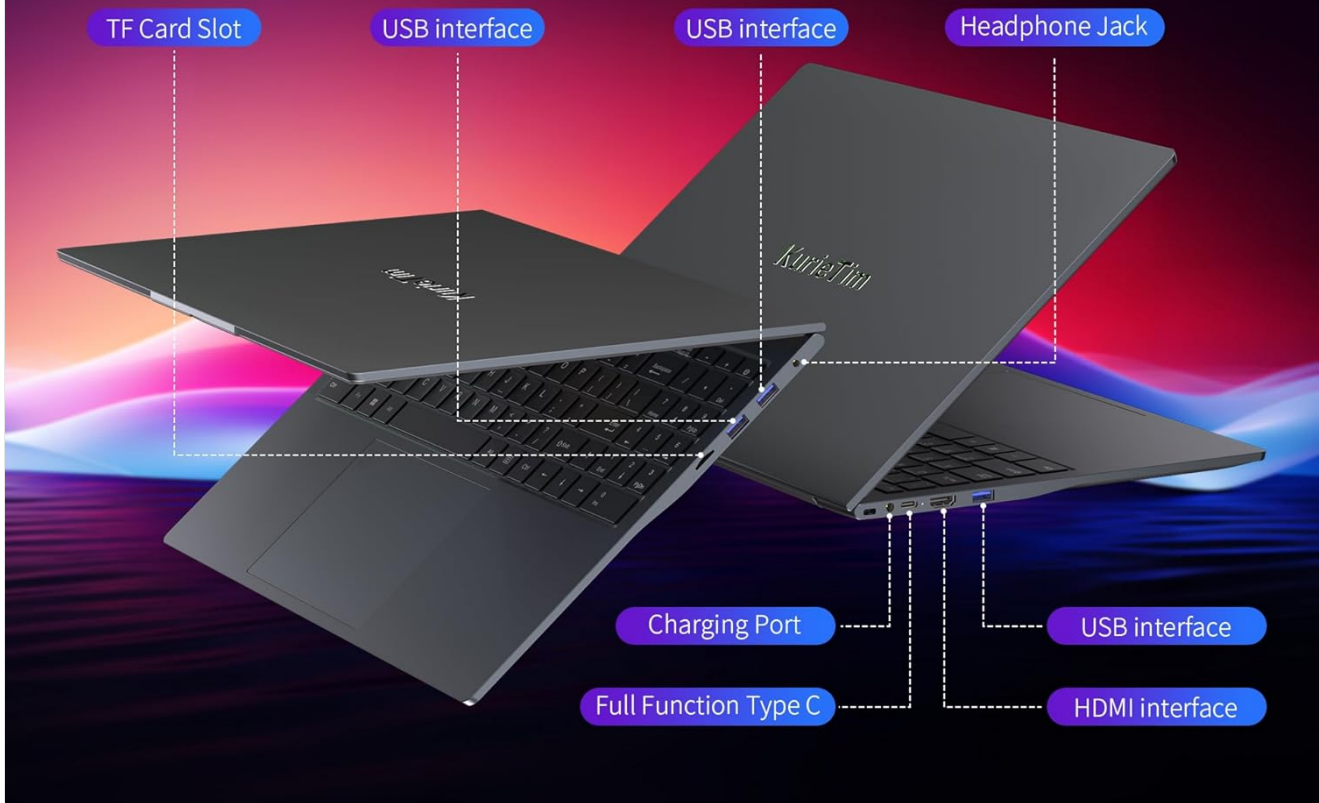


Image: Diagram illustrating the location and type of all connectivity ports on the laptop.

5. Display Features

The 16-inch Full HD IPS screen provides clear visuals. Adjust display settings via Windows Settings > System > Display.

16" FHD Clear Visual Display



Image: The laptop screen displaying a high-resolution image, emphasizing its visual quality.

MAINTENANCE

1. Cleaning

- Use a soft, lint-free cloth to clean the screen and exterior.
- Avoid harsh chemicals or abrasive materials.
- Ensure the laptop is powered off and unplugged before cleaning.

2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.
- The average battery life is approximately 3 hours under typical usage. For longer sessions, keep the power adapter connected.

3. Software Updates

Regularly check for and install Windows updates and driver updates to ensure system stability and security.

TROUBLESHOOTING

- **Laptop does not power on:** Ensure the power adapter is securely connected to both the laptop and a working power outlet. Verify the power outlet is functional. If the battery is completely drained, it may take a few minutes of charging before the laptop can power on.

- **Short Battery Life:** The laptop has an average battery life of 3 hours. To maximize battery duration, reduce screen brightness, close unnecessary applications, and disconnect unused peripherals. Consider carrying the power adapter for extended use.
- **Wi-Fi/Bluetooth Connectivity Issues:** Check if Wi-Fi or Bluetooth is enabled in Windows settings. Restart the laptop and your router/modem. Ensure drivers are up to date.
- **System Slowdown:** Close unused applications, check for background processes consuming high resources (Task Manager), ensure sufficient free storage space, and run a virus scan.
- **Keyboard Backlight Not Working:** Ensure the backlight function is enabled using the designated Fn key combination (e.g., Fn + F5). Check keyboard settings in Windows.

SPECIFICATIONS

Feature	Detail
Model Name	T160hi713620hlaptop
Processor	13th Gen Intel Core i7-13620H (10 Cores/16 Threads, up to 4.9GHz)
RAM	32GB DDR4
Storage	1TB PCIe SSD
Display	16-inch Full HD IPS (1920x1200 pixels)
Graphics	Intel UHD Graphics for 13th Gen Intel Processors
Operating System	Windows 11 Pro
Wireless Connectivity	Wi-Fi 802.11ac, Bluetooth 4.2
Ports	1x USB 3.0, 2x USB 2.0, 1x Full-function Type-C, 1x HDMI, 1x Headphone Jack, 1x TF Card Slot
Special Features	Backlit Keyboard, Fingerprint Reader, Numeric Keypad, Privacy Camera Switch, Stereo Speakers
Battery Life (Average)	3 Hours
Dimensions (LxWxH)	14.17 x 0.71 x 10.83 inches
Weight	3.75 pounds

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official KurieTim website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact KurieTim customer service through their official channels.

