

PPMIC MS75-T

PPMIC MS75-T Karaoke Machine with 3 Wireless Microphones User Manual

Brand: PPMIC | Model: MS75-T

1. INTRODUCTION

The PPMIC MS75-T Karaoke Machine is a portable audio system designed for home entertainment and events. It features dual-driver separation technology with a 6.5-inch woofer and a 2-inch tweeter for immersive 3D surround sound. Equipped with Bluetooth 5.3, it offers seamless wireless connectivity and supports multiple playback modes. The system includes three wireless microphones with echo adjustment and AI pitch correction, along with vibrant RGB lights to enhance the atmosphere. This manual provides detailed instructions for setup, operation, and maintenance of your PPMIC MS75-T Karaoke Machine.

2. PACKAGE CONTENTS

Please ensure all items are present in the package:

- 1 × PPMIC MS75-T Karaoke Machine
- 3 × Rechargeable Wireless Microphones
- 1 × USB-C Charging Cable
- 1 × AUX Cable
- 1 × Remote Control
- 1 × Shoulder Strap
- 1 × User Manual



Image: Contents of the PPMIC MS75-T Karaoke Machine package.

3. PRODUCT OVERVIEW

3.1 Main Unit



The main unit is a compact, portable speaker featuring a 6.5-inch woofer and a 2-inch tweeter for high-quality audio output. It is encased in abrasion-proof leather with red stitching and includes vibrant RGB lights on the front and sides. A handle and shoulder strap are provided for easy portability.

3.2 Control Panel

MULTIPLE PLAYBACK MODES SUPPORT



Bluetooth 5.3



TF Card



USB disk



AUX



Live



The top panel of the karaoke machine features the following controls and ports:

- **Power Button:** Press and hold to turn the unit on/off.
- **USB-C Charging Port:** For charging the unit (5V/1A-2A).
- **USB Port:** For USB disk playback.
- **TF Card Slot:** For TF card playback.
- **MIC VOL +/- Knobs:** Adjust microphone volume.
- **ECHO +/- Knobs:** Adjust microphone echo effect.
- **MASTER +/- Knobs:** Adjust overall master volume.
- **AUX Input:** 3.5mm audio input for external devices.
- **LIVE Output:** For live streaming connections.
- **EARPHONE Output:** 3.5mm headphone jack.
- **MIC Input:** For wired microphone connection.
- **LED Mode Button:** Cycle through different LED light patterns.
- **ACCOMPANY Button:** Activates accompaniment mode.
- **MIC PRIORITY Button:** Prioritizes microphone audio over background music.
- **MIC MODE EQ Button:** Adjusts microphone equalization.
- **MODE Button:** Switch between input modes (Bluetooth, AUX, USB, TF Card).
- **PREV/NEXT Buttons:** Skip tracks.
- **PLAY/PAUSE Button:** Play or pause audio.

3.3 Wireless Microphones

The system includes three rechargeable wireless microphones. Each microphone features volume controls and a display for channel and battery status. They connect automatically to the main unit upon power-up.

3.4 RGB Lights



The karaoke machine is equipped with colorful RGB lights on the front speaker and side panels, offering multiple dynamic modes to create an engaging atmosphere.


4. SETUP

4.1 Charging the Unit

Connect the provided USB-C charging cable to the charging port on the control panel and to a 5V/1A-2A USB-A power adapter. The unit features a massive 6000mAh battery for extended playtime. Note: This machine does not support fast charging.

4.2 Microphone Setup

The wireless microphones are rechargeable. Ensure they are charged before use. If a microphone is not working, first try replacing the AA batteries inside the microphone. The microphones automatically connect to the speaker with zero latency upon power-up.

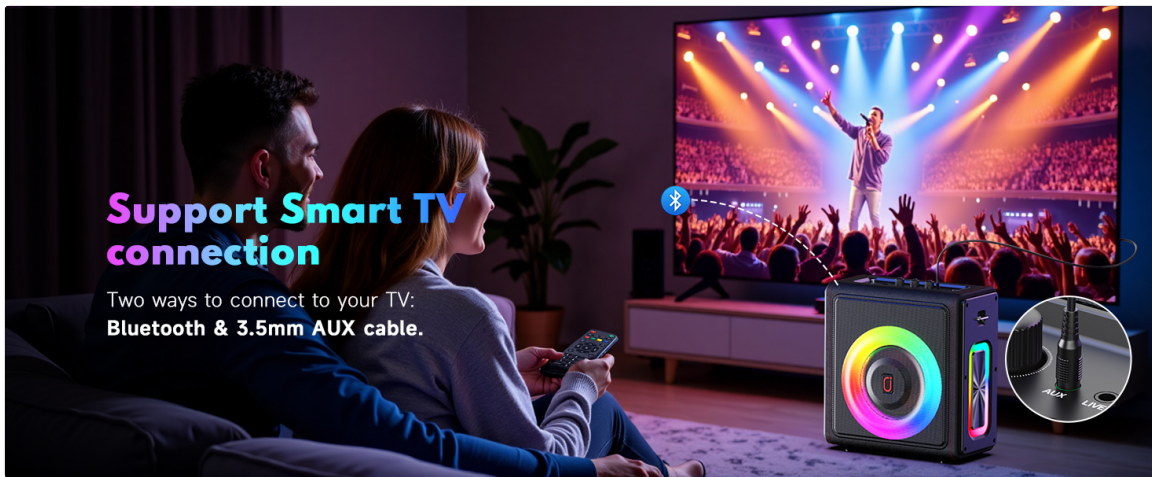

Support Smart TV connection

Two ways to connect to your TV:
Bluetooth & 3.5mm AUX cable.

Image: One-Click Connection of Wireless Microphone.

4.3 Bluetooth Pairing

Turn on the karaoke machine. The unit will automatically enter Bluetooth pairing mode. On your device (smartphone, tablet, laptop), enable Bluetooth and select "MS75" from the list of available devices to connect.

4.4 Wired Connections

The PPMIC MS75-T supports various wired connections:

- **AUX Input:** Connect your TV or other audio devices using the provided 3.5mm AUX cable.
- **USB Disk:** Insert a USB drive into the USB port for music playback.
- **TF Card:** Insert a TF card into the TF card slot for music playback.



Image: Connecting to a Smart TV via Bluetooth or AUX Cable.

4.5 TWS (True Wireless Stereo) Pairing

To achieve immersive 3D surround sound, you can link two MS75-T karaoke speakers wirelessly via Bluetooth 5.3. Refer to the instruction manual for detailed operation of TWS pairing.

TRUE WIRELESS STEREO PAIRING

Equipped with Bluetooth 5.3 to provide zero-latency high-fidelity stereo sound.



Image: True Wireless Stereo Pairing with two MS75-T units.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Power On/Off:** Press and hold the Power button on the control panel.
- **Volume Adjustment:** Use the MASTER +/- knobs to adjust the overall speaker volume.

5.2 Microphone Functions

- **Microphone Volume:** Adjust using the MIC VOL +/- knobs.
- **Echo Adjustment:** Rotate the ECHO +/- knobs to customize reverb effects.
- **AI Pitch Correction (Vocal Master Mode):** Press the "MIC Mode" button on the control panel to activate. This feature automatically corrects off-key vocals.
- **Microphone Priority:** Press the MIC PRIORITY button to lower the background music volume when speaking or singing into the microphone.



Image: AI Pitch Correction for vocal accuracy.

5.3 LED Light Modes

Press the LED MODE button on the control panel to cycle through various colorful light patterns. You can also turn the lights off if desired.

5.4 Playback Modes

Use the MODE button to switch between Bluetooth, AUX, USB disk, and TF card input sources.

5.5 Recording Function

The recording function on this machine captures vocals only. Due to music copyright restrictions, background music cannot be recorded when this function is enabled.

6. MAINTENANCE

- Keep the device dry and clean.
- Avoid exposing the unit to extreme temperatures or direct sunlight.
- Use a soft, dry cloth for cleaning. Do not use abrasive cleaners.
- For charging, use only a 5V/1A–2A USB-A power adapter.

7. TROUBLESHOOTING

- **Microphone Not Working:** First, try replacing the AA batteries in the microphone. If the issue persists, contact customer support.
- **Machine Not Charging:** Ensure you are using a 5V/1A–2A USB-A power adapter. This machine does not support fast charging.
- **Recording Only Captures Vocals:** This is normal behavior due to music copyright restrictions. The machine is designed to record only the microphone input.

8. SPECIFICATIONS

Feature	Specification
Item Weight	5.4 pounds
Product Dimensions	5.4 x 10.4 x 11 inches

Brand	PPMIC
Model	MS75-T
Speaker Count	2 (6.5" woofer, 2" tweeter)
Output Wattage	200 Watts
Power Source	6000 mAh Battery Powered
Voltage	5 Volts (DC)
Connectivity	Bluetooth 5.3, 3.5 mm Jack, USB Type C
Compatible Devices	Guitar, Laptop, Smartphone, Tablet, Television
Special Features	6.5-inch woofer and 2-inch tweeter, Abrasion-Proof Leather, Auto Pitch Correction, Stereo Pairing, Twin-Silicone Bass Boost

9. WARRANTY AND SUPPORT

PPMIC offers a 36-month (3-year) warranty for your karaoke machine. For any problems or support inquiries, please contact us via Amazon message. We are committed to providing friendly and professional customer service.

10. PRODUCT VIDEO OVERVIEW

Watch this official video for a quick overview of the PPMIC MS75-T Karaoke Machine with 3 Microphones:

Video: MS75-T Karaoke Machine with 3 Mics - Indoor Party Preferred (Official Seller Video).