



Manuals.plus /

› UNITSTAGE /

› UNITSTAGE 8-Tier Rotating Vertical Shoe Rack Tower Instruction Manual

UNITSTAGE 8-tier

UNITSTAGE 8-Tier Rotating Vertical Shoe Rack Tower Instruction Manual

Model: 8-tier (13.9" × 11.2" × 52.0")

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your UNITSTAGE 8-Tier Rotating Vertical Shoe Rack Tower. Please read this manual thoroughly before assembly and use to ensure proper function and safety.



Image 1.1: The UNITSTAGE 8-Tier Rotating Vertical Shoe Rack Tower in a closet, showcasing its compact design and storage capacity.

2. SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- Ensure the top shelf does not exceed a weight of **22 lb (10 kg)**.
- Each individual metal mesh layer should not exceed a weight of **11 lb (5 kg)**.
- Always use the provided **anti-tilting devices** to secure the shoe rack to a wall, preventing accidental tipping, especially in households with children or pets.
- Follow all assembly instructions carefully to maintain the stability and structural integrity of the unit.
- Do not climb on or lean heavily on the shoe rack.

Another Way of Usage



Image 2.1: Detail showing the anti-tip kit for wall attachment and adjustable feet for stability on uneven surfaces.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Top Board (Engineered Wood)
- Metal Frame Components
- 8 Metal Mesh Shelves
- 4 Universal Casters (2 with brakes)
- 4 S-shaped Metal Hooks
- Anti-Tilting Kit
- Assembly Hardware (screws, bolts, etc.)
- Assembly Tools (e.g., Allen wrench)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow the step-by-step instructions provided in the included assembly guide. All parts are labeled, and necessary tools are supplied.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Base Frame:** Attach the side metal frames to the bottom frame, ensuring all connections are secure.
3. **Install Casters:** Screw the four universal casters into the designated holes on the bottom frame. Ensure the two casters with brakes are positioned on the same side for easier locking.
4. **Attach Shelves:** Insert the metal mesh shelves into the side frames. The shelves are designed to be detachable, allowing for customization of height to accommodate different shoe types, such as boots or high heels. Ensure they are securely seated.
5. **Install Top Board:** Secure the rustic brown engineered wood top board to the upper metal frame using the provided hardware.
6. **Attach Hooks:** Fasten the 4 S-shaped metal hooks to the side frames as desired for hanging accessories.
7. **Secure with Anti-Tilting Kit:** For safety, attach the anti-tilting device to the top rear of the shoe rack and secure it to a wall stud or appropriate anchor point.
8. **Adjust Feet (Optional):** If not using casters, or for additional stability, the adjustable feet can be used to level the rack on uneven floors.



1 Side Hooks *4

Nowhere to place your bags or keys?
4 Side Hooks come to help.

2 Heavy-Duty Shelves

Effortlessly supports up to 22lbs per shelf



3 Durable Universal Wheels



2 Wheels
with Brakes



360°
Rotation



Spuer
Mute

Image 4.1: Key features for assembly and use: side hooks, heavy-duty shelves, and durable universal wheels with brakes.

Meeting Various

Detachable shelves are designed to accommodate shoes of different heights.



Image 4.2: Example of adjustable shelf configuration to accommodate different shoe heights, such as boots.

5. OPERATING INSTRUCTIONS

Your UNITSTAGE shoe rack is designed for convenient and versatile shoe storage.

- **Shoe Placement:** Place shoes on the metal mesh shelves. The design allows for efficient storage of 8-16 pairs, depending on shoe size and type.
- **Rotating Function:** The rack is designed to rotate for easy access to all shoes. Gently push or pull the rack to spin it.
- **Mobility:** Utilize the 360-degree silent casters to move the rack between rooms or within a space.
- **Locking Casters:** To keep the rack stationary, engage the brakes on the two designated casters by pressing down on the lever. To unlock, lift the lever.
- **Accessory Hooks:** Use the four S-shaped hooks to hang items such as umbrellas, handbags, keys, or other small accessories.
- **Top Shelf Use:** The top engineered wood board can be used for decorative items, small plants, or frequently accessed items, ensuring the weight limit of 22 lb is not exceeded.

Product size

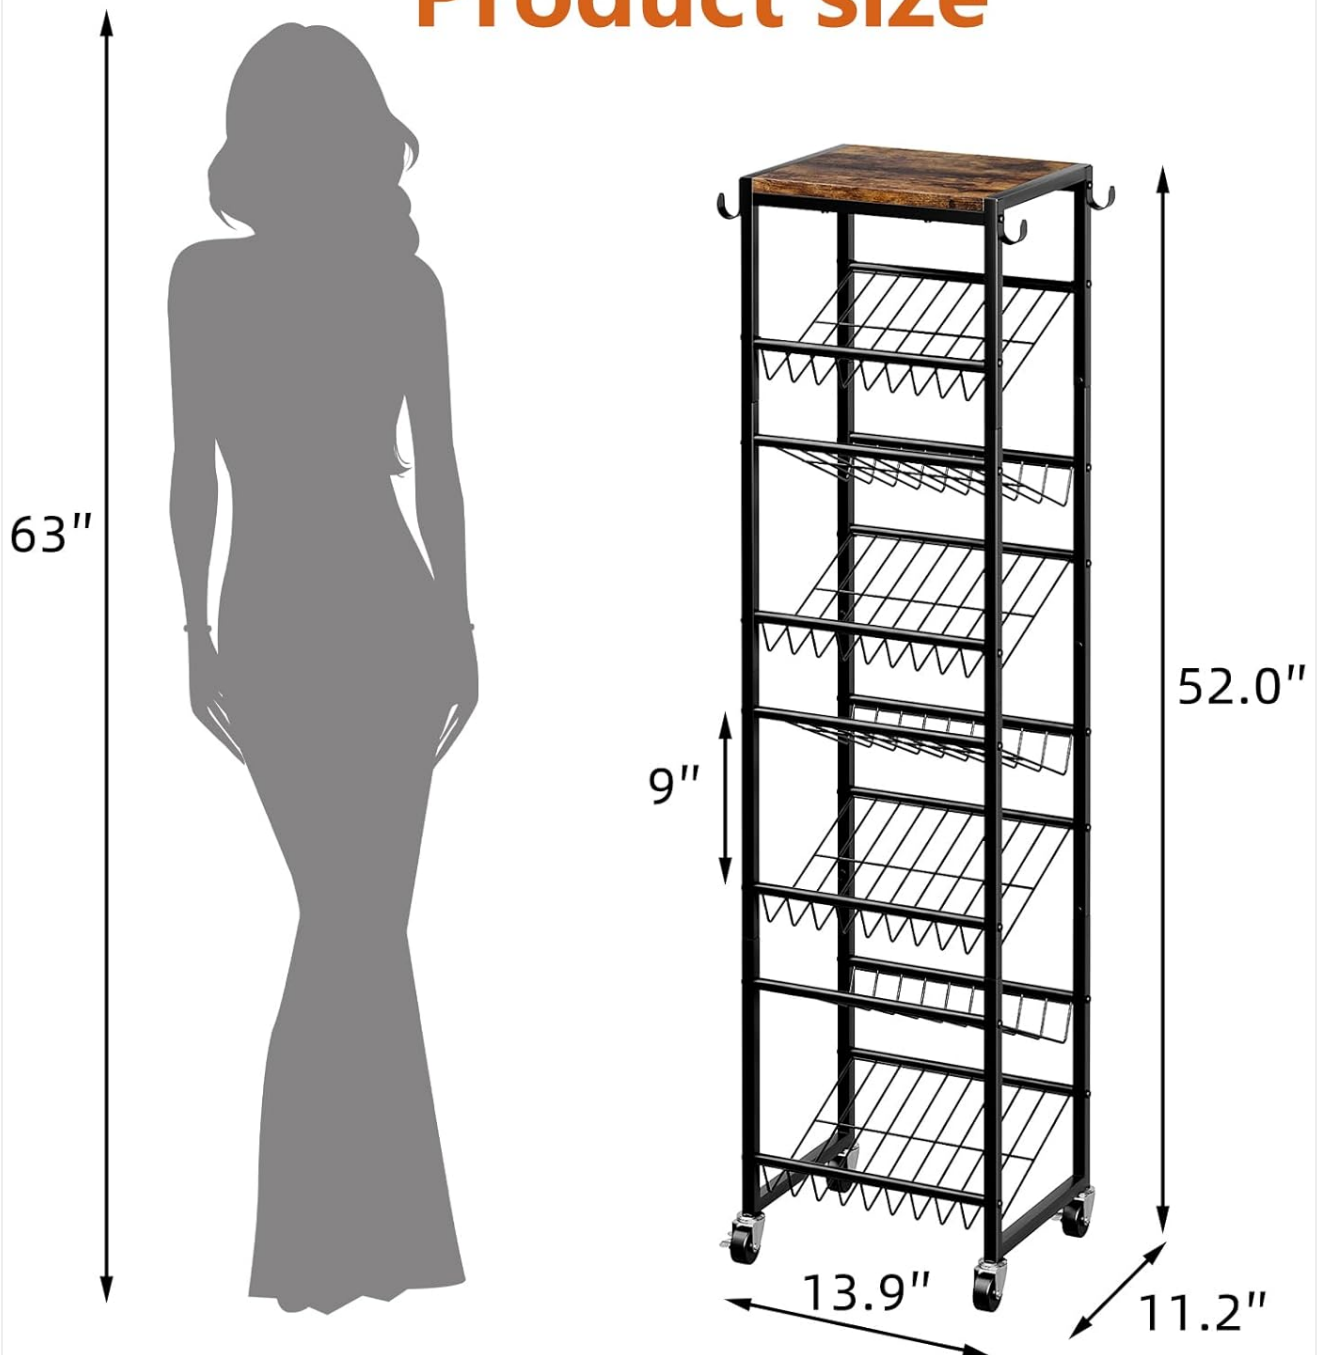


Image 5.1: Product dimensions for optimal placement and usage.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your shoe rack.

- **Cleaning:** Wipe down the metal frames and shelves with a soft, damp cloth. For the engineered wood top board, use a dry or slightly damp cloth and avoid harsh chemical cleaners.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Check Connections:** Periodically inspect all screws and connections to ensure they remain tight. Tighten if necessary.
- **Caster Care:** Keep casters free of debris (hair, lint) to ensure smooth rotation and movement.

7. TROUBLESHOOTING

If you encounter any issues with your shoe rack, refer to the following common solutions:

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Uneven floor; loose connections; anti-tip kit not installed.	Ensure adjustable feet are properly leveled. Tighten all screws. Install the anti-tip kit securely to a wall.
Casters do not roll smoothly.	Debris caught in casters; brakes engaged.	Clean any hair or debris from the caster wheels. Ensure brakes are disengaged.
Shelves are not holding weight.	Exceeded weight limit; improper installation.	Do not exceed 11 lb per shelf. Re-install shelves, ensuring they are correctly seated in the frame.
Difficulty assembling.	Instructions unclear; parts misidentified.	Review the assembly instructions carefully, paying attention to part labels and diagrams. Contact customer service if issues persist.

8. SPECIFICATIONS

Feature	Detail
Brand	UNITSTAGE
Model	8-tier Rotating Vertical Shoe Rack Tower
Dimensions (L x W x H)	13.9" x 11.2" x 52.0" (35.3 cm x 28.4 cm x 132.1 cm)
Number of Tiers	8
Material	Engineered Wood (Top Board), Iron/Metal (Frame & Shelves)
Color	Rustic Brown (Top Board), Black (Metal Frame)
Top Shelf Weight Capacity	22 lb (10 kg)
Each Mesh Shelf Weight Capacity	11 lb (5 kg)
Special Features	360° Rotating, Wheeled (2 with brakes), Detachable Shelves, 4 S-shaped Hooks, Anti-Tilting Device, Adjustable Feet
Assembly Required	Yes

9. WARRANTY AND SUPPORT

UNITSTAGE is committed to providing quality products and customer satisfaction.

- **Returns:** This product typically comes with a 30-day return policy from the date of purchase. Please refer to your retailer's specific return policy for details.
- **Customer Service:** If you have any concerns, questions, or require assistance with assembly or parts, please do not hesitate to reach out to our customer service team. Contact information can usually be found on the retailer's website or your purchase documentation.

