

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [jumper](#) /

> [Jumper EZbook S7Hi 15.6-inch Laptop User Manual](#)

jumper EZbook S7Hi

Jumper EZbook S7Hi 15.6-inch Laptop User Manual

Model: EZbook S7Hi | Brand: Jumper

1. INTRODUCTION

This manual provides comprehensive instructions for the Jumper EZbook S7Hi 15.6-inch laptop. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience. Please read this manual thoroughly before using your new laptop.

2. WHAT'S IN THE BOX

Upon unboxing, verify that all the following items are included:

- Jumper EZbook S7Hi Laptop
- Power Adapter (Charger)
- User Manual



Image: The Jumper EZbook S7Hi laptop shown with its power adapter and user manual.

3. PRODUCT OVERVIEW

The Jumper EZbook S7Hi is designed for portability and efficiency, suitable for business, education, and everyday use. It features a slim profile and a 15.6-inch HD display.

3.1 Key Features

- **Portable Lightweight Design:** Weighing approximately 3.6 lbs, the laptop is easy to carry for travel, work, or school.
- **Powerful Processor:** Equipped with a 1.9GHz Intel 5205U processor for efficient multitasking.
- **Ample Storage with Expansion:** 128GB internal storage with an additional 1TB SSD expansion slot.
- **Windows 11 and Office 365:** Pre-installed Windows 11 and a one-year Office 365 subscription.
- **Comprehensive Connectivity:** Includes Type-C, HDMI, SD Card Reader, dual-band Wi-Fi 5, and Bluetooth 4.2.

3.2 Visual Guide

Office 365



Includes a 12-Month subscription of Office 365 Personal

Worth \$99.99



Image: The laptop's 15.6-inch HD display, highlighting its 16:9 aspect ratio and 5mm ultra-narrow bezels.

Experience the pinnacle of efficiency

1.9GHz | **14nm**
Burst Frequency | Lithography

2 | **2** | **2MB**
Cores | Threads | Cache



Image: Diagram illustrating the Intel 5205U processor with 1.9GHz burst frequency, 2 cores, 2 threads, and 2MB cache.

Powerful storage function

Jumper EZbook S7 with **4GB** RAM DDR4 and **128GB** ROM SSD, supporting 512GB TF card expansion, you don't have to worry about memory storage anymore!

4GB
DDR4

128GB
SSD

512GB
TF Expand

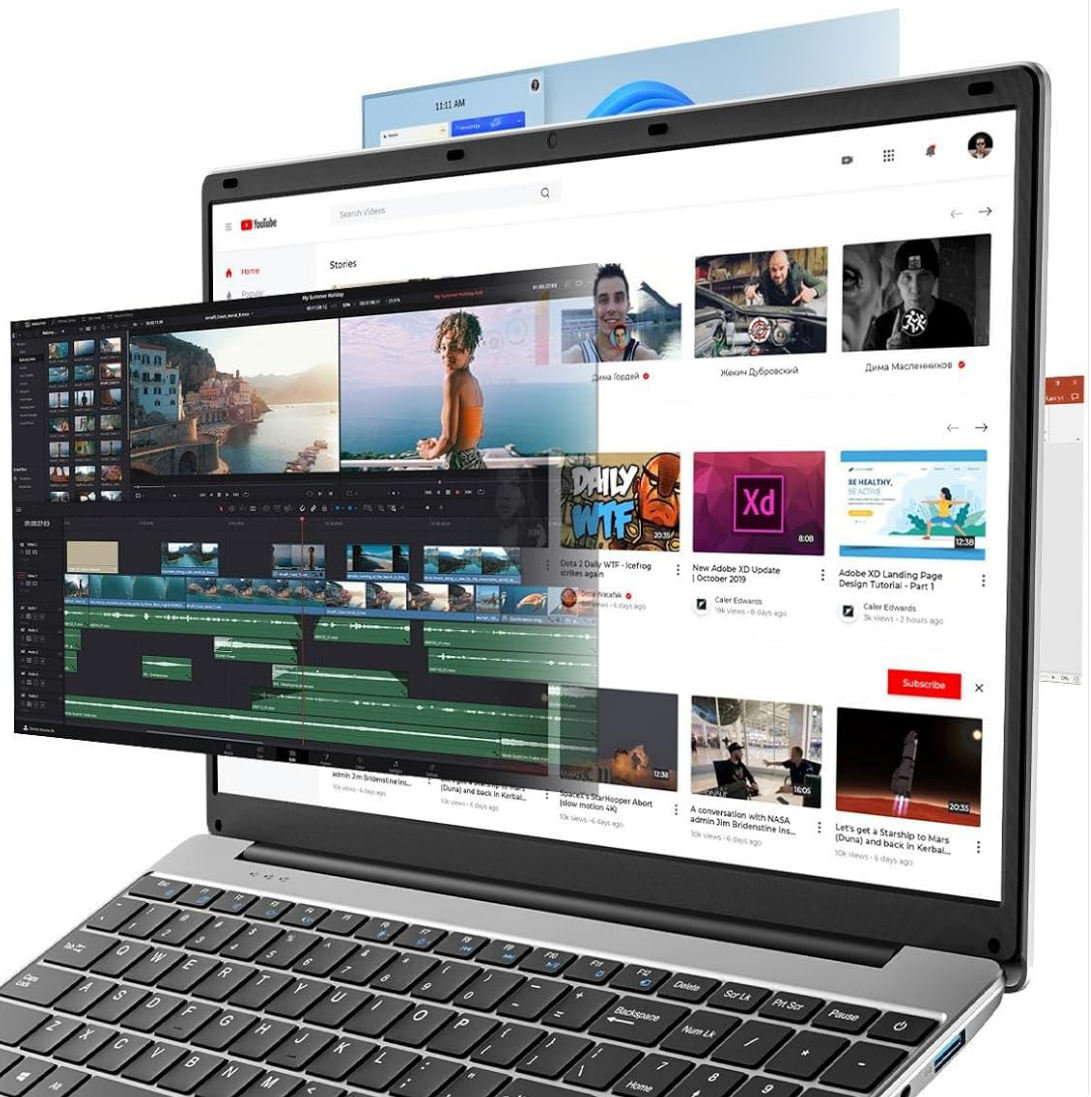


Image: The Jumper EZbook S7 laptop displaying various applications, emphasizing its 4GB DDR4 RAM, 128GB SSD, and 512GB TF card expansion support.

Portable & Reliable Battery

With the 38Wh/7.6V 5000mA Li-Polymer battery pack, you can effectively use your computer for 6-8 hours, and the lightweight body helps you take it with you.

1.65kg
weight

3.5mm
Thickness



Image: Close-up of the laptop's keyboard, featuring a separate numeric keypad, large touchpad, and a front 2MP webcam.

Equipped with a separate numeric keypad, large touchpad and large keycaps for greater office productivity.



22 MM
Large Keyboard



Separate
Numeric Keypad



Large
Touchpad

Image: Diagram showing the laptop's various ports, including Type-C, HDMI, DC Power, USB 3.0, 3.5mm Headphone Jack, and TF Card slot.

4. SETUP GUIDE

4.1 Initial Power-On and Windows 11 Setup

1. Connect the power adapter to the laptop and a power outlet.
2. Press the power button to turn on the laptop.
3. Follow the on-screen instructions to complete the Windows 11 initial setup, including language selection, network connection, and user account creation.

4.2 Office 365 Activation

Your laptop includes a pre-installed one-year subscription to Office 365. Follow these steps to activate it:

1. Once Windows 11 setup is complete, open any Office application (e.g., Word, Excel).
2. Follow the prompts to sign in with your Microsoft account or create a new one.
3. The Office 365 subscription will be linked to your Microsoft account.

10th Gen Dual-Core

5205U Prozessor

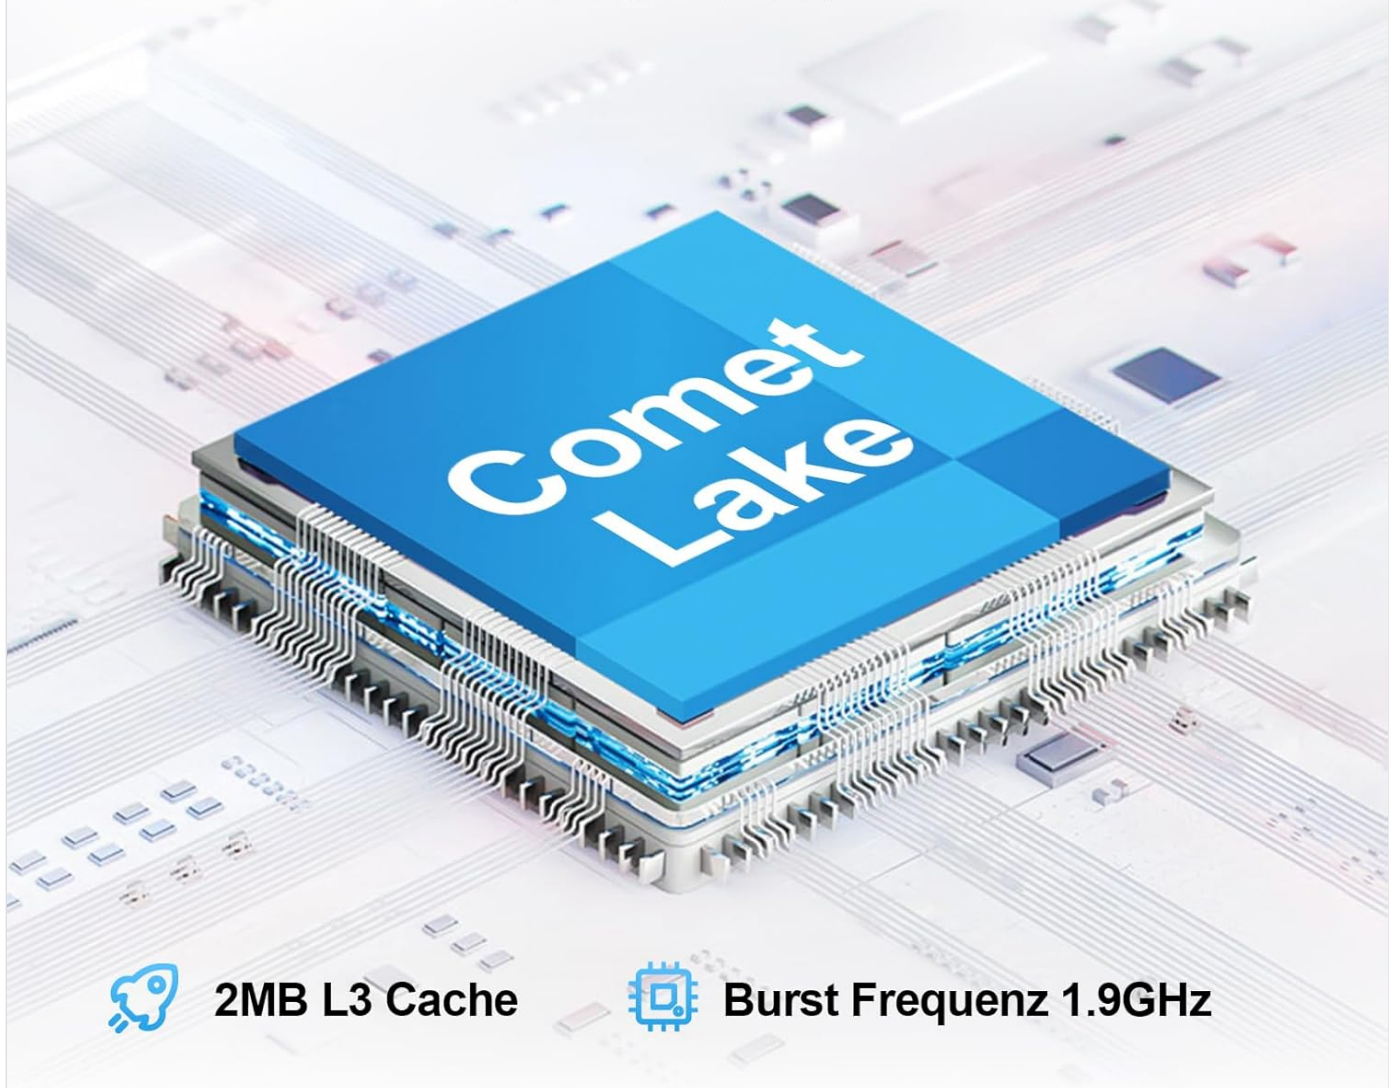


Image: The laptop screen displaying the Microsoft 365 welcome and activation prompt.

5. OPERATING YOUR LAPTOP

5.1 Keyboard and Touchpad

The laptop features a full-size keyboard with a dedicated numeric keypad and a large touchpad for navigation. A removable membrane is included to protect the keyboard from dust and spills.

5.2 Connecting Peripherals

Utilize the various ports for connecting external devices:

- **USB-A Ports:** For connecting USB devices like mice, keyboards, or external drives.
- **USB-C Port:** For versatile connectivity, including data transfer and display output (if supported by the connected device).
- **HDMI Port:** Connect to external monitors or projectors for extended display.
- **SD Card Reader:** Insert SD cards for photo and data transfer.
- **3.5mm Headphone Jack:** Connect headphones or external speakers.

5.3 Wireless Connectivity

The laptop supports dual-band Wi-Fi 5 (802.11ac) for fast internet access and Bluetooth 4.2 for connecting wireless peripherals.

5.4 Battery Life

The integrated 38Wh/7.6V 5000mA Li-Polymer battery provides an average battery life of up to 8 hours, depending on usage patterns and settings.

15.6 inch Large HD Display

1366*768 HD 16:9 Screen



16:9
The golden ratio

5mm
Ultra-narrow bezels

Image: The laptop highlighting its 1.65kg weight, 3.5mm thickness, and 6-8 hour battery life.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your laptop.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and exterior. Avoid harsh chemicals.
- **Software Updates:** Regularly update Windows 11 and other software to ensure security and optimal performance.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and fully discharging the battery frequently.
- **Storage Management:** Periodically clear unnecessary files and applications to maintain system speed. Consider using the 1TB expansion slot for large files.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Issue	Possible Solution
Laptop does not power on.	Ensure the power adapter is securely connected and the outlet is functional. Try holding the power button for 30 seconds to reset.
Slow performance.	Close unnecessary applications, check for background updates, or free up storage space.
Wi-Fi connectivity issues.	Restart your router and laptop. Ensure Wi-Fi is enabled and you are connecting to the correct network.
Keyboard or touchpad unresponsive.	Restart the laptop. Ensure the keyboard membrane is correctly placed or removed if it's causing interference.

If you encounter issues not listed here or require further assistance, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	EZbook S7-Hi
Screen Size	15.6 Inches
Screen Resolution	1366 x 768 pixels (HD)
Processor	Intel 5205U (1.9 GHz Celeron)
RAM	4 GB DDR4
Hard Drive	128 GB eMMC (Expandable up to 1 TB SSD)
Operating System	Windows 11
Graphics Card	Integrated Intel Graphics
Wireless Type	2.4 GHz & 5 GHz Wi-Fi (802.11ac), Bluetooth 4.2
Ports	2x USB 3.0, 1x Type-C, 1x HDMI, 1x SD Card Reader, 1x 3.5mm Headphone Jack, DC Power
Average Battery Life	8 Hours
Item Weight	3.64 pounds
Product Dimensions	14.05 x 8.97 x 0.81 inches
Special Feature	Office 365 1-Year Subscription

9. WARRANTY AND SUPPORT

Jumper laptops come with a one-year warranty. For any product issues or support, please follow the instructions below:

- **Online Support:** Log in to your Amazon buyer account, find your order, and click "Get Product Support."
- **Email Support:** Contact service@jumper-customersupport.com.

The support team aims to assist you within 24 hours.



Image: Jumper customer support details, including steps to get product support via Amazon and a support email address.