Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- , **HP** /
- > HP OmniDesk Slim S03-0001in Desktop PC User Manual

HP S03-0001in

HP OmniDesk Slim Desktop PC User Manual

Model: \$03-0001IN

Introduction

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your HP OmniDesk Slim Desktop PC, model S03-0001in. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.



Image: Front view of the HP OmniDesk Slim Desktop PC, showcasing its compact and sleek design.

Setup

Follow these steps to set up your HP OmniDesk Slim Desktop PC.

- 1. **Unpacking:** Carefully remove the desktop PC, keyboard, mouse, and power adapter from the packaging.
- 2. Connecting Peripherals:
 - Connect the wired keyboard and mouse to the available USB-A ports on the rear of the PC.
 - Connect your monitor to the HDMI or DisplayPort on the rear of the PC.
 - If using external speakers or headphones, connect them to the audio jack.
- 3. **Power Connection:** Connect the power adapter to the PC's power input, then plug the power cord into a wall outlet.
- 4. **Initial Power On:** Press the power button located on the front of the PC. The system will boot up, and you will be guided through the Windows 11 setup process.

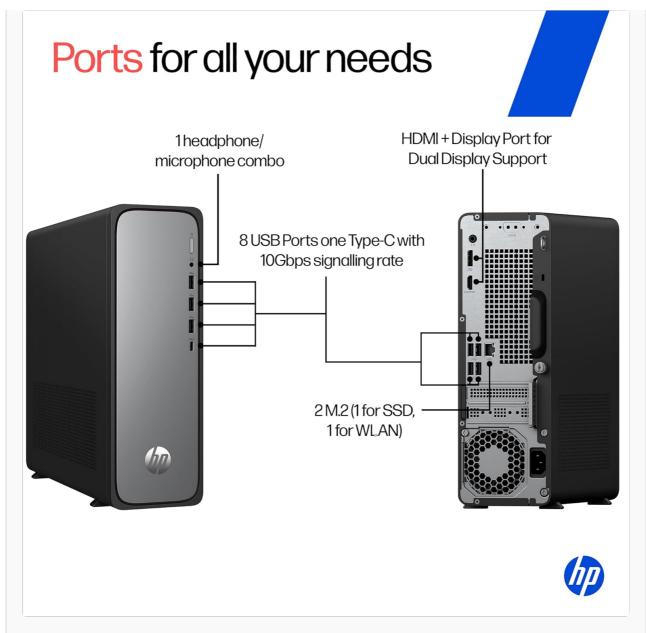


Image: Front and rear views of the HP OmniDesk Slim, illustrating the location of various ports including USB, HDMI, DisplayPort, and audio jacks for connecting peripherals.

Operating

Your HP OmniDesk Slim PC comes pre-installed with Windows 11 Home, Microsoft Office 2024, and a 1-year subscription to Microsoft 365 Basic.

- Power On/Off: Press the power button to turn on the PC. To shut down, click the Start button in Windows, then Power > Shut down.
- Connectivity:
 - Wi-Fi: Connect to a wireless network via the Windows network settings. The PC supports Wi-Fi 6 for fast wireless connections.
 - **Bluetooth:** Pair Bluetooth devices such as headphones or speakers through Windows Bluetooth settings. Bluetooth 5.4 is supported.
 - **USB Ports:** Utilize the 1 USB Type-C (10Gbps signaling rate) and multiple USB Type-A (5Gbps signaling rate) ports for connecting external drives, printers, and other USB devices.
- Audio: The headphone/microphone combo jack on the front allows for easy connection of headsets.
- Display: The PC supports dual display output via HDMI and DisplayPort for enhanced productivity.



Image: The HP OmniDesk Slim desktop, emphasizing its modern connectivity features like Wi-Fi 6 and Bluetooth 5.4, fast USB Type-C data transfer, and energy-efficient power supply.

Maintenance

Regular maintenance helps ensure optimal performance and extends the life of your PC.

- **Software Updates:** Regularly check for and install Windows updates and driver updates to keep your system secure and performing efficiently.
- · Cleaning:
 - Use a soft, dry cloth to clean the exterior of the PC.
 - Periodically use compressed air to clear dust from vents to prevent overheating. Ensure the PC is powered off before cleaning vents.
- **Data Backup:** Regularly back up important data to an external drive or cloud storage to prevent data loss.

Troubleshooting

If you encounter issues with your HP OmniDesk Slim PC, try these basic troubleshooting steps:

- **No Power:** Ensure the power cord is securely connected to both the PC and the wall outlet. Try a different outlet if necessary.
- **No Display:** Verify that the monitor is powered on and correctly connected to the PC. Try connecting to a different port on the PC or using a different cable if available.
- **No Internet Connection:** Check your Wi-Fi router and ensure it is working. In Windows, verify that Wi-Fi is enabled and you are connected to the correct network.
- **Peripheral Not Working:** Ensure the keyboard, mouse, or other peripherals are properly connected to the correct ports. Try connecting them to a different USB port.
- **System Slowdown:** Close unnecessary applications. Check for background processes that might be consuming resources. Ensure your system is up to date.

For more advanced troubleshooting or persistent issues, refer to the HP support website or contact HP customer service.

Specifications

Key technical specifications for the HP OmniDesk Slim S03-0001in Desktop PC:

Feature	Detail
Processor	Intel Core i3-13100 (up to 4.5 GHz, 4 cores, 8 threads, 12 MB L3 cache)
Memory (RAM)	8 GB DDR5-4800 MT/s
Storage	512 GB PCIe NVMe M.2 SSD
Graphics	Intel UHD Graphics (Integrated)
Operating System	Windows 11 Home Single Language in S mode
Pre-installed Software	MSO Home 2024 + 1 Year M365 (Basic)
Wireless Connectivity	Realtek Wi-Fi 6 (2x2) and Bluetooth 5.4
Ports (Front)	1 USB Type-C 10Gbps, 3 USB Type-A 5Gbps, 1 Headphone/Microphone combo
Ports (Rear)	Additional USB Type-A ports, HDMI, DisplayPort
Dimensions (WxDxH)	10 x 30.4 x 29.5 cm
Weight	3.8 kg
Included Peripherals	HP 125 USB Black Wired Keyboard and Mouse combo

Perform with confidence 13th Gen Intel® Core™i3 processor¹ 8 GB DDR5-4800 MT/s RAM 8 GB SSD 512 GB PCle® storage

Image: The HP OmniDesk Slim desktop alongside a summary of its core specifications, including processor, RAM, and storage details.

Environmental Information

The HP OmniDesk Slim is designed with sustainability in mind:

- Constructed with post-consumer recycled plastics.
- EPEAT Gold with Climate+ Registered.
- ENERGY STAR® Certified.



Engineered sustainably









Image: The HP OmniDesk Slim desktop in a natural, futuristic landscape, emphasizing its environmentally conscious design and certifications.

Warranty and Support

Your HP OmniDesk Slim Desktop PC is covered by HP's standard limited warranty. For detailed warranty information, product registration, and technical support, please visit the official HP support website:

www.hp.com/support

You can also find contact information for customer service and service centers on the HP website.

© 2025 HP Inc. All rights reserved.