

[Manuals.plus](#) /

› [Keurig](#) /

› Keurig K-Crema Single Serve Coffee Maker User Manual

Keurig K91

Keurig K-Crema Single Serve Coffee Maker User Manual

Model: K91

INTRODUCTION

The Keurig K-Crema Single Serve Coffee Maker is designed to provide a versatile brewing experience, offering both classic coffee and crema-topped beverages. This manual provides essential information for the proper setup, operation, and maintenance of your K-Crema brewer to ensure optimal performance and longevity.



Image: The Keurig K-Crema coffee maker in black, actively brewing coffee into a clear glass mug, showcasing the sleek design and brewing process.

SETUP

1. Unpacking and Placement

- Remove all packaging materials and tape from the brewer.

- Place the brewer on a stable, flat surface.
- Ensure there is adequate space around the brewer for proper ventilation.

2. Filling the Water Reservoir

- Remove the 72 oz removable water reservoir from the brewer.
- Fill the reservoir with fresh, filtered water up to the MAX fill line.
- Replace the reservoir securely on the brewer.



72 oz Removable Reservoir



Image: A hand pouring water into the clear, 72 oz removable water reservoir of the Keurig K-Crema, illustrating the refilling process.

3. Initial Cleansing Brew


- Place a large mug (at least 10 oz) on the drip tray.
- Do not insert a K-Cup pod.
- Press the 'Classic' button to start a cleansing brew.

- Discard the hot water. The brewer is now ready for use.

OPERATING INSTRUCTIONS

Brewing a Classic Coffee, Tea, or Hot Cocoa

- Lift the handle and insert a K-Cup pod into the K-Cup pod holder.
- Lower the handle completely to close the lid.
- Place a mug on the drip tray.
- Select your desired brew size (6, 8, 10, or 12 oz).
- Press the '**Classic**' button. The brewer will begin brewing.

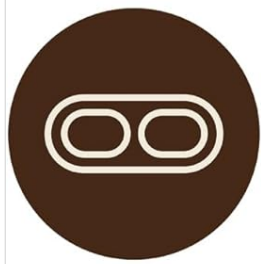

Classic Button for Classic Coffee, Tea, and Hot Cocoa



Image: A detailed view of the Keurig K-Crema's top control panel, highlighting the 'Classic' brew button and the various cup size selections.

Brewing Crema-Topped Coffee or Espresso-Style Shots

- Lift the handle and insert a K-Cup coffee pod into the K-Cup pod holder.
- Lower the handle completely to close the lid.
- Place a mug or espresso cup on the drip tray.
- Select your desired shot size (single or double espresso-style shot).
- Press the '**Pressure**' button. The brewer will begin brewing with PressureInfusion Technology.



Pressure Button for Crema-Topped Coffees and Espresso-Style Shots



Image: A detailed view of the Keurig K-Crema's top control panel, highlighting the 'Pressure' brew button and the single and double shot size selections.

Adjustable Drip Tray

The drip tray is adjustable with three height options to accommodate various cup sizes, including travel mugs. Simply remove and re-position the drip tray to the desired height.



Adjustable Drip Tray for 3 Height Options



Image: The Keurig K-Crema brewer illustrating its adjustable drip tray, which can be set at three different heights to fit various cup and mug sizes.

K-Cup Pod Compatibility

The Keurig K-Crema is compatible with any K-Cup pod. The Pressure Setting is specifically designed for use with coffee and espresso beverages to achieve the desired crema.



Image: An assortment of various K-Cup pods, demonstrating the wide range of compatible coffee, tea, and hot cocoa options available for the Keurig K-Crema brewer.

MAINTENANCE

Cleaning the Brewer

- **Drip Tray:** The drip tray can accumulate spills. Remove it and wash with warm, soapy water. Rinse thoroughly and dry.
- **Water Reservoir:** Periodically clean the water reservoir with warm, soapy water. Rinse thoroughly. Do not use abrasive cleaners.
- **K-Cup Pod Holder:** The K-Cup pod holder can be removed for cleaning. Wash with warm, soapy water and rinse.
- **Exterior:** Wipe the exterior of the brewer with a damp, non-abrasive cloth.

Descaling

Mineral deposits can build up in your coffee maker over time, affecting performance. The 'Descale' indicator light will illuminate when descaling is recommended. Refer to the full Keurig descaling instructions on the official Keurig website for the complete process.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Brewer not turning on	Not plugged in or power outlet issue.	Ensure the brewer is securely plugged into a grounded outlet. Check the circuit breaker.
"Add Water" light illuminated	Water reservoir is low or empty.	Refill the water reservoir to the MAX fill line.
Coffee not brewing or partial brew	K-Cup pod not properly seated, water reservoir low, or brewer needs descaling.	Ensure K-Cup pod is correctly inserted. Check water level. Perform descaling if the 'Descale' light is on.
"Descale" light illuminated	Mineral buildup in the brewer.	Perform a descaling procedure as per Keurig's official instructions.

SPECIFICATIONS

Feature	Detail
Brand	Keurig
Model Name	Keurig K-Crema
Item Model Number	K91
Color	Black
Product Dimensions	13.3"D x 8.54"W x 13.1"H
Item Weight	11.72 pounds
Water Reservoir Capacity	72 oz
Brew Sizes	6, 8, 10, 12 oz (Classic); Single, Double (Espresso-style shots)
Coffee Input Type	K-Cup Pods
Special Feature	Adjustable Brew Strength, PressureInfusion Technology, MultiStream Technology
Manufacturer	Keurig Dr Pepper
UPC	611247403563

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Keurig website or contact Keurig customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I descale the Keurig K-Crema (Model K91) coffee maker?

To descale your Keurig K-Crema (Model K91), you should perform a descaling procedure when the 'Descale' indicator light illuminates. While the specific button sequence for the K-Crema's descaling mode is not detailed in the...

[Read full answer](#)