

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AMZCHEF](#) /

› [AMZCHEF Portable Indoor Grill and Induction Cooktop User Manual](#)

AMZCHEF FS-IRC121G

AMZCHEF Portable Indoor Grill and Induction Cooktop User Manual

Model: FS-IRC121G

Brand: AMZCHEF

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs. Always use the provided heat-resistant gloves when handling the hot grill pan or lid.
- To protect against electrical hazards, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. This appliance features a **Child Safety Lock**.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- The maximum total power for both heating elements should not exceed 1800W.
- Ensure adequate ventilation around the appliance during use.

2. PRODUCT OVERVIEW

The AMZCHEF Portable Indoor Grill and Induction Cooktop is a versatile appliance designed for various cooking needs. It features a powerful 1800W heating system, a removable non-stick grill pan, and precise temperature control.

Components:

- Induction Cooktop Base
- Removable Non-Stick Grill Pan

- Lid with Handle
- Heat-Resistant Gloves (2)
- Instruction Manual

Key Features:

- **Powerful 1800W:** Ensures quick heating and even cooking.
- **Large Cooking Area:** 16" x 9" surface, ideal for family meals and gatherings.
- **5 Temperature Levels:** For precise heat control (248°F to 410°F).
- **99-Minute Timer:** For convenient cooking duration management.
- **Removable Non-Stick Grill Pan:** Easy food release and cleaning.
- **Child Safety Lock:** Enhances kitchen safety.
- **Non-Slip Feet:** Provides stability during operation.



Figure 2.1: The AMZCHEF Portable Indoor Grill demonstrating 1800W intense searing power for quick and even cooking.

ELECTRIC GRIDDLE DIMENTSTIONS



Figure 2.2: Product dimensions of the electric griddle: 17.9 inches long, 9.1 inches wide, and 4.3 inches high, with a 47.24-inch power cord.

3. SETUP

Follow these steps for initial setup before first use:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Clean:** Before first use, wash the removable grill pan and lid with warm, soapy water. Wipe the induction cooktop base with a damp cloth. Ensure all parts are completely dry before assembly.
4. **Placement:** Place the induction cooktop base on a flat, stable, and heat-resistant surface, ensuring there is sufficient space around it for ventilation.
5. **Assemble:** Place the removable grill pan securely onto the induction cooktop base.
6. **Connect Power:** Plug the power cord into a standard 120V~60Hz electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn on, press the **Power button** (🔌). The display will light up.
- To turn off, press and hold the **Power button** for 3 seconds.

4.2 Grill Function

When the removable grill pan is placed on the induction cooktop, the machine will automatically enter grill function mode. Both heating elements work together with a single temperature setting.

1. Ensure the grill pan is correctly positioned on the cooktop.
2. Press the **Grill Function button** (🔥). The default setting is temperature level C5.
3. Adjust the temperature level (C1-C5) by rotating the **rotary knob**. Refer to the 'Temperature / Power Settings' table in Section 6 for corresponding temperatures.
4. The grill will begin to heat. You can place food on the non-stick surface.
5. Use the lid to help lock in heat and cook food more evenly.



Figure 4.1: Adjusting one of the 5 temperature levels for precise heat control on the AMZCHEF grill.

ELECTRIC GRIDDLE PAN

Grill What You Want



Figure 4.2: The electric griddle pan in use, grilling steak, chicken, vegetables, and fried eggs.

4.3 Induction Cooktop Function (without grill pan)

When the grill pan is removed, the appliance functions as a dual induction cooktop. Each burner can be controlled independently.

1. Ensure the grill pan is removed.
2. Place compatible magnetic cookware on either induction zone.
3. Press the **Power button** for the desired side (left or right).
4. Adjust the power level (P1-P9) by rotating the corresponding **rotary knob**. Refer to the 'Temperature / Power Settings' table in Section 6 for corresponding power levels.
5. The maximum power should not exceed 1800W total. If one side is set to a high power, the other side's maximum available power will decrease accordingly.



DOUBLE INDUCTION COOKTOP

Only Compatible With Magnetic Cookware

BBQ GRILL FUNCTION

Freely Cook Delicious Barbecue

Figure 4.3: The AMZCHEF appliance functioning as a double induction cooktop, compatible with magnetic cookware.

4.4 Timer Function

The timer can be set for up to 99 minutes.

1. Press the **Timer button** (🕒). The display will show '00'.
2. Rotate the **rotary knob** to set the desired cooking time from 1 to 99 minutes.
3. The timer will start counting down. Once the time expires, the appliance will automatically turn off.



Figure 4.4: The 99-minute timer feature on the AMZCHEF Electric Grill, allowing for precise cooking duration.

4.5 Child Safety Lock

To activate the child safety lock:

- Press and hold the **Lock button**  for 3 seconds. The control panel will be locked, preventing accidental changes to settings.
- To deactivate, press and hold the **Lock button** again for 3 seconds.



Figure 4.5: The child safety lock feature, indicated by a padlock icon, ensures safe operation around children.

5. COOKING TIPS

- **Preheating:** For best results, preheat the grill pan for 5-10 minutes before adding food. This ensures even cooking and better searing.
- **Using the Lid:** The cleverly designed lid locks in heat, ensuring that your food warms up quickly and evenly, enhancing its flavors and aroma.
- **Non-Stick Surface:** The removable baking tray features a special non-stick coating that allows food to slide off effortlessly. Minimal oil is needed.
- **Less Smoke, Less Mess:** The design of the grill minimizes smoke, making it suitable for indoor use.
- **Versatility:** This electric grill pan handles it all—juicy steaks, crispy veggies, fluffy pancakes, even grilled seafood.



Figure 5.1: The AMZCHEF Portable Indoor Grill is perfect for family gatherings, allowing everyone to enjoy good food and conversations.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your AMZCHEF appliance.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Grill Pan:** The removable baking tray can be easily removed for hand washing or placed in the dishwasher.
3. **Cooktop Base:** Wipe the induction cooktop base with a soft, damp cloth. Do not immerse the base in water or any other liquid.
4. **Lid:** The lid can be washed with warm, soapy water or placed in the dishwasher.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.

EASY CLEANING

**DISHWASHER
SAFE**



WIPE CLEANING

Figure 6.1: The removable grill pan is dishwasher safe, and the cooktop base can be easily cleaned with a wipe.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outage; Power button not pressed correctly.	Ensure power cord is securely plugged in; Check household circuit breaker; Press and hold the Power button for 3 seconds.
Grill pan not heating	Grill pan not properly placed; Grill function not selected.	Ensure grill pan is centered and flat on the cooktop; Press the Grill Function button.
Induction cooktop not heating (Error Code 'E0')	Incompatible cookware; No cookware present.	Use magnetic (induction-compatible) cookware; Place cookware on the induction zone.
Temperature/Power not adjusting	Child Safety Lock is active.	Deactivate Child Safety Lock by pressing and holding the Lock button for 3 seconds.

If the problem persists after trying these steps, please contact AMZCHEF customer service.

8. SPECIFICATIONS

Feature	Detail
Model	FS-IRC121G
Rated Voltage	120V~60Hz
Power	1800W
Product Dimensions (D x W x H)	17"D x 2"W x 8"H (Base) / 17.9"L x 9.1"W x 4.3"H (Grill Pan)
Special Feature	Lightweight, Removable Grill Pan, 5 Temperature Levels, 99 Min Timer, Child Safety Lock
Color	Deep Black

Temperature / Power Settings for Grill Function:

Level	Temperature (°F)
C1	248
C2	284
C3	320
C4	356
C5	410

Power Distribution for each side when single stove working by power setting mode (P0: Power setting mode):

Stove	P1	P2	P3	P4	P5	P6	P7	P8	P9
Left Power (W)	400 Intermittent	400	500	600	700	800	900	1000	1100
Right Power (W)	400 Intermittent	400	500	600	700	800	900	1000	1100

Note: When both stoves are working by power setting mode at the same time, the maximum power should not exceed 1800W total. Once total power over 1800W after setting of one stove, the power of another one will decrease accordingly. While setting one of the stoves, another one will not change, if total power does not exceed 1800W.

9. WARRANTY AND SUPPORT

Your AMZCHEF Portable Indoor Grill and Induction Cooktop comes with a standard manufacturer's warranty. Please refer to the included warranty card for specific terms and conditions.

If you have any questions or need assistance, please feel free to contact us directly. Our dedicated customer service team is committed to responding to you promptly, typically within 24 hours.

For further information or support, please visit the AMZCHEF store online: [AMZCHEF Store](#)

10. PRODUCT VIDEO

Video 10.1: An official product video demonstrating the features and use of the AMZCHEF Portable Indoor Grill.