



[Manuals.plus](#) /

› [REDCAMP](#) /

› REDCAMP Canopy Camping Tent Instruction Manual for 10'x10' or 10'x20' Pop-Up Canopies

REDCAMP Inner Tent for 10'x10' or 10'x20' Canopies

REDCAMP Canopy Camping Tent Instruction Manual

MODEL: INNER TENT FOR 10'x10' OR 10'x20' STRAIGHT LEG CANOPIES

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your REDCAMP Canopy Camping Tent. This product is designed to convert a standard 10'x10' or 10'x20' straight leg pop-up canopy (frame and shelter not included) into a private and sheltered camping space. Please read these instructions carefully before use to ensure proper assembly and safe operation.



*Canopy & frame NOT included

Image: The REDCAMP Canopy Camping Tent attached to a pop-up canopy frame, providing a sheltered space for users. Note: Canopy frame and top shelter are not included with this product.

Safety Information

- **Do not use in heavy winds or storms.** Severe weather conditions can damage the tent and pose a safety risk.
- **Keep away from open flames and heat sources.** The tent material is not fireproof and can ignite.
- Ensure the canopy frame (not included) is securely anchored before attaching the inner tent.
- Always check for overhead hazards such as dead branches before setting up.

Package Contents

Please verify that all items listed below are present in your package:

- Canopy Side Tent (Main fabric body)
- Fiberglass Tent Pole (1 unit)

- Iron Tent Poles (2 units)
- Rope (for guylines)
- Stakes (for securing the tent)
- Storage Bag

PACKAGE INCLUDED



Tent



Windrope x4



Tent Pole x3



Tent Stake x8



Storage Bag



Image: All components included in the package, neatly laid out for identification.

Setup Instructions

This tent is designed for quick and easy setup. A pop-up canopy frame (10'x10' or 10'x20' straight leg) is required and not included.

1. **Prepare the Canopy Frame:** Set up your existing 10'x10' or 10'x20' straight leg pop-up canopy frame according to its own instructions. Ensure it is fully extended and stable.
2. **Unfold the Tent:** Lay the REDCAMP Canopy Camping Tent flat on the ground next to your canopy frame. Identify the tent's entrance and attachment points.

3. **Insert Poles:** Assemble the fiberglass and iron tent poles. Insert the fiberglass pole into the designated sleeve at the top of the tent's dome section. Insert the two iron poles into the sleeves at the base of the tent's side walls to create structure.
4. **Attach to Canopy Frame:** Lift the tent and align it with one side of your canopy frame. Use the built-in fasteners, adjustable straps, and hooks to securely attach the tent to the legs and frame of your pop-up canopy. Ensure the tent is taut and evenly distributed.
5. **Secure with Stakes and Ropes:** Once attached to the canopy frame, use the provided stakes to secure the base of the tent to the ground. Utilize the ropes (guylines) and additional stakes to further stabilize the tent, especially in windy conditions.



Image: Visual guide for the quick and easy setup process of the canopy camping tent.

Operating Features

Your REDCAMP Canopy Camping Tent includes several features designed for comfort and convenience:

- **Ventilation:** Equipped with mesh doors and windows, the tent promotes smooth air circulation, keeping the interior

cool. The mesh also acts as a barrier against insects.



Image: Arrows indicate airflow through the mesh panels, highlighting the tent's ventilation system.

- **Water Resistance:** Constructed from 150D Oxford fabric with a PU 1500mm coating, the tent effectively repels rainwater, keeping the interior dry during light to moderate showers.

WATER RESISTANT



*Canopy & frame NOT included

Image: Water droplets on the tent fabric, showcasing its water-resistant coating.

- **Internal Features:**

- **Hanging Hook:** Located inside for lanterns or other lightweight items.
- **Mesh Storage Pockets:** Conveniently store small personal items.
- **Two-way Zippers:** For easy access from both inside and outside.
- **Power Port:** A designated opening for electrical cords.
- **Adjustable Straps:** For secure attachment to the canopy frame.



Hanging Hook

Adjustable Strap

Two-way Zippers

Mesh Storage Pocket

Power Port

Image: Detailed view of the tent's internal and external convenience features.



Image: Interior perspective of the tent, demonstrating its spaciousness and functional design.

Maintenance

- **Cleaning:** Clean the tent with a soft brush or sponge and mild soap. Rinse thoroughly with water. Do not use harsh detergents or bleach.
- **Drying:** Ensure the tent is completely dry before packing it away to prevent mildew and odors. Air dry in a shaded area.
- **Storage:** Store the tent in its carrying bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect poles, zippers, seams, and fabric for any damage. Repair small tears promptly to prevent them from enlarging.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tent is not stable or sways in light wind.	Insufficient staking or loose attachment to canopy frame.	Ensure all stakes are firmly driven into the ground. Tighten all adjustable straps and fasteners connecting the tent to the canopy frame. Use all provided guylines.
Water leakage during rain.	Tent not properly pitched, fabric damage, or extreme weather.	Verify the tent is taut and pitched correctly to allow water runoff. Inspect fabric for tears and repair if necessary. Avoid using in heavy rain or storms.
Zippers are sticking.	Dirt or debris in zipper teeth, or fabric caught.	Clean zipper teeth with a brush. Carefully pull fabric away from the zipper path. Apply a zipper lubricant if needed.
Difficulty fitting tent to canopy frame.	Incorrect canopy frame size or improper alignment.	Ensure your canopy frame is a 10'x10' or 10'x20' straight leg model. Re-align the tent carefully, starting from one corner and working your way around.

Specifications

Feature	Detail
Brand	REDCAMP
Model	Canopy Camping Tent (Inner Tent)
Compatibility	10'x10' or 10'x20' Straight Leg Pop-Up Canopies (Frame/Shelter NOT Included)
Material	150D Oxford Fabric with PU 1500mm coating
Color	Khaki
Item Weight	10.5 Pounds (4.8 kg)
Dimensions (L x W x H)	110"L x 95"W x 78"H (approx. 9.2ft x 7.9ft x 6.5ft)
Occupancy	2 Person (comfortably, can fit 4-6 depending on setup)
Coverage	100 square feet (side coverage)
Pole Material	Aluminum, Fiberglass
Water Resistance Level	Water Resistant (PU 1500mm)
Closure Type	Zipper
Recommended Uses	Beach, Camping & Hiking, Party, Tailgate

SIDE TENT FOR 10X10 FT CANOPY



Accommodate
2 People



Package Size
25.19x6.5x6.5"/64x16.5x16.5cm



Net Weight
10.6lbs/4.8kg

Image: Key dimensions of the tent for compatibility and space planning.

Warranty and Support

Specific warranty information for the REDCAMP Canopy Camping Tent is not provided in the product details. For any support inquiries, warranty claims, or further assistance, please refer to the contact information provided by the retailer or the manufacturer, REDCAMP.

You may also visit the [REDCAMP Store on Amazon](#) for additional product information or to contact the brand directly.