

V-1014s

DVTE Universal LCD/LED TV Remote Control V-1014S Instruction Manual

Model: V-1014S | Brand: Generic

1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the DVTE Universal LCD/LED TV Remote Control, model V-1014S. Designed for seamless compatibility with major TV brands including LG, Sony, and Samsung, this remote offers intuitive control over your entertainment system without requiring complex setup or programming.

The V-1014S features a user-friendly layout with clearly marked buttons, including dedicated shortcuts for popular streaming services like Netflix, YouTube, and Prime Video. Its ergonomic design ensures comfortable and efficient use, making it an ideal replacement or backup remote for your smart TV.



Figure 1: Front view of the DVTE Universal Remote Control V-1014S, showing all buttons and layout.

Key Features:

- **Universal Compatibility:** Works with LG, Sony, and Samsung LCD/LED TVs without requiring setup.
- **Streaming Access:** Dedicated buttons for Netflix, YouTube, and Prime Video.
- **Comprehensive Controls:** Full range of functions including channel, volume, playback, and special

modes (P.MODE, S.MODE, 3D).

- **Intuitive Navigation:** Features a directional pad, guide button, and menu controls for easy interface navigation.
- **Smart Functionality:** Includes sleep timer, channel list function, and quick access to audio settings.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This universal remote control is designed for immediate use with compatible LG, Sony, and Samsung LCD/LED TVs and typically requires no additional programming or setup. Simply insert the batteries and point the remote towards your TV.

3. OPERATING INSTRUCTIONS

The DVTE V-1014S remote control offers a wide array of functions for managing your television and smart TV features. Below is a guide to its primary buttons and their uses.

3.1 Basic TV Controls

- **POWER:** Turns the TV on or off.
- **SOURCE:** Cycles through input sources (HDMI, AV, TV, etc.).
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **CH +/-:** Changes the TV channel up or down.
- **VOL +/-:** Adjusts the volume level up or down.
- **MUTE:** Mutes or unmutes the TV audio.

3.2 Navigation and Menu Controls

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections or enters a menu.
- **MENU:** Opens the TV's main menu.
- **GUIDE:** Displays the electronic program guide (if supported by TV).
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits the current menu or function.
- **BACK:** Returns to the previous screen or menu.

3.3 Smart TV and Streaming Functions

- **NETFLIX:** Direct access to the Netflix application.
- **YOUTUBE:** Direct access to the YouTube application.
- **PRIME VIDEO:** Direct access to the Amazon Prime Video application.

- **SMART:** Accesses the TV's smart hub or app launcher.
- **P.MODE (Picture Mode):** Cycles through picture presets (e.g., Standard, Dynamic, Movie).
- **S.MODE (Sound Mode):** Cycles through sound presets (e.g., Standard, Music, Clear Voice).
- **3D:** Activates or deactivates 3D mode (if supported by TV).

3.4 Additional Functions

- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **AUDIO:** Adjusts audio settings or selects audio tracks.
- **REC:** Initiates recording (if TV supports USB recording).
- **FAV:** Accesses favorite channels list.
- **SIZE:** Adjusts screen aspect ratio.
- **CH.LIST:** Displays the channel list.

The remote operates effectively within a maximum range of **10 meters** from the television, provided there are no obstructions between the remote and the TV's infrared receiver.

4. MAINTENANCE

4.1 Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, abrasive cleaners, or immerse the remote in water.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or if the TV does not respond to commands. Always replace both batteries at the same time with new AAA batteries. Dispose of old batteries according to local regulations.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Common Issues and Solutions:

- **Remote is not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote's infrared emitter and the TV's receiver.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Specific buttons are not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.

- Ensure the TV is compatible with the specific function (e.g., some older TVs may not support direct streaming buttons).

- **Remote range is reduced:**

- Replace batteries.
- Ensure no strong light sources (like direct sunlight) are interfering with the infrared signal.

If the issue persists after trying these steps, please refer to the Warranty and Support section for further assistance.

6. SPECIFICATIONS

Model Name	V-1014S
Brand	Generic
Colour	Black
Connectivity Technology	Infrared
Compatible Devices	LCD TV, LED TV, Smart TV (LG, Sony, Samsung)
Number of Buttons	45
Maximum Range	10 Meters

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This DVTE Universal LCD/LED TV Remote Control (Model V-1014S) comes with a **6-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the seller or the manufacturer's customer support. Refer to your purchase documentation for specific contact details.