

## Paragon Lock & Safe B0FFZXBLQG

# Paragon Safes Home Safe User Manual

Model: B0FFZXBLQG

## 1. INTRODUCTION

Thank you for choosing the Paragon Safes Home Safe. This electronic lockbox is designed to provide secure storage for your valuables, including cash, jewelry, important documents, and other personal items. Featuring a robust electronic keypad and emergency key access, this safe offers reliable protection and ease of use. Please read this manual thoroughly before operating your safe to ensure proper setup and function.

## 2. SAFETY INFORMATION

To ensure safe operation and prevent damage to the safe or injury, please observe the following safety guidelines:

- Do not store the emergency keys inside the safe. Keep them in a secure location outside the safe, accessible only to authorized users.
- Keep the safe out of reach of children.
- Do not expose the safe to extreme temperatures or humidity.
- Avoid placing heavy objects on top of the safe.
- Ensure the safe is securely mounted if intended for wall or floor installation to prevent tipping.
- Do not attempt to force the safe open if the electronic lock malfunctions. Use the emergency key.

## 3. PACKAGE CONTENTS

Please check the contents of your package. If any items are missing or damaged, contact customer support immediately.

- Paragon Safes Home Safe Unit
- Emergency Override Keys (2)
- Mounting Hardware (bolts, washers)
- User Manual (this document)



Figure 3.1: Paragon Safes Home Safe. This image shows the exterior of the safe, highlighting its compact design and the electronic keypad for access.

## 4. SETUP

---

### 4.1. Unboxing and Initial Inspection

1. Carefully remove the safe from its packaging.
2. Inspect the safe for any signs of damage during transit.
3. Locate the emergency keys. These are typically taped to the outside of the safe or included in a small bag *Do not store them inside the safe.*

### 4.2. Battery Installation

The safe requires 4 AA batteries (not included) to power the electronic lock.

1. Open the safe using one of the emergency keys. Insert the key into the keyhole, turn it clockwise, and then turn the handle to open the door.
2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

### 4.3. Setting Your Personal Code

The safe comes with a factory default code (usually 1-2-3-4 or 0-0-0-0). It is highly recommended to change this immediately.

1. With the safe door open, locate the red reset button on the inside of the door, near the hinge.
2. Press the red reset button. You will hear a beep, and the yellow indicator light on the keypad will illuminate.
3. Within 5 seconds, enter your desired personal code (3-8 digits) on the keypad.
4. Press the "A" or "B" button (or "#" or "\*" depending on model) to confirm your new code. You will hear a confirmation beep.
5. Test your new code with the door open to ensure it works correctly before closing the safe.

### 4.4. Mounting the Safe (Optional)

For added security, the safe can be mounted to a wall or floor using the pre-drilled holes and included hardware.

1. Choose a suitable location for mounting. Ensure the surface is sturdy enough to support the safe's weight.
2. Mark the drilling points through the pre-drilled holes inside the safe.
3. Drill pilot holes into the wall or floor using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the provided mounting bolts and washers. Tighten securely.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Opening the Safe with Your Personal Code

1. Enter your personal code (3-8 digits) on the keypad.
2. Press the "A" or "B" button (or "#" or "\*" depending on model) to confirm.
3. If the code is correct, the green indicator light will illuminate, and you will hear a beep.
4. Within 5 seconds, turn the handle clockwise to open the safe door.

### 5.2. Opening the Safe with Emergency Key

In case of battery failure or forgotten code, the emergency key can be used.

1. Locate the keyhole cover on the keypad panel (usually a small removable cap).
2. Remove the cover to expose the keyhole.
3. Insert one of the emergency keys into the keyhole and turn it clockwise.
4. While holding the key turned, turn the handle clockwise to open the safe door.
5. Once open, remove the key.

### 5.3. Closing and Locking the Safe

1. Close the safe door firmly.
2. Turn the handle counter-clockwise to engage the locking bolts. The safe is now locked.

## 6. MAINTENANCE

---

### 6.1. Battery Replacement

When the batteries are low, the red indicator light on the keypad may flash or remain lit after entering a code, or the keypad may become unresponsive. Replace batteries promptly.

1. Open the safe door.
2. Locate the battery compartment on the inside of the door.
3. Remove the old batteries and dispose of them responsibly.
4. Insert 4 new AA alkaline batteries, ensuring correct polarity.
5. Close the battery compartment cover.

### 6.2. Cleaning

Clean the exterior of the safe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or electronic components.

### 6.3. Key Care

Keep the emergency keys clean and dry. Do not lubricate the keyhole or lock mechanism with oil or grease, as this can attract dust and cause blockages.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered. Batteries are low or dead. Keypad malfunction.	Re-enter code carefully. Replace batteries. Use emergency key to open, then replace batteries and re-test.
Keypad is unresponsive.	Dead batteries. Loose battery connection.	Replace batteries. Ensure batteries are inserted correctly and compartment is secure.

Problem	Possible Cause	Solution
Safe door will not close.	Obstruction in door frame. Locking bolts not retracted.	Check for items blocking the door. Ensure handle is fully turned to retract bolts before closing.
Emergency key does not work.	Key not fully inserted or turned. Lock mechanism obstructed.	Ensure key is fully inserted and turned clockwise while turning handle. Contact customer support if issue persists.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	B0FFZXBLQG
Brand	Paragon Lock & Safe
Lock Type	Electronic Keypad with Emergency Key Override
Power Source	4 x AA Batteries (not included)
Code Length	3-8 Digits
Interior Features	Interior Shelf
Mounting	Pre-drilled holes for wall/floor mounting
Manufacturer	Paragon Lock & Safe
Date First Available	June 28, 2025

## 9. WARRANTY AND SUPPORT

Paragon Lock & Safe products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Paragon Lock & Safe website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Paragon Lock & Safe customer service. Contact details can typically be found on the manufacturer's website or on your purchase receipt. You can visit the [Paragon Lock & Safe Store on Amazon](#) for more information.