

SoBuy FSR201-N

SoBuy FSR201-N Entryway Shoe Bench with Storage and Seat

Instruction Manual

1. INTRODUCTION

Thank you for choosing the SoBuy FSR201-N Entryway Shoe Bench. This manual provides essential information for the safe assembly, proper use, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

Safety Information

- Do not use the shoe bench for weights exceeding 113 kg (249 lbs).
- Ensure stable and correct assembly on a level floor.
- Exercise caution when opening and closing the flip-down tray to prevent injury.
- Keep small parts away from children during assembly.

2. PRODUCT OVERVIEW

The SoBuy FSR201-N is a compact and functional entryway shoe bench designed to optimize space in small hallways. It features a comfortable seating area and a flip-down shoe storage compartment.



Image 2.1: The SoBuy FSR201-N shoe bench installed in an entryway, providing both seating and shoe storage.

Key Features

- **Compact Design:** Only 24 cm (9.4 inches) deep, ideal for narrow spaces.
- **Comfortable Seating:** Includes a 4 cm thick, removable beige cushion.
- **Shoe Storage:** Flip-down compartment accommodates up to 4 pairs of adult shoes (EU size 47, shaft height ≤ 10 cm).
- **Durable Construction:** Robust metal structure supports up to 113 kg (249 lbs).
- **Easy Maintenance:** Melamine finish is scratch-resistant, water-repellent, and easy to clean.

Dimensions



Image 2.2: Detailed dimensions of the shoe bench, showing its compact size suitable for narrow spaces.

- Overall Dimensions: 60 cm (Width) x 24 cm (Depth) x 50 cm (Height)
- Cushion Thickness: 4 cm
- Net Weight: 9.9 kg (21.8 lbs)

3. SETUP AND ASSEMBLY

The SoBuy FSR201-N shoe bench requires assembly. All necessary components and step-by-step instructions are included in the packaging. Please follow the provided assembly manual carefully.

General Assembly Notes

- Identify all parts and hardware before starting. Components are typically numbered for easy identification.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws during initial assembly; tighten fully once the unit is stable.
- Ensure the unit is placed on a flat, stable surface after assembly.

The assembly process involves constructing the frame, attaching the flip-down door, and securing the cushion. Refer to the detailed graphical instructions provided in your product packaging for specific steps.

4. OPERATING INSTRUCTIONS

Using the Shoe Storage

The shoe bench features a single flip-down door for shoe storage. Gently pull the handle to open the compartment. The interior is designed to hold shoes in an angled position.



Image 4.1: The flip-down compartment open, showing storage for low-cut shoes.



Image 4.2: The flip-down compartment open, demonstrating storage for boots.

The internal shelf can be adjusted or removed to accommodate different shoe types and heights, such as boots or high heels. To adjust, carefully detach the shelf from its supports and reposition it as needed.

Using the Seat

The top surface of the bench is equipped with a soft, comfortable cushion, providing a convenient spot to sit while putting on or taking off shoes.



Image 4.3: A close-up view of the cushion, highlighting its thickness and texture.

The cushion cover is removable for easy cleaning.

5. MAINTENANCE

Proper care will extend the life and appearance of your SoBuy shoe bench.

Cleaning

- Wipe the wooden and metal surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- The melamine finish is resistant to scratches and water, making it easy to clean spills promptly.



Image 5.1: The surface of the bench repelling water, indicating its water-resistant properties.



Image 5.2: A demonstration of the bench's scratch-resistant surface.

- For the cushion, the cover is removable and can be cleaned according to its care label.

General Care

- Avoid exposing the furniture to direct sunlight or extreme temperature changes.
- Periodically check and tighten all screws and fasteners to ensure stability.

6. TROUBLESHOOTING

- **Bench feels unstable:** Ensure all screws are securely tightened. Verify the bench is on a level surface. Adjust feet if applicable.
- **Shoes do not fit in compartment:** Check shoe size against the maximum recommended (EU size 47, shaft height ≤ 10 cm). Adjust or remove the internal shelf to accommodate taller footwear.
- **Flip-down door is stiff:** Check for any obstructions in the mechanism. Ensure all assembly steps for the door were followed correctly.

7. SPECIFICATIONS

| Feature | Detail |
|------------------------|---|
| Model Number | FSR201-N |
| Brand | SoBuy |
| Dimensions (W x D x H) | 60 x 24 x 50 cm (23.6 x 9.4 x 19.7 inches) |
| Weight | 9.9 kg (21.8 lbs) |
| Material | Engineered Wood (MDF E1, PB E1), Metal |
| Color | Black and Light Wood |
| Max. Weight Capacity | 113 kg (249 lbs) |
| Special Features | Scratch-resistant, Water-repellent, Easy to clean |
| Mounting Type | Floor Mount |
| Assembly Required | Yes |

8. WARRANTY AND SUPPORT

Return Policy

If you wish to return a product, please contact our customer service. You may return the item within 30 days of receiving the package.

Customer Support

For any questions, missing parts, or assistance with assembly, please refer to the contact information provided with your purchase or visit the official SoBuy website for support.