

[Manuals.plus](#) /

› [LocoLee](#) /

› LocoLee LED Light Kit Instruction Manual for LEGO 43008 Nike Dunk x (RC Version)

LocoLee 43008

LocoLee LED Light Kit Instruction Manual for LEGO 43008 Nike Dunk x (RC Version)

Model: 43008

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your LocoLee LED Light Kit, specifically designed for the LEGO 43008 Nike Dunk x model. This product is an LED lighting accessory kit only; the LEGO model itself is not included and must be purchased separately.

The RC (Remote Control) Version of this light kit allows for convenient control of the lighting effects.

No Lego Model !

Only Led Light, Blocks Need To Be Purchased Separately

NO LEGO's with light kit

Description: This image clarifies that the product is only an LED light kit and does not include the LEGO model. The LEGO blocks must be acquired separately.

SAFETY INFORMATION

- This product contains small parts and is not suitable for children under 3 years old due to choking hazards.
- Handle wires and LED components carefully to avoid damage. Do not pull wires too hard during installation.
- Ensure the power source voltage is less than 5V (USB power). Using a higher voltage may damage the lights.
- Do not expose the light kit to water or extreme temperatures.
- Always disconnect power before performing any maintenance or adjustments.

PACKAGE CONTENTS

Please verify that all components listed below are present in your package:

- LED Light Kit components (various light strips and individual LEDs)

- Instruction Manual (online access details provided)
- Connecting Cables (various lengths)
- Power Supply (USB compatible)
- Remote Control
- Expansion Boards

Lights Only, **No Models** What Package Included?

1.LED Light Kit

2.Instruction



 **Lights**



Description: This image illustrates the typical contents of the package, including the LED light kit box, an instruction booklet (referencing online instructions), and bags containing various light components. The illuminated LEGO model is shown for context.

 
Package List (NO MODEL)




5 × Light Strip-Blue-28



2 × Light Strip-Cyan-28

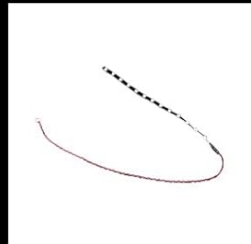

1 × Light Strip-Blue-14

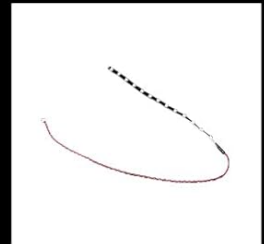 

3 × Light Strip-Cyan-14



1 × Light Strip-Cyan-7



 
5 × Light Strip-Blue-7



1 × Hard light strip-Blue



3 × 8 Expansion Board

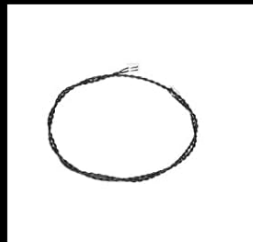

3 × Connecting Cable 15CM



1 × Connecting Cable 5CM



1 × Power Supply



1 × Remote Control


Description: A detailed visual breakdown of the package contents, including specific types and quantities of light strips (blue, cyan), connecting cables, expansion boards, power supply, and the remote control unit.

SETUP INSTRUCTIONS

Follow these steps to install your LocoLee LED Light Kit onto your LEGO 43008 Nike Dunk x model. It is recommended to refer to the detailed online video/PDF instructions for a visual guide.

1. **Prepare the LEGO Model:** Ensure your LEGO 43008 Nike Dunk x model is fully assembled. You may need to partially disassemble certain sections to integrate the light components.
2. **Access Online Instructions:**
 - Locate the website address provided in the included booklet or on the packaging.
 - Enter the model number (43008) or the code found on the back of the packing box into the search bar on the website.
 - Select the appropriate PDF or video instruction guide for your kit.

3. **Test Components:** Before full installation, connect each light part to the power supply to ensure it functions correctly.
4. **Integrate Lights:** Carefully follow the step-by-step instructions provided in the online guide. The design allows for the lights and wires to be hidden within the LEGO structure. Avoid excessive force when handling wires.
5. **Connect Power:** Once all lights are installed, connect the power supply to the main light kit hub. The kit can be powered via USB (ensure voltage is less than 5V).

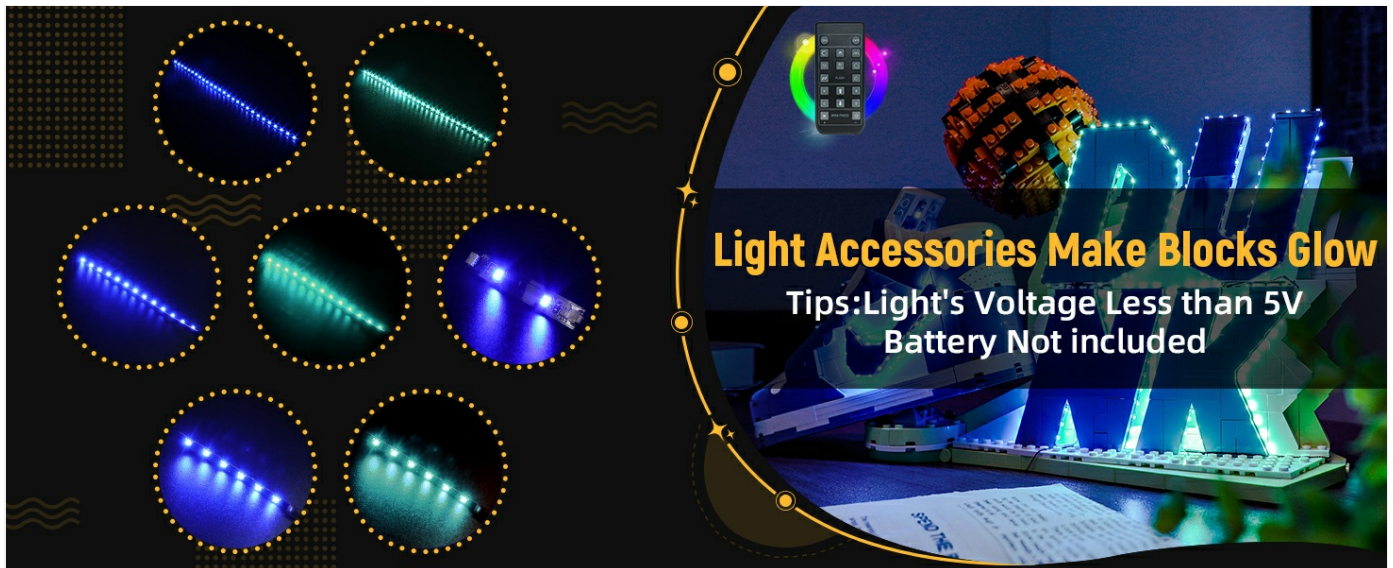

Description: This image outlines the three steps to access the detailed online installation guide: visiting the specified website, entering the model number or code, and then selecting the PDF or video instructions.

OPERATING INSTRUCTIONS

Your LocoLee LED Light Kit (RC Version) is designed for easy operation using the included remote control.

1. **Power On:** Connect the USB power cable to a compatible USB power source (e.g., USB wall adapter, power bank, computer USB port). The lights should illuminate.
2. **Remote Control:** Use the provided remote control to manage the lighting effects.
 - **Power Button:** Turn the lights on or off.
 - **Brightness Adjustment:** Increase or decrease the light intensity.
 - **Color Selection:** Choose from various static colors.
 - **Mode Selection:** Cycle through different lighting modes (e.g., flashing, fading, pulsing).
3. **Optimal Brightness:** For the brightest illumination, ensure the kit is powered by a stable USB power source.



Description: This image visually compares the LEGO model in darkness without the light kit versus the same model illuminated by the installed LED lights, demonstrating the "Glow Upgrade."

Creative DIY LED Light Kit for Your MODEL

Only Decor Light kit, Model Need to Purchased Separately



Description: The LEGO model is shown brightly lit by the LED kit, with the light kit packaging and the remote control visible, indicating the product's function and control method.

Visual Upgrade Details About Lights



Description: This image provides close-up views of the LED lights integrated into different sections of the LEGO model, highlighting the visual details and effects of the lighting.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the LED components and wires. Do not use liquid cleaners.
- **Storage:** If disassembling the light kit for storage, carefully detach components and store them in a dry, cool place away from direct sunlight.
- **Wire Management:** Periodically check that all wires are securely connected and not pinched or damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lights do not turn on.	No power or loose connection. Damaged component.	Ensure USB power is connected and functional. Check all cable connections. Test individual light parts as per setup instructions. Contact support if a component is faulty.
Remote control not working.	Remote battery depleted. Obstruction between remote and receiver.	Replace remote control battery (if applicable, check manual for battery type). Ensure clear line of sight between remote and the light kit's receiver.
Lights are dim.	Insufficient power supply.	Ensure the USB power source provides adequate current. Try a different USB port or adapter.

SPECIFICATIONS

- **Brand:** LocoLee
- **Model Compatibility:** LEGO 43008 Nike Dunk x
- **Version:** RC Version (Remote Control)
- **Light Source Type:** LED (Light Emitting Diode)
- **Power Source:** USB (Voltage less than 5V)
- **Material:** High-quality copper lines and ABS plastic
- **Color:** Multicolor (as per light effects)
- **Batteries Included:** No (for remote control, if applicable)

WARRANTY AND SUPPORT

LocoLee products are manufactured with high-quality materials and undergo quality checks to ensure reliability.

- **Quality Guarantee:** The lighting set is made of high-quality copper lines and ABS plastic, designed for perfect compatibility with LEGO blocks.
- **Customer Support:** If you have any questions or encounter issues with the product, please contact LocoLee customer service. Refer to the product packaging or the official website for contact information.

