

New Orleans Jazz & Heritage Festival Flag

Generic New Orleans Jazz & Heritage Festival Flag Instruction Manual

Model: New Orleans Jazz & Heritage Festival Flag

INTRODUCTION

This manual provides instructions for the proper setup, use, and maintenance of your Generic New Orleans Jazz & Heritage Festival Flag. Please read this manual thoroughly before use to ensure optimal performance and longevity of your flag.

The flag is designed for both outdoor and indoor display, featuring durable polyester fabric and metal grommets for easy installation.

PRODUCT FEATURES

- **Material:** High-quality polyester fabric, designed for durability and resistance to fading.
- **Dimensions:** Approximately 3 feet by 5 feet (90cm x 152cm).
- **Printing:** Single-sided print with vibrant colors that show through on the reverse side.
- **Attachment:** Equipped with two rust-proof metal grommets for secure attachment to a flagpole or other mounting points.
- **Wind Resistance:** Lightweight fabric allows the flag to fly easily even in gentle breezes.



Image: The New Orleans Jazz & Heritage Festival Flag displaying its approximate dimensions of 3 feet by 5 feet (90cm x 152cm).

SETUP INSTRUCTIONS

1. **Unpack the Flag:** Carefully remove the flag from its packaging.
2. **Prepare Mounting Location:** Ensure your chosen flagpole or mounting point is sturdy and free from obstructions. (Flagpole not included).
3. **Attach to Flagpole:** Use the two metal grommets located on the left side of the flag to attach it securely to your flagpole clips or ties. Ensure the flag is oriented correctly.
4. **Verify Security:** Double-check that the flag is firmly attached to prevent it from detaching in windy conditions.

Durable & Beautiful

Brilliant Rust-Proof Metal Grommets For
Hassle-Free Hanging.

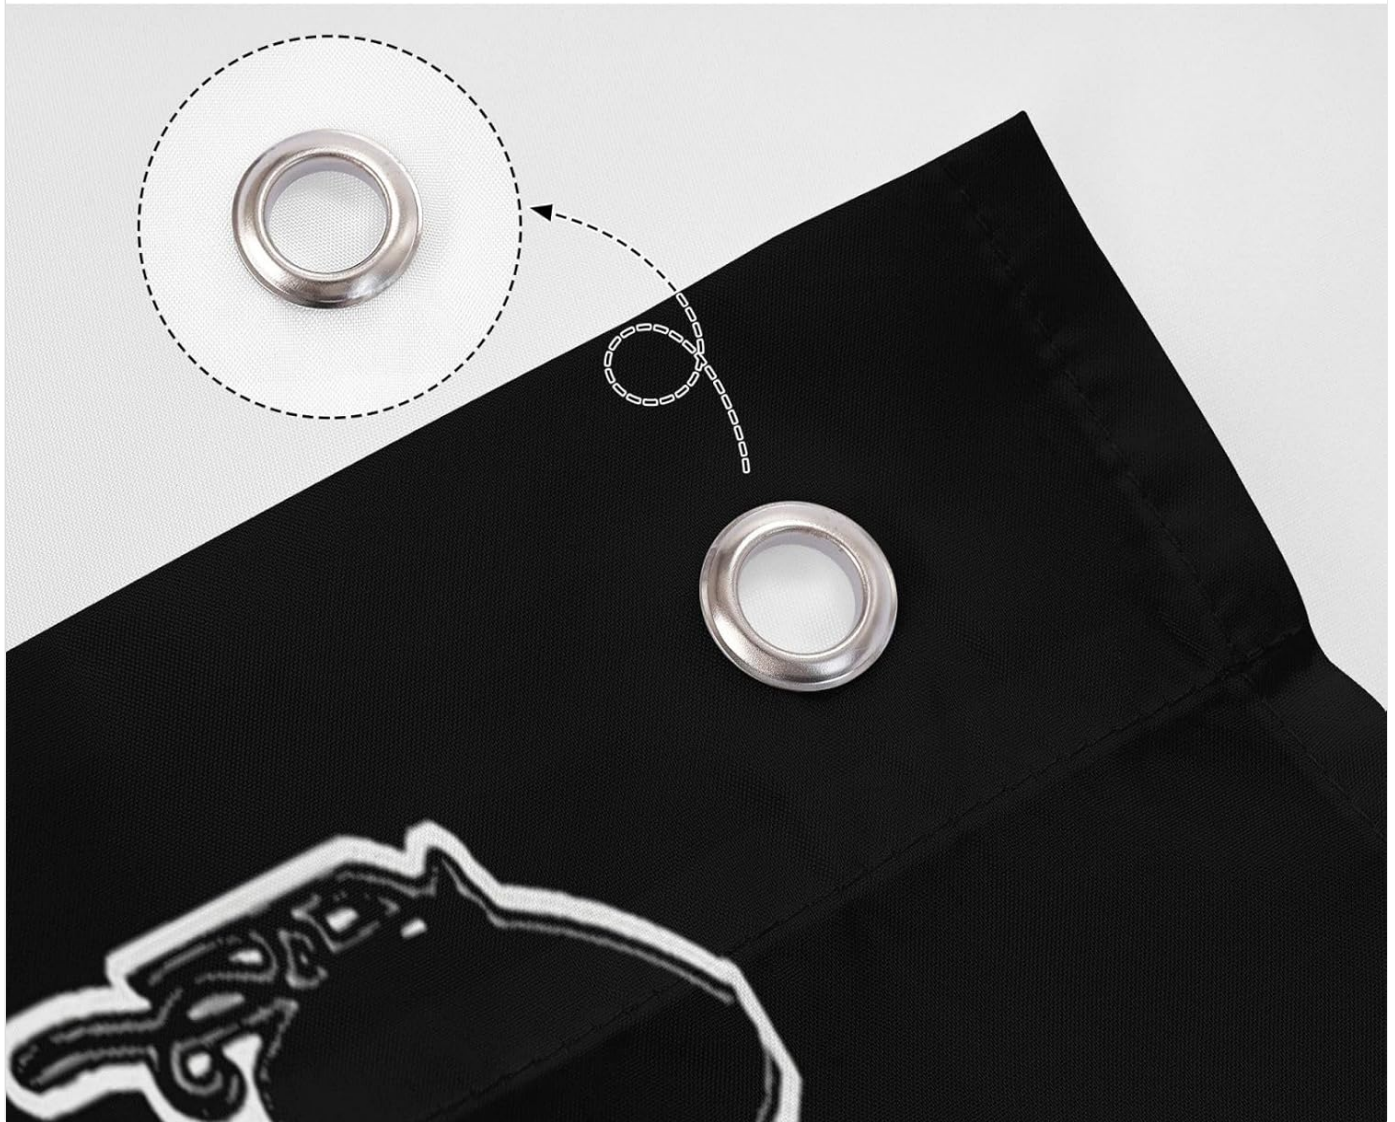


Image: A close-up view of the durable, rust-proof metal grommets designed for secure attachment of the flag.



Image: The New Orleans Jazz & Heritage Festival Flag properly installed on a flagpole, ready for display.

OPERATING GUIDELINES

The New Orleans Jazz & Heritage Festival Flag is designed for display in various settings. Consider the following guidelines for optimal use:

- **Display Locations:** Suitable for outdoor use (gardens, lawns, balconies, public spaces) and indoor use (rooms, offices, schools).
- **Weather Conditions:** While durable, prolonged exposure to extreme weather conditions (e.g., severe storms, high winds) may reduce the flag's lifespan. Consider bringing the flag indoors during such conditions.
- **Visibility:** Position the flag in a location where it can be clearly seen and where it has sufficient space to unfurl and wave freely.



Image: The flag displayed on the exterior of a house, demonstrating a common outdoor installation.



Image: The flag flying from a flagpole on the stern of a boat, illustrating its versatility for various display environments.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and extend the life of your flag.

- **Cleaning:** The flag can be machine washed or hand washed. Use cold water and a mild detergent.
- **Bleaching:** Do not bleach the flag, as this can damage the fabric and fade the colors.
- **Drying:** Air dry the flag or tumble dry on a low heat setting. Avoid high heat to prevent shrinkage or damage to the polyester fabric.
- **Storage:** When not in use, fold the flag neatly and store it in a dry, cool place away from direct sunlight to prevent premature fading.

Premium Material

Made From Heavy Duty Fade & Wind Resistant Polyester
Perfect for Outdoor Use in Any Weather.



Image: A detailed view of the flag's polyester fabric, highlighting its texture and quality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Flag appears faded or dull.	Prolonged exposure to direct sunlight or harsh weather. Incorrect washing methods.	Ensure proper washing instructions are followed (no bleach). Consider rotating flags or bringing indoors during extreme weather to extend vibrancy.
Flag is torn or damaged.	Exposure to strong winds, sharp objects, or improper handling.	Inspect mounting area for sharp edges. Bring flag indoors during severe weather. Damage from wear and tear is not typically covered by warranty.
Grommets are loose or detached.	Excessive force during installation or strong winds.	Ensure flag is securely attached without excessive tension. If grommets are damaged, consider repair or replacement.

SPECIFICATIONS

- **Brand:** Generic
- **Model:** New Orleans Jazz & Heritage Festival Flag
- **Material:** 100% Polyester Fabric
- **Dimensions:** 3 feet (height) x 5 feet (width) / 90 cm x 152 cm
- **Weight:** Approximately 4 ounces
- **Attachment:** Two metal grommets
- **Printing:** Single-sided

CONTACT AND SUPPORT

For any questions or concerns regarding your New Orleans Jazz & Heritage Festival Flag, please contact customer support.

- **Customer Service:** Please refer to your purchase documentation or the retailer's website for specific contact information.
- **Response Time:** Inquiries are typically responded to within 24 hours.

