

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SMOTURE](#) /

› [SMOTURE VAC02 Cordless Vacuum Cleaner Instruction Manual](#)

SMOTURE VAC02

SMOTURE VAC02 Cordless Vacuum Cleaner Instruction Manual

Model: VAC02



Image: SMOTURE VAC02 Cordless Vacuum Cleaner, fully assembled and ready for use.

INTRODUCTION

This manual provides instructions for the safe and efficient operation and maintenance of your SMOTURE VAC02 Cordless Vacuum Cleaner. Please read thoroughly before use to ensure optimal performance and longevity of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space where vapors are given off from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.

PACKAGE CONTENTS

- 600W 50KPA Cordless Vacuum Main Body (Main Motor & Canister & HEPA Filter & Sponge Filter & stainless steel filter & Handle)
- An Extra HEPA Filter & Sponge
- Aromatherapy Tablets x 2
- A Crevice Tool & Dusting Brush & Mini Cleaning Tool
- A Battery & Charger
- Electric Floor Brush and Anti-tangle Roller
- A Wall-mounted Charging Dock
- An Adjustable Tube
- A Quick User Manual

600W

Motor sin Escobillas

50KPA

Succión Potente



Image: All parts included with the SMOTURE VAC02 Cordless Vacuum Cleaner, laid out on a surface.

SETUP

Assembly

The SMOTURE VAC02 is designed for easy assembly. Components click securely into place.

1. Attach the main vacuum body to the adjustable tube.
2. Select the desired cleaning head (e.g., Electric Floor Brush) and attach it to the adjustable tube.

3. Ensure the battery is fully charged before first use.



Image: The SMOTURE VAC02 Cordless Vacuum Cleaner fully assembled with the main body, adjustable tube, and electric floor brush.

Charging the Battery

The vacuum cleaner is powered by a removable battery.

- **Direct Charging:** Connect the charger directly to the battery pack.
- **Wall-Mounted Charging:** Install the provided wall-mounted charging dock. Securely place the vacuum cleaner onto the dock. The battery will charge while docked.

- A full charge typically takes approximately 4 hours.

Soporte Integrado de Carga en Pared

Carga y almacenamiento 2 en 1



Image: The SMOTURE VAC02 Cordless Vacuum Cleaner docked in its wall-mounted charging station, illustrating the 2-in-1 charging and storage solution.

OPERATING INSTRUCTIONS

Power On/Off and Suction Modes

To power on the vacuum, pull the trigger. The LED screen will display battery life and current mode. To change suction modes, press the mode button on the LED screen. Available modes include:

- **Eco Mode:** For light cleaning and extended battery life (up to 65 minutes).
- **Mid Mode:** For moderate cleaning tasks.
- **Max Mode:** For powerful suction on stubborn dirt.
- **Auto Mode:** The vacuum intelligently detects the floor type (hard floor, carpet) and adjusts suction power automatically.



Image: Close-up of the vacuum's LED screen displaying battery level and selectable suction modes (Eco, Mid, Max, Auto).

Using Attachments

The SMOTURE VAC02 comes with various attachments for different cleaning needs.

- **Electric Floor Brush with GreenEye Technology:** Ideal for all floor types. The GreenEye technology illuminates dust and debris, and in Auto mode, it adjusts suction based on surface.
- **Crevice Tool:** For reaching tight spaces, corners, and edges (e.g., in cars or between furniture).
- **Dusting Brush (2-in-1):** Features fine bristles for delicate surfaces like keyboards or upholstery.
- **Mattress Cleaning Tool:** Designed to remove dust and pet hair from mattresses and upholstered furniture.
- **Flexible Hose:** Extends reach for cleaning awkward areas without moving the main unit.



Image: The vacuum's main electric floor brush with green LED lights illuminating debris on a wooden floor, demonstrating the GreenEye technology.



Image: The crevice tool attachment, designed for reaching narrow and tight spaces.



Image: The 2-in-1 dusting brush attachment, featuring bristles for delicate cleaning.

Cepillo Rodante Anti-enredos

Sin enredos, limpieza fácil



Image: The mattress cleaning tool attachment, specifically designed for deep cleaning upholstery and mattresses.

Self-Standing Feature

The vacuum cleaner is designed to stand upright on its own, allowing for convenient storage or temporary pauses during cleaning without needing to lean it against a wall.

Función de Autoporte

Autonomía fácil, libera tus manos



Image: The SMOTURE VAC02 Cordless Vacuum Cleaner standing upright on its own in a living room setting, showcasing its self-standing capability.

MAINTENANCE

Emptying the Dustbin

To empty the dustbin, position the vacuum over a trash receptacle. Press the red release button on the dustbin to open the bottom flap and release collected debris.

For thorough cleaning, the entire dustbin can be detached by pressing a separate release button near the

handle, allowing for washing.

Soporte Integrado de Carga en Pared

Carga y almacenamiento 2 en 1

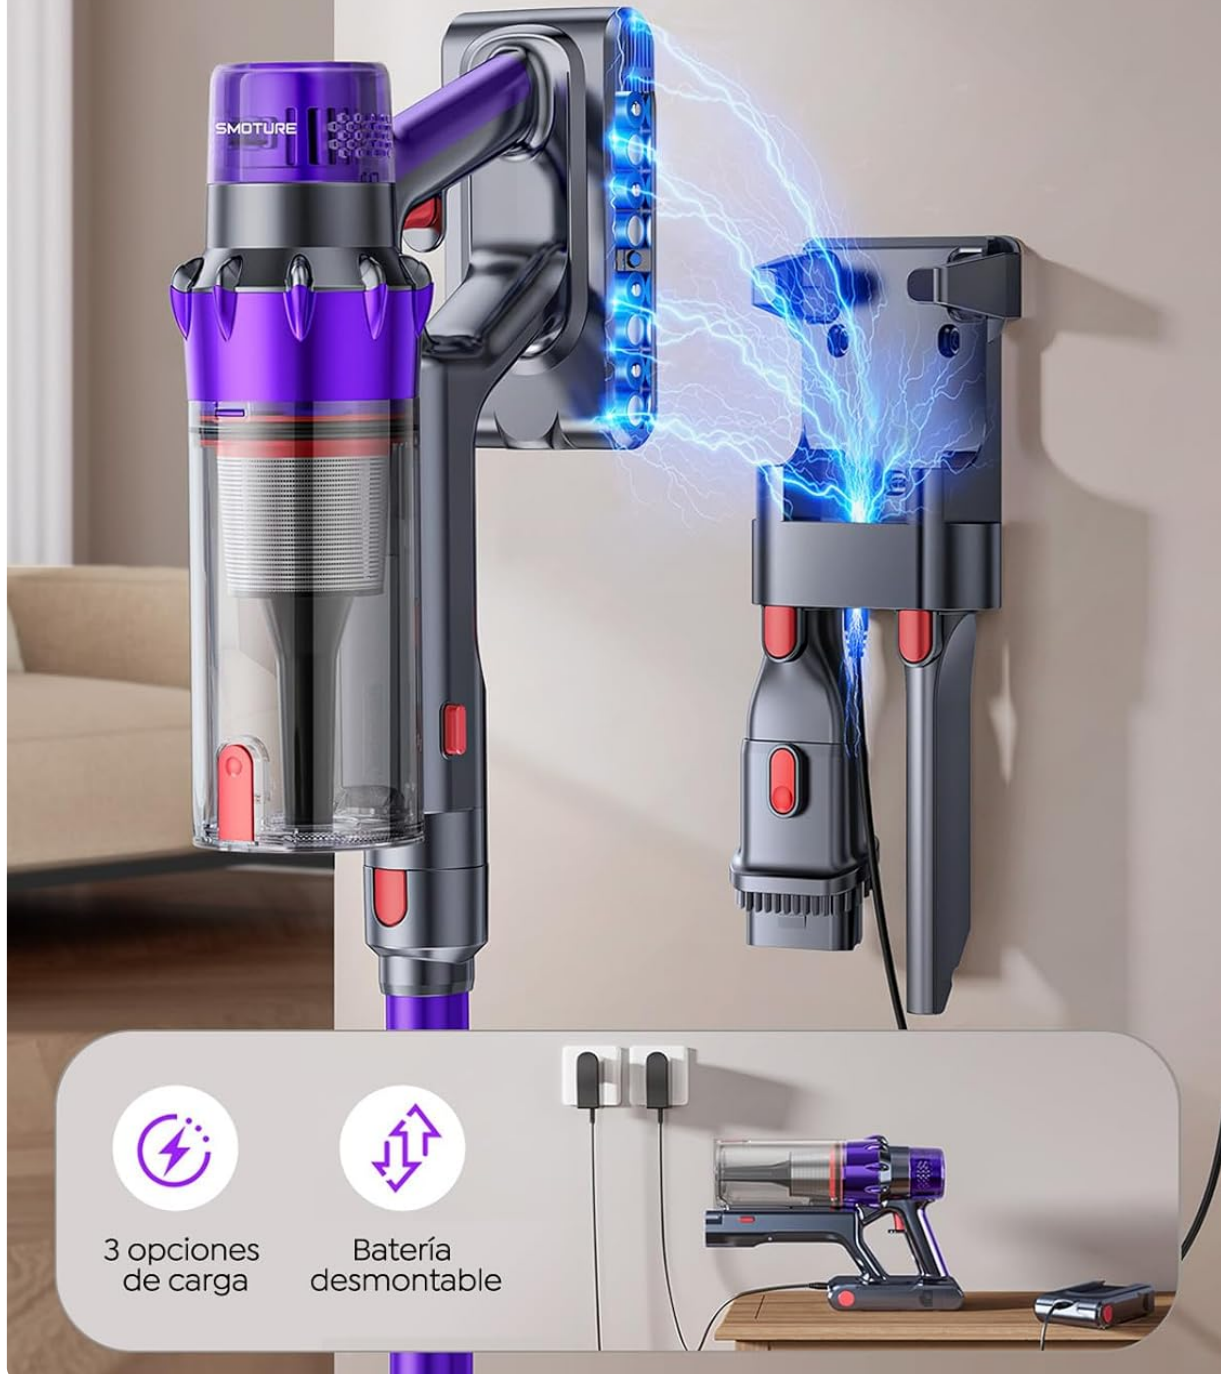


Image: The transparent dustbin of the SMOTURE VAC02, showing collected debris and the release button.

Cleaning and Replacing Filters

The vacuum uses a HEPA filter, sponge filter, and stainless steel filter. Regular cleaning ensures optimal performance.

1. Detach the dustbin from the main unit.
2. Remove the HEPA and sponge filters.
3. Rinse filters under running water until clean.

4. Allow filters to air dry completely for at least 24 hours before reinserting.
5. Replace filters as needed (an extra HEPA filter and sponge are included).



Image: The removable HEPA filter, an essential component for trapping fine dust and allergens.

Cleaning the Roller Brush

The electric floor brush features an anti-tangle roller. If hair or debris becomes tangled, use the provided mini cleaning tool to safely cut and remove it.



Image: The roller brush from the electric floor head, designed with anti-tangle features.

Aromatherapy Tablets

Insert the provided aromatherapy tablets into the designated slot to release a fresh scent during vacuuming.

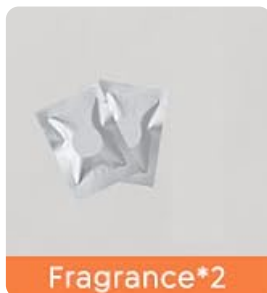


Image: Two aromatherapy tablets, used to add a fresh scent during vacuuming.

TROUBLESHOOTING

Blockage Alerts

The large LED screen will display a blockage fault if the cordless vacuum is clogged.

- Check the adjustable tube, floor brush, and dustbin for any obstructions.
- Clear any blockages to restore proper suction.

Reduced Suction

- Check if the dustbin is full and empty it.

- Inspect and clean all filters (HEPA, sponge, stainless steel).
- Ensure all connections are secure and there are no leaks.
- Verify the roller brush is free of tangled hair or debris.

Short Battery Life

- Ensure the battery is fully charged (approx. 4 hours).
- Consider using Eco mode for longer runtime.
- Battery performance may decrease over time with prolonged use.

SPECIFICATIONS

Feature	Detail
Brand	SMOTURE
Model Name	VAC02
Special Feature	Cordless
Filter Type	HEPA Filter
Capacity	1.5 Liters
Wattage	600 watts
Maximum Suction	50 KPA
Recommended Uses	Home, Carpet, Hard Floor, Office
Form Factor	Stick
Color	Purple
Product Dimensions	11"L x 10"W x 45"H
Noise Level	64 Decibels
Battery Life	Up to 65 minutes
Power Levels	2 (plus Auto mode)
Item Weight	6.05 pounds
Power Source	Battery Powered

WARRANTY & SUPPORT

This product includes 24 Months of Protection. For any inquiries or support, please contact SMOTURE customer service.

Manufacturer Contact Information: SMOTURE

PRODUCT VIDEO OVERVIEW

Your browser does not support the video tag.

Video: A short overview of the SMOTURE VAC02 Cordless Vacuum Cleaner, demonstrating its features and performance.