

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI 25.6" Extra Wide Armless Rocking Chair User Manual

VINGLI VINGLI 25.6" Extra Wide Nursery Armless Rocking Chair

VINGLI 25.6" Extra Wide Armless Rocking Chair User Manual

Model: VINGLI 25.6" Extra Wide Nursery Armless Rocking Chair

INTRODUCTION

Thank you for choosing the VINGLI 25.6" Extra Wide Armless Rocking Chair. This manual provides important information regarding the assembly, operation, maintenance, and safety of your new rocking chair. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

To ensure safe operation and prevent injury, please observe the following safety guidelines:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 330 lbs (150 kg).
- **Assembly:** Assemble the chair strictly according to the instructions. Ensure all parts are securely fastened before use.
- **Placement:** Place the chair on a flat, stable surface. Avoid placing it near open flames, heat sources, or in direct sunlight for prolonged periods.
- **Children:** Keep children away from the chair during assembly. Supervise children when they are near or using the chair.
- **Rocking Motion:** Rock gently. Excessive or aggressive rocking may cause instability or damage.
- **Maintenance:** Regularly inspect the chair for loose parts or damage. Do not use if damaged.
- **Floor Protection:** The chair is equipped with cotton pads on the rockers to protect floors. Ensure these pads are intact before use.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Chair Seat and Backrest Assembly (1)
- Metal Frame Legs (2)
- Wooden Rocker Bases (2)
- Removable Plush Pillow (1)
- Hardware Pack (Bolts, Washers, Allen Wrench) (1)
- Instruction Manual (1)

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your VINGLI rocking chair. It is recommended to have two people for assembly.

1. **Step 1: Prepare Components**

Unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify all parts against the package contents list.

2. **Step 2: Attach Metal Frame Legs to Seat**

Carefully align the pre-drilled holes on the metal frame legs with the corresponding attachment points on the underside of the chair seat. Insert the provided bolts and washers, and hand-tighten them using the Allen wrench. Do not fully tighten yet.



Image: The VINGLI rocking chair showing the assembled seat and metal frame legs. This image illustrates the general structure after attaching the legs to the seat.

3. **Step 3: Attach Wooden Rocker Bases**

Attach the wooden rocker bases to the bottom of the metal frame legs. Ensure the cotton pads on the rockers face downwards to protect your floor. Secure with the remaining bolts and washers, hand-tightening them.



Image: A detailed view of the wooden rocker base connected to the metal leg, highlighting the attachment points.



Image: A close-up of the cotton pad located on the bottom of the wooden rocker, designed to prevent floor scratches.

4. **Step 4: Fully Tighten All Bolts**

Once all components are aligned and hand-tightened, carefully place the chair upright. Then, fully tighten all bolts using the Allen wrench. Ensure all connections are firm and secure.

5. **Step 5: Place Pillow**

Position the removable plush pillow on the chair for added comfort and lumbar support.



Image: A detailed view of the soft, removable pillow placed on the chair, ready for use.

OPERATING INSTRUCTIONS

The VINGLI rocking chair is designed for comfortable relaxation and gentle rocking. Follow these guidelines for optimal use:

- **Sitting:** Sit centrally on the chair, ensuring your weight is evenly distributed. The 25.6" wide seat allows for various comfortable positions, including cross-legged sitting.
- **Rocking Motion:** Initiate rocking with a gentle push of your feet. The chair provides a smooth 95°-115° rocking motion. Avoid sudden or forceful movements.
- **Pillow Use:** Use the removable plush pillow for additional lumbar support or to adjust your seating angle for activities like nursing or reading.
- **Armless Design:** The armless design offers freedom of movement and eliminates spatial limits, allowing for easy entry and exit, and comfortable positioning for nursing.



Image: A hand pressing into the soft, fluffy fabric of the chair, illustrating the plush upholstery.



Image: Another view of a hand pressing into the chair's cushion, emphasizing the comfortable depth and softness of the seat.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your rocking chair.

- **Cleaning Fabric:** For general cleaning, gently vacuum the fluffy fleece fabric to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner specifically designed for upholstery, testing on an inconspicuous area first. Do not saturate the fabric.
- **Cleaning Frame:** Wipe the metal frame and wooden rockers with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Pillow Care:** The removable plush pillow can be spot cleaned as needed. Refer to any care labels on the pillow for specific washing instructions.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading of the fabric and damage to the

wood.

- **Floor Pads:** Ensure the cotton pads on the rocker bases are intact and free from wear to continue protecting your floors.

TROUBLESHOOTING

If you encounter any issues with your rocking chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Loose bolts or uneven floor surface.	Ensure all assembly bolts are fully tightened. Move the chair to a flat, even surface.
Squeaking noise during rocking.	Loose connections or friction between parts.	Check and tighten all bolts. Apply a small amount of silicone lubricant to metal-to-metal contact points if necessary, avoiding contact with fabric.
Floor scratches.	Damaged or missing floor protection pads.	Inspect the cotton pads on the rocker bases. Replace if worn or missing. Ensure the chair is not dragged across the floor.
Fabric appears flattened or matted.	Prolonged pressure or lack of fluffing.	Gently brush the fabric with a soft brush or hand to restore fluffiness. Regular vacuuming can also help.

If the problem persists or you encounter an issue not listed here, please contact VINGLI customer support for assistance.

SPECIFICATIONS

Brand	VINGLI
Model	25.6" Extra Wide Nursery Armless Rocking Chair
Color (as reviewed)	Fluffy-chocolate
Item Dimensions (D x W x H)	33.7" x 25.6" x 29.5" (85.6 cm x 65 cm x 74.9 cm)
Seat Dimensions (D x W x H)	21.3" x 25.6" x 19.7" (54.1 cm x 65 cm x 50 cm)
Backrest Height	15.7" (39.9 cm)
Weight Capacity	330 lbs (150 kg)
Item Weight	26.8 lbs (12.16 kg)
Fabric Material	Fluffy Fleece
Base Material	Solid Wood, Metal
Rocking Angle	95°-115°
Special Features	25.6" Wide Seat, Removable Plush Pillow, Floor Protection Pads

WARRANTY INFORMATION

VINGLI products are manufactured with quality and durability in mind. While specific warranty details are not provided in this manual, please retain your proof of purchase. For information regarding warranty coverage and claims, please contact VINGLI customer support.

Optional protection plans may be available for purchase separately. Refer to your retailer for details on extended protection plans.

CUSTOMER SUPPORT

For any questions, assistance with assembly, troubleshooting, or warranty inquiries, please contact VINGLI customer support through the retailer where the product was purchased or visit the official VINGLI store online.

VINGLI Official Store: [Visit the VINGLI Store on Amazon](#)

