

[Manuals.plus](#) /

> [Upstreman](#) /

> Upstreman 7.0 Cu.Ft Convertible Upright Freezer Instruction Manual

Upstreman UP--70

Upstreman 7.0 Cu.Ft Convertible Upright Freezer (Model UP--70) Instruction Manual

Brand: Upstreman

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Upstreman 7.0 Cu.Ft Convertible Upright Freezer, Model UP--70. Please read it thoroughly before installation and use, and retain it for future reference.





Image: Front view of the Upstreaman 7.0 Cu.Ft Upright Freezer.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Ensure the appliance is properly grounded. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Keep ventilation openings clear of obstruction.

SETUP

1. Unpacking and Placement

Remove all packaging materials. Place the freezer on a firm, level surface away from direct sunlight and heat sources. Allow adequate space around the unit for proper ventilation (at least 4 inches on sides and back, 8 inches on top).

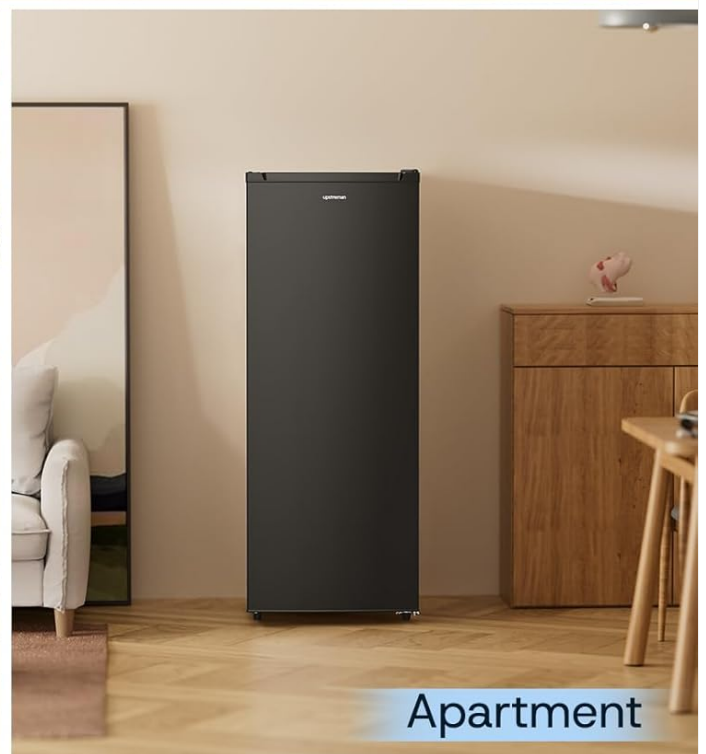 


Image: Examples of freezer placement in a garage, kitchen, and apartment, highlighting its versatility.

EASY TO MOVE




Image: The freezer demonstrating ease of movement with integrated wheels.

2. Leveling the Appliance

Adjust the leveling feet at the bottom of the freezer to ensure it is stable and level. This prevents vibrations and ensures proper door sealing.

INTELLIGENT DESIGN

 
ADJUSTABLE SHELVES

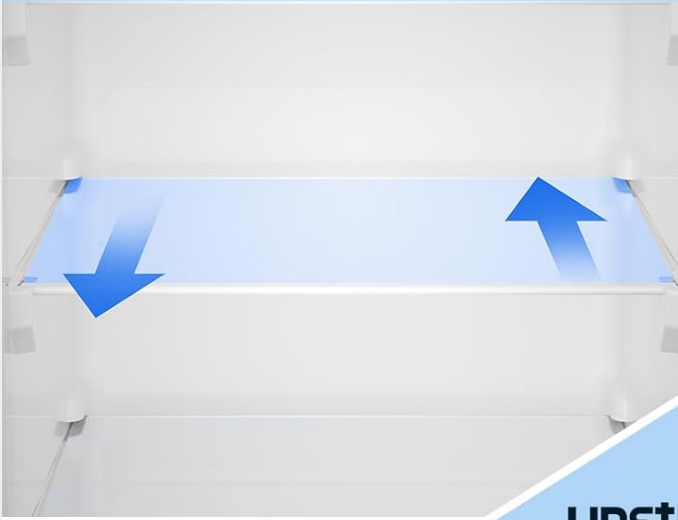


RECESSED HANDLE



 upstreman

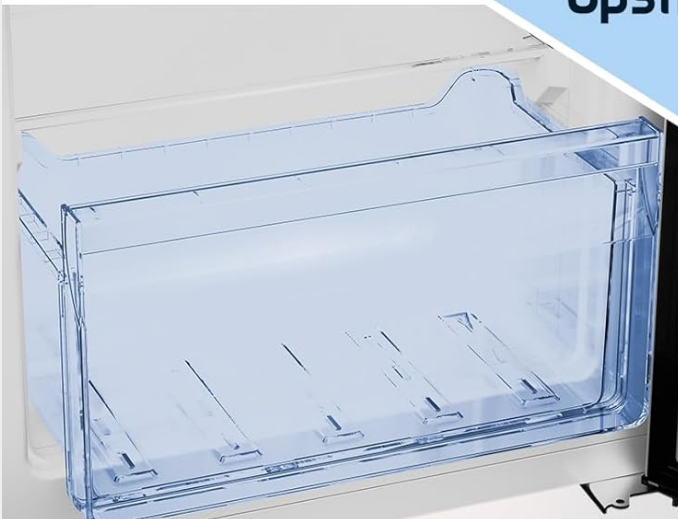

CRISPER DRAWER

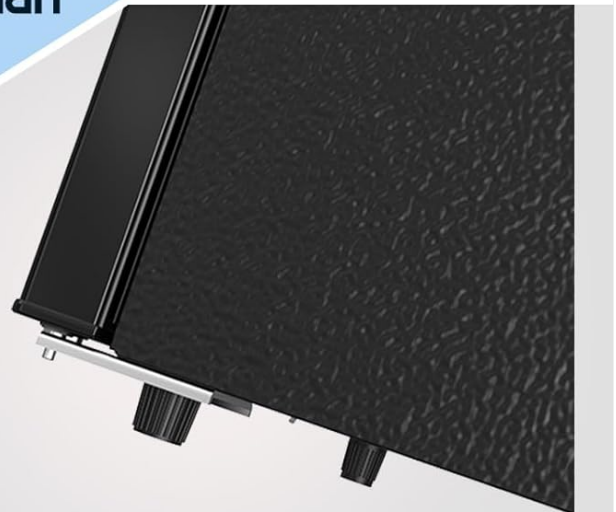 

ADJUSTABLE LEG

Image: Detailed view of the adjustable leg for leveling the freezer.

3. Door Reversal

The door is reversible and can be adjusted to open from either the left or right side to suit your space requirements. Refer to the detailed instructions in the full manual for this procedure.

REVERSIBLE DOOR



Image: Diagram illustrating the reversible door feature of the freezer.

4. Initial Power-On

After placement and leveling, wait at least 2-4 hours before plugging the unit into a power outlet. This allows the refrigerant to settle. Set the temperature control to the desired setting.

OPERATING INSTRUCTIONS

1. Temperature Control (Convertible Function)

This appliance features a convertible temperature control, allowing it to function as either a freezer or a refrigerator. Use the control dial to select your desired mode and temperature range:

- **Freezer Mode:** -7.60°F to 6.80°F (-22°C to -14°C)
- **Refrigerator Mode:** 37.94°F to 46.94°F (3.3°C to 8.3°C)

CONVERTIBLE DESIGN



Image: Visual representation of the convertible design, displaying temperature settings for both refrigerator and freezer modes.

2. Adjustable Shelves and Crisper Drawer

The freezer includes 5 glass shelves and a crisper drawer. The shelves can be removed or repositioned to accommodate items of various sizes, such as pizza boxes or tall bottles. The crisper drawer is ideal for keeping fruits and vegetables fresh when in refrigerator mode.



Image: Interior of the freezer, showcasing the adjustable shelves and crisper drawer filled with various food items.

3. Ice Tray

An ice tray is included for convenient ice production.

MAINTENANCE

1. Cleaning

Regularly clean the interior and exterior of the freezer with a mild detergent and warm water. Ensure the unit is unplugged before cleaning. Do not use abrasive cleaners or sharp objects.

2. Defrosting

This is a manual defrost unit. When frost accumulates to about 1/4 inch (6 mm) thickness, defrost the unit. A removable defrost tool is included. Unplug the unit, remove all food, and allow the frost to melt naturally. Do not use electrical heaters or sharp instruments to speed up defrosting.

3. Energy Efficiency

To maximize energy efficiency, ensure the door seal is tight, avoid frequent door openings, and keep the condenser coils clean.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Freezer does not operate	Not plugged in; circuit breaker tripped; temperature control set to "OFF"	Ensure plug is secure; reset circuit breaker; adjust temperature control
Temperature is not cold enough	Door opened too frequently; large amount of warm food added; poor ventilation; temperature control set too high	Minimize door openings; allow food to cool before storing; ensure proper clearance; adjust temperature control to a colder setting
Excessive frost buildup	Door not sealed properly; high humidity environment	Check door gasket for damage; ensure door closes completely; defrost as needed

SPECIFICATIONS

Feature	Detail
Brand	Upstreman
Model	UP--70
Capacity	7.0 Cubic Feet
Dimensions (W x D x H)	21.3" x 22.8" x 56.0"
Convertible Temperature	Freezer: -7.60°F to 6.80°F; Refrigerator: 37.94°F to 46.94°F
Shelves	5 Glass Shelves
Door Hinge	Reversible
Annual Energy Consumption	7056 Kilowatt Hours Per Year (approx. \$36/year)
Included Components	Internal Handle, Ice Tray, Removable Defrost Tool

LARGE STORAGE CAPACITY



Image: The freezer with its height and width dimensions clearly marked.

OFFICIAL PRODUCT VIDEOS

Your browser does not support the video tag.

Video: An overview of the Upstreman Stand-Up Deep Freezer, showcasing its features and design.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Upstreman website. Keep your purchase receipt for warranty claims.

