

[manuals.plus](#) /› [Azeyou](#) /› [Azeyou F27 Mini Tablet 8.7-inch User Manual](#)

Azeyou F27 Tablet

Azeyou F27 Mini Tablet 8.7-inch User Manual

Model: F27 Tablet

1. INTRODUCTION

Welcome to your new Azeyou F27 Mini Tablet. This device is designed to provide a versatile and portable computing experience, featuring an 8.7-inch IPS HD display, the Android 15 operating system, and robust connectivity options. This manual will guide you through the setup, operation, and maintenance of your tablet to ensure optimal performance and user satisfaction.



Image: Front and back view of the Azeou F27 Mini Tablet, highlighting its compact design and camera placement.

2. WHAT'S IN THE Box

Upon unboxing your Azeou F27 Mini Tablet, please verify that all the following items are included:

- Azeou F27 Mini Tablet
- Charger
- USB Type-C Charging Cable
- User Manual



Image: Diagram illustrating the tablet, charger, USB Type-C cable, and user manual as included accessories.

3. DEVICE LAYOUT

Familiarize yourself with the physical components and ports of your Azeyou F27 Mini Tablet.



Image: Detailed diagram of the tablet's sides and top, indicating the location of the 3.5mm Headphone Jack, Power Button, Volume Buttons, Rear Camera, Type-C Port, Micro SD Card Slot, Front Camera, and Speakers.

- **Power Button:** Located on the side, used to turn the tablet on/off or wake/sleep the screen.
- **Volume Buttons:** Adjust audio output level.
- **3.5mm Headphone Jack:** For connecting wired headphones or external audio devices.
- **Type-C Port:** For charging the tablet and data transfer.
- **Micro SD Card Slot:** Expand storage capacity up to 1TB.
- **Front Camera:** For video calls and selfies (2MP).
- **Rear Camera:** For taking photos and videos (8MP).
- **Speakers:** Provide audio output.

4. SETUP

4.1. Charging the Tablet

Before first use, it is recommended to fully charge your tablet.

1. Connect the USB Type-C cable to the tablet's Type-C port.
2. Connect the other end of the cable to the provided charger.

3. Plug the charger into a power outlet.
4. The battery icon on the screen will indicate charging status.



Image: Illustration of the tablet's internal 5000mAh battery and its charging capabilities, indicating 8 hours runtime and fast Type-C charging.

4.2. Power On/Off

- **To Power On:** Press and hold the Power button until the Azeyou logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off".
- **To Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

4.3. Initial Setup Wizard

The first time you power on your tablet, you will be guided through an initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account (or create a new one).
- Review and accept terms and conditions.
- Set up screen lock (PIN, pattern, password).

5. OPERATING INSTRUCTIONS

5.1. Basic Navigation

Your tablet uses touch gestures for navigation:

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.

5.2. Wi-Fi Connectivity

Connect to the internet via Wi-Fi 6 for fast and stable browsing.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

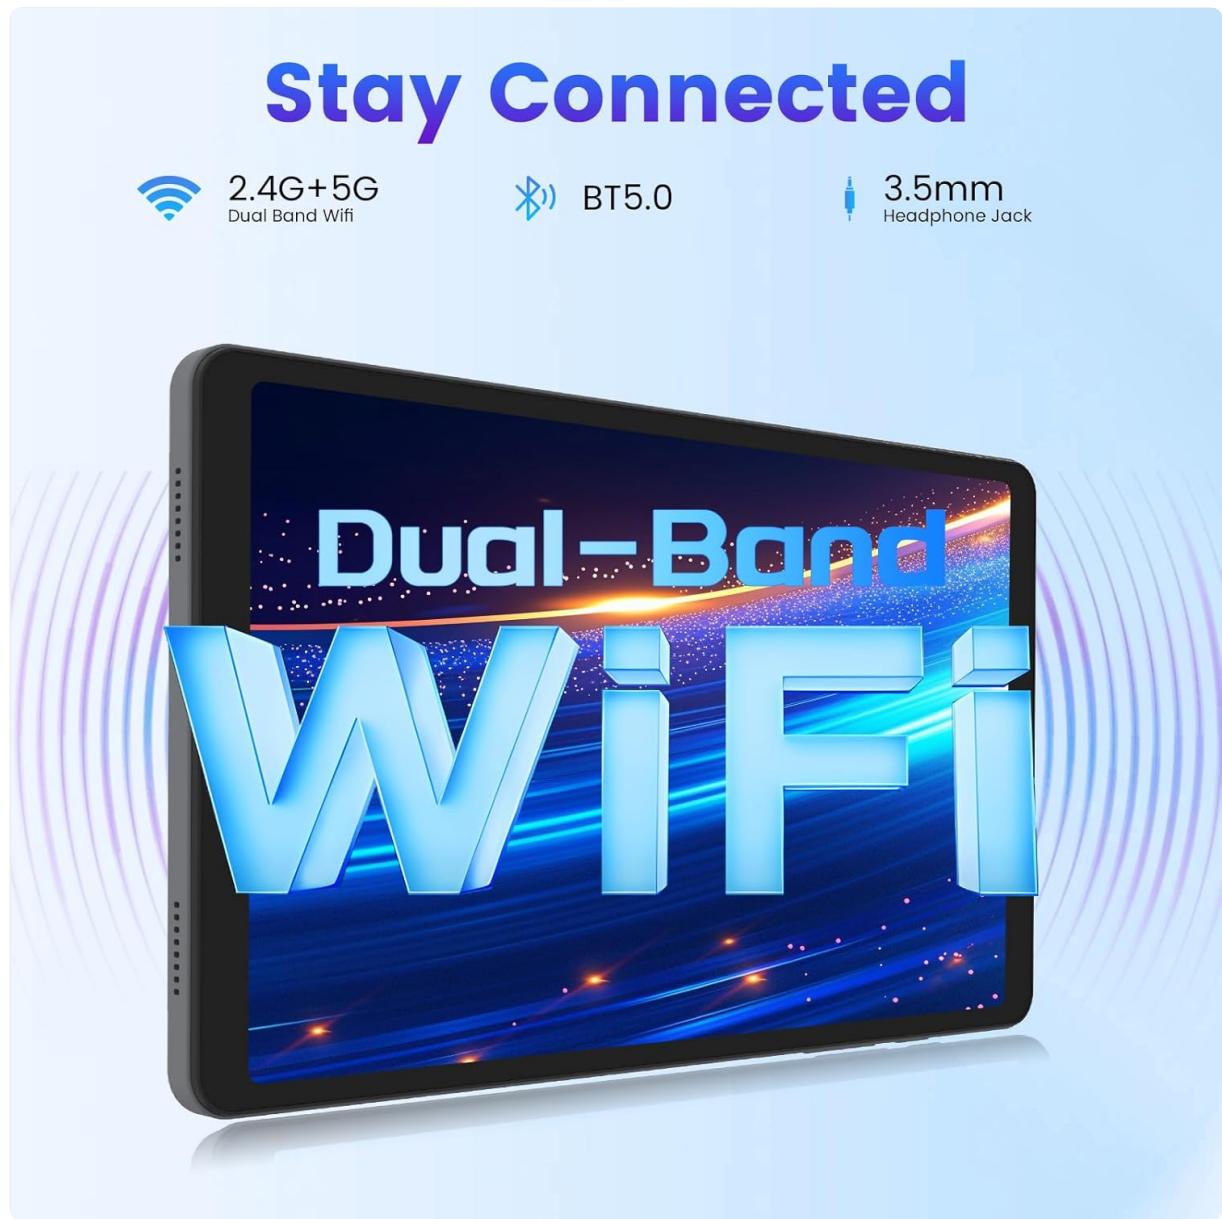


Image: The tablet screen showing icons for 2.4G+5G Dual Band Wi-Fi, Bluetooth 5.0, and a 3.5mm Headphone Jack, emphasizing

connectivity features.

5.3. Bluetooth Pairing

Connect wireless accessories like headphones or keyboards using Bluetooth 5.0.

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your accessory is in pairing mode.
4. Select the accessory from the list of available devices to pair.

5.4. Camera Usage

Capture photos and videos using the tablet's cameras.

- Open the **Camera** app.
- Tap the shutter button to take a photo.
- Switch between front (2MP) and rear (8MP) cameras using the camera switch icon.
- Select video mode to record videos.

Everyday Moments, Captured with Confidence



 8MP Rear Camera
for sharper snapshots



 2MP Front Camera
for reliable face-to-face connection



Image: Visual representation of the tablet's 8MP rear camera for sharper snapshots and 2MP front camera for reliable face-to-face connections, with example photos.

5.5. Storage Management

Your tablet comes with 64GB of internal storage and 11GB of RAM (3GB physical + 8GB expandable). You can expand storage further using a Micro SD card up to 1TB.

- To insert a Micro SD card, locate the card slot on the side of the tablet and gently push the card in until it clicks.
- Manage storage by going to **Settings > Storage**.



Image: The tablet screen showing numerous app icons, illustrating ample space for applications, photos, and videos with 11GB RAM, 64GB ROM, and 1TB expandable storage.

5.6. Parental Control

Android 15 includes parental control features to manage screen time and app access for children.

1. Go to **Settings > Digital Wellbeing & parental controls**.
2. Set up parental controls following the on-screen instructions.

Android 15 Operating System



Image: A visual overview of Android 15 operating system features, including Privacy Protection, GMS Certification, Parental Screen Usage Restrictions, Three-finger Screenshot, and Multitasking (Split Screen).

5.7. Widevine L1 Certification

The tablet supports Widevine L1, allowing you to stream high-definition content from platforms like Netflix, Prime Video, and Hulu.

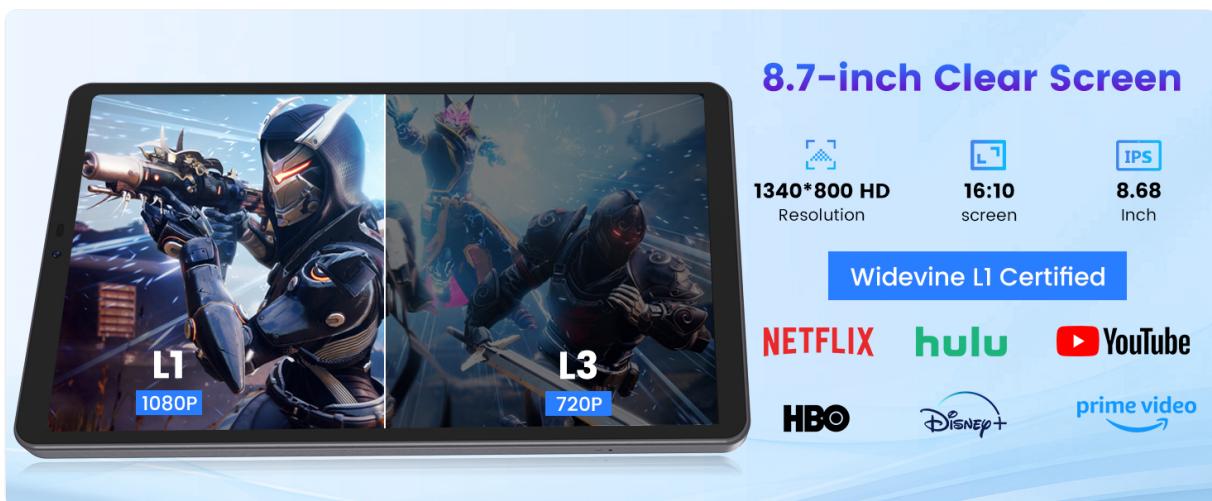


Image: The tablet screen showcasing its 8.7-inch HD display and Widevine L1 certification, indicating support for high-definition streaming on popular platforms.

5.8. GPS Navigation

Utilize the built-in GPS for navigation and location-based services.

- Ensure location services are enabled in **Settings > Location**.
- Use pre-installed map applications or download your preferred navigation app from the Google Play Store.

5.9. Google Play Store

Access millions of apps, games, movies, and books through the Google Play Store.

- Tap the **Play Store** icon on your home screen or app drawer.
- Sign in with your Google account to download content.

6. MAINTENANCE

6.1. Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.

- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

6.2. Software Updates

Keep your tablet's software up to date for improved performance, security, and new features.

- Go to **Settings > System > System update**.
- Check for available updates and follow the on-screen instructions to install them.

6.3. Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided charger or a certified compatible charger.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions.

7.1. Tablet Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for 10-15 seconds to perform a forced restart.

7.2. Wi-Fi Connection Issues

- Toggle Wi-Fi off and on in Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect by re-entering the password.
- Ensure you are within range of the Wi-Fi signal.

7.3. Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache).
- Uninstall and reinstall the app.
- Ensure your tablet's software is up to date.

7.4. Slow Performance

- Close unused background apps.
- Clear cache for frequently used apps.
- Free up storage space by deleting unnecessary files or apps.
- Restart the tablet periodically.

8. SPECIFICATIONS

Detailed technical specifications for the Azeyou F27 Mini Tablet.

Feature	Specification
Model Name	F27 Tablet

Brand	Azeyou
Operating System	Android 15
Screen Size	8.7 Inches
Display Resolution	1340 Pixels (Max Screen Resolution)
Processor	Quad-Core, up to 2 GHz (Unisoc)
RAM	11 GB (3GB physical + 8GB expandable)
Internal Storage	64 GB
Expandable Storage	Up to 1 TB via Micro SD card
Battery Capacity	5000 mAh Lithium Polymer
Average Battery Life	8 Hours
Connectivity	Wi-Fi 6 (Dual-band), Bluetooth 5.0, GPS
Cameras	8MP Rear, 2MP Front
Ports	Type-C, 3.5mm Headphone Jack
Dimensions (LxWxH)	8.35 x 4.92 x 0.3 inches
Item Weight	1.39 pounds
Special Features	GMS Certified, Widevine L1, Parental Control

9. WARRANTY AND SUPPORT

Your Azeyou F27 Mini Tablet comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official Azeyou website.

For technical support, troubleshooting assistance, or any other inquiries, please contact Azeyou customer service.

- Online Support:** Visit the [Azeyou Store on Amazon](#) for product information and support resources.
- Email Support:** Refer to your product packaging or the Azeyou website for contact email addresses.