

[Manuals.plus](#) /

› [Midea](#) /

› Midea WQP14W7703MKSA Integrated Dishwasher User Manual

Midea WQP14W7703MKSA

Midea WQP14W7703MKSA Integrated Dishwasher User Manual

Model: WQP14W7703MKSA

1. INTRODUCTION

Thank you for choosing the Midea WQP14W7703MKSA Integrated Dishwasher. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read it thoroughly before using the dishwasher to ensure optimal performance and longevity.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Keep this manual for future reference.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact qualified service personnel.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Sharp items should be loaded with points down to prevent injury.
- Do not overload the dishwasher.

3. PRODUCT OVERVIEW

The Midea WQP14W7703MKSA is an integrated dishwasher designed for efficient cleaning of daily dishes, glassware, pots, and pans. It features 14 place settings and 9 wash programs to suit various cleaning needs.

Key Features:

- **Capacity:** 14 Place Settings
- **Programs:** 9 Wash Programs
- **Noise Level:** 44 dB
- **Flexibility:** Adjustable Upper Basket

- **Energy Consumption:** 127 kWh/year

Internal Components:



Figure 3.1: Interior view of the Midea WQP14W7703MKSA Integrated Dishwasher with empty racks, showing the adjustable upper basket and lower basket.

This image displays the interior of the dishwasher, highlighting the upper and lower racks, cutlery basket, and spray arms. The upper basket can be adjusted to accommodate taller items in the lower basket.

Control Panel:



Figure 3.2: Close-up of the Midea WQP14W7703MKSA dishwasher control panel. It features buttons for power, program selection, delay start, and other functions, along with indicator lights.

The control panel, located on the top edge of the door, allows you to select wash programs, set delay timers, and monitor the dishwasher's status. Refer to the 'Operating Instructions' section for detailed use of each button and indicator.

4. SETUP

Proper installation is crucial for the safe and efficient operation of your dishwasher. It is recommended that installation be performed by a qualified technician.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any shipping damage. Report any damage immediately to your retailer.
- Keep packaging materials out of reach of children.

4.2 Placement and Leveling

Position the dishwasher in its intended integrated cabinet space. Ensure the appliance is level to prevent water leakage and ensure proper door closure. Adjust the leveling feet as necessary.

4.3 Water and Electrical Connections



Figure 4.1: Rear and side view of the Midea WQP14W7703MKSA dishwasher, illustrating the points for water inlet, drain hose, and electrical connection.

This image shows the rear of the dishwasher, indicating where the water inlet hose, drain hose, and electrical cable are connected. Ensure all connections are secure and free from leaks.

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Connect the drain hose to a suitable drain pipe, ensuring it is not kinked or obstructed.
- Plug the power cord into a properly grounded electrical outlet. Do not use extension cords.

4.4 Filling Salt and Rinse Aid Dispensers

Before first use, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. These are essential for optimal cleaning and drying results, especially in hard water areas.

- **Salt Dispenser:** Unscrew the cap at the bottom of the dishwasher tub and fill with dishwasher salt using the provided funnel. Replace the cap securely.
- **Rinse Aid Dispenser:** Open the dispenser cover on the inner door and fill with rinse aid until the indicator reaches the maximum level. Close the cover firmly.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and efficient dishwashing.

5.1 Loading Dishes



Figure 5.1: The Midea WQP14W7703MKSA dishwasher loaded with dishes, demonstrating proper placement for effective cleaning. Note the arrangement of plates, bowls, and cups.

This image illustrates a properly loaded dishwasher, showing how to arrange plates, bowls, and cups to ensure water and detergent reach all surfaces. The adjustable upper basket allows for flexible loading.

- Scrape off large food particles from dishes.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure dishes do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for most items, but sharp knives with points down for safety.

5.2 Adding Detergent

Open the detergent dispenser on the inner door and add the appropriate amount of dishwasher detergent according to the program selected and the soil level of your dishes. Close the dispenser cover firmly.

5.3 Program Selection and Start

1. Close the dishwasher door.
2. Press the Power button to turn on the appliance.
3. Select your desired wash program using the program selection button. The available programs include options for intensive, normal, eco, glass, and quick washes.
4. If desired, select additional functions like delay start.
5. Press the Start button to begin the cycle.

5.4 Interrupting or Canceling a Cycle

To interrupt a cycle, carefully open the door slightly to stop the operation. To cancel, press and hold the program button for a few seconds until the indicators reset.

5.5 End of Cycle

Once the wash cycle is complete, the dishwasher will signal with an audible alert or an indicator light. Open the door slightly to allow steam to escape before unloading the dishes. Wait a few minutes for dishes to cool down before handling.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

6.1 Cleaning Filters

The filter system should be checked and cleaned regularly (e.g., weekly) to prevent blockages and ensure effective cleaning.

1. Twist the cylindrical filter counter-clockwise and lift it out.
2. Remove the fine filter and the coarse filter.
3. Rinse all filters under running water to remove food particles. Use a soft brush if necessary.
4. Reassemble the filters in reverse order, ensuring they are securely in place.

6.2 Cleaning Spray Arms

Check the spray arm nozzles for blockages. If clogged, remove the spray arms and clean the holes with a thin object like a toothpick. Rinse thoroughly and reattach.

6.3 Exterior and Interior Cleaning

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Interior:** Periodically run a dishwasher cleaning cycle with a specialized dishwasher cleaner to remove grease and limescale buildup.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown.	Check power connection; Ensure door is latched; Check household fuse/circuit breaker.

Problem	Possible Cause	Solution
Poor cleaning results	Improper loading; Insufficient detergent; Clogged spray arms/filters; Incorrect program.	Reload dishes correctly; Add more detergent; Clean spray arms/filters; Select appropriate program.
Water not draining	Clogged drain hose/filter; Drain pump malfunction.	Clean filters; Check drain hose for kinks; Contact service if pump is faulty.
Excessive noise	Dishes rattling; Foreign object in pump; Dishwasher not level.	Rearrange dishes; Remove foreign objects; Level the appliance.

8. SPECIFICATIONS

Feature	Detail
Model Name	WQP14W7703MKSA
Brand	Midea
Installation Type	Integrated
Color	Silver
Product Dimensions (D x W x H)	84 cm x 59.8 cm x 89 cm
Product Weight	39.5 kg
Noise Level	44 dB
Place Settings	14
Number of Programs	9
Annual Energy Consumption	127 kWh
Special Feature	Adjustable Upper Basket
Recommended Uses	Daily dishes, glassware, pots, and pans

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Midea WQP14W7703MKSA Integrated Dishwasher comes with a manufacturer's warranty for **two years** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage caused by improper installation, misuse, neglect, unauthorized repairs, or normal wear and tear.

9.2 Customer Support

For technical assistance, service requests, or inquiries regarding your Midea dishwasher, please contact Midea customer support. Refer to the contact information provided with your purchase documentation or visit the official Midea website for your region.

When contacting support, please have your model number (WQP14W7703MKSA) and serial number ready.

© 2025 Midea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FG2XQ4QN>

More documents and user manuals: <https://manuals.plus/>